 





## SL toppsammanställning-SL top assembly

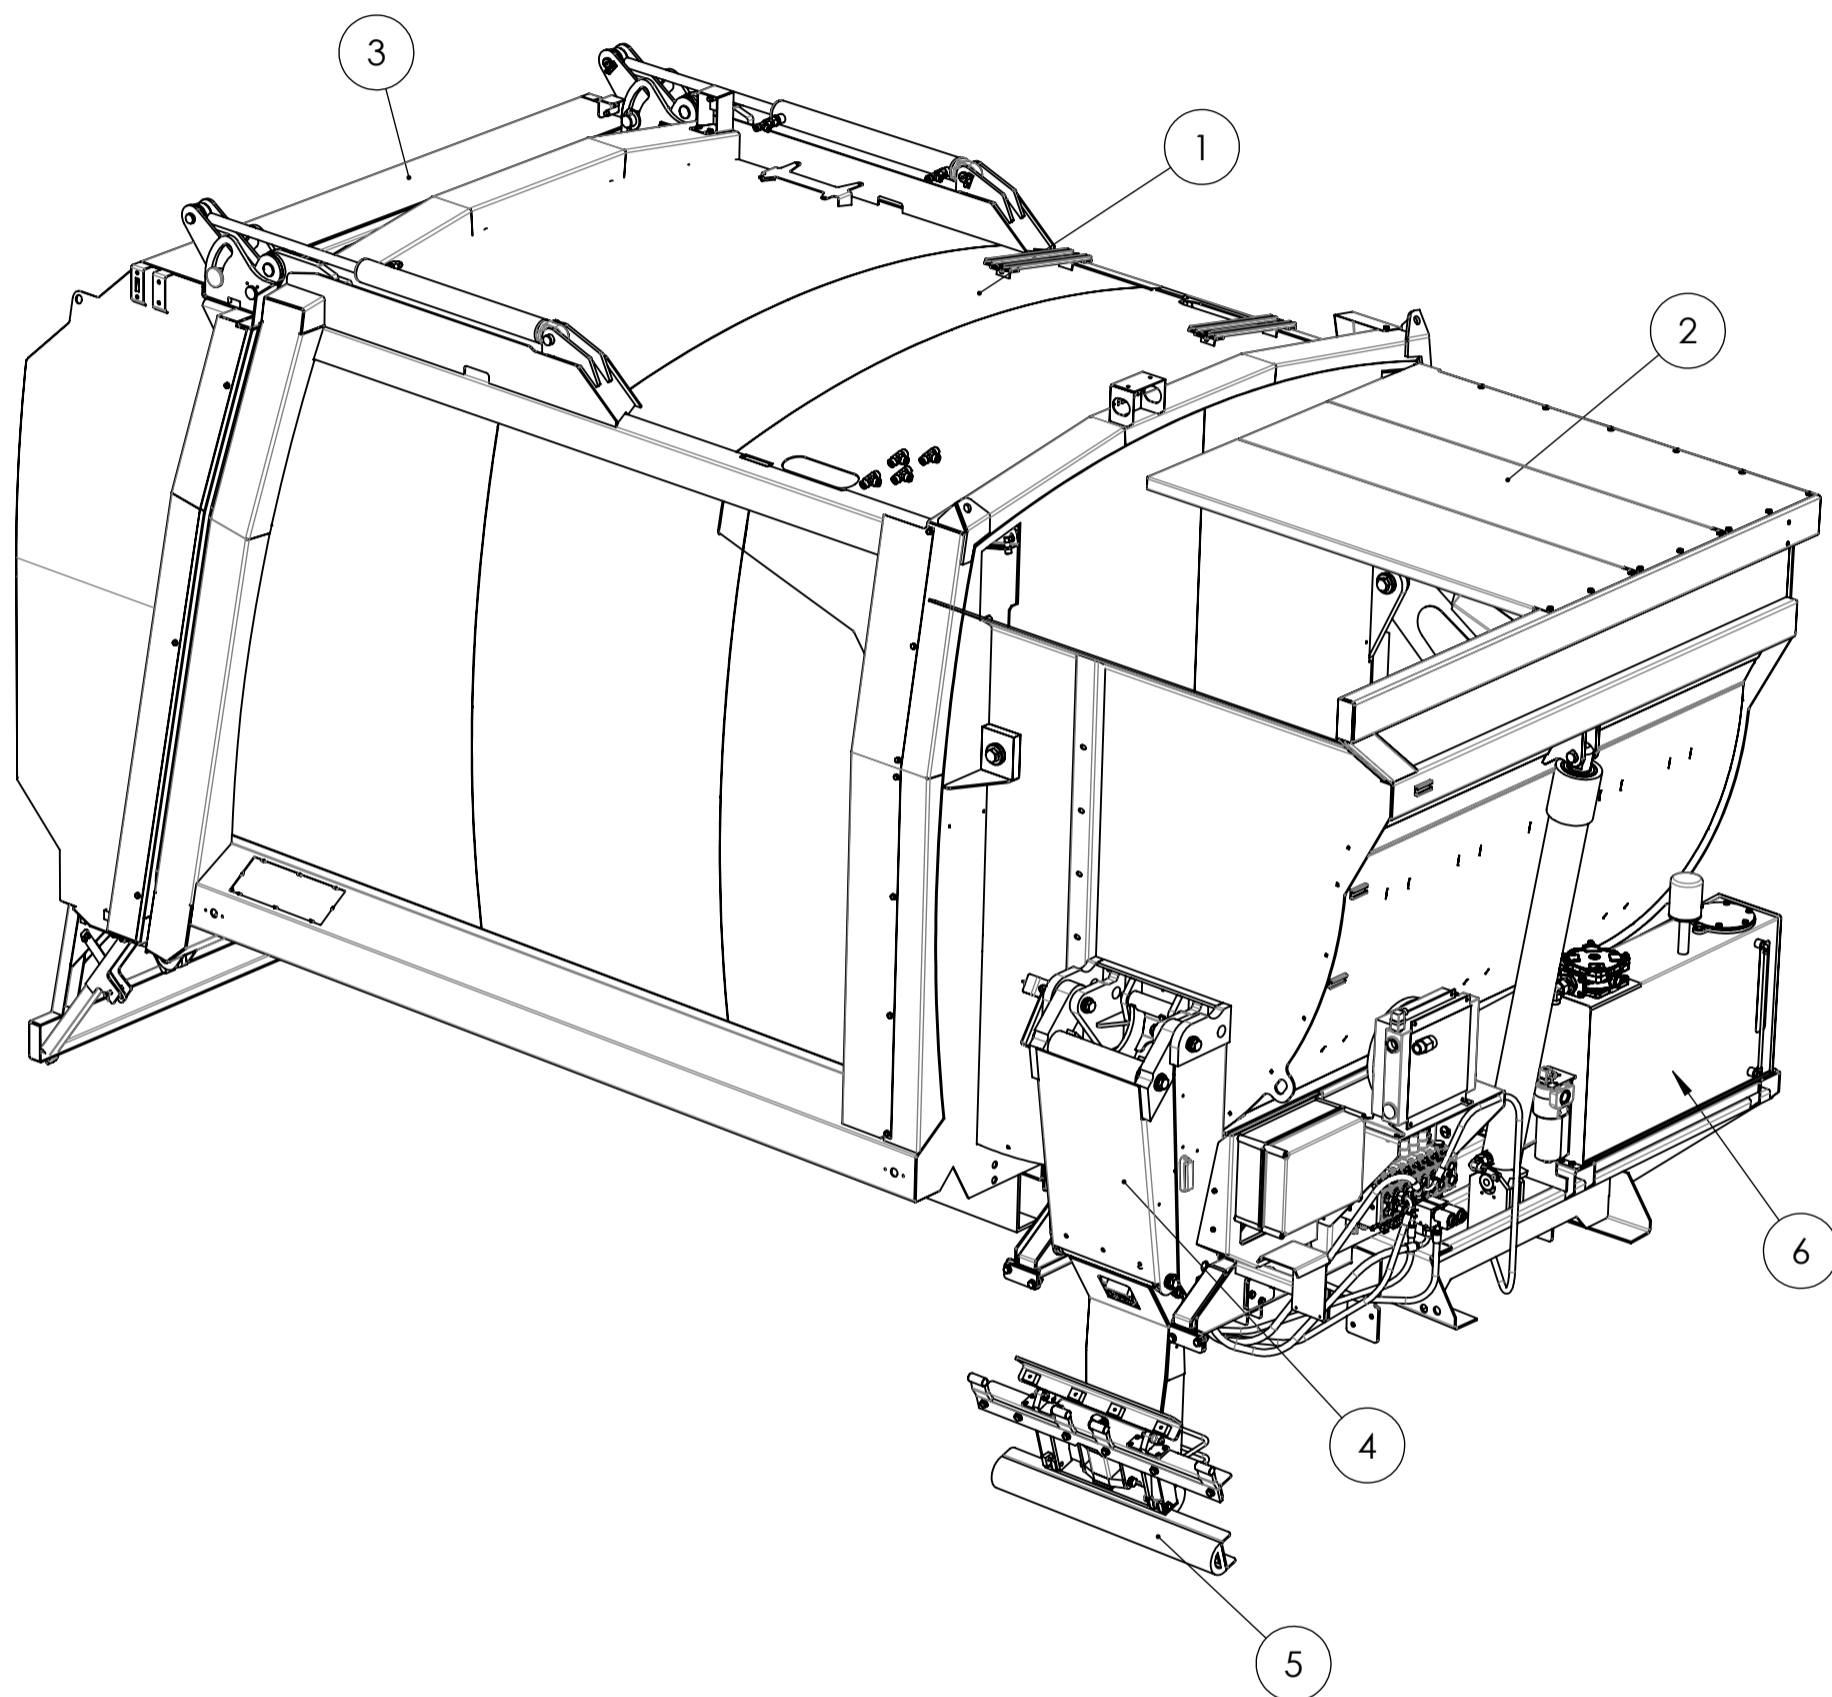


1. Behållare-Body
2. Komprimator-Compress module
3. Baklucka-Tailgate
4. Lastarm-Loading arm
5. Vagga-Cradle
6. Hydraultank-Hydraulic tank

Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.
 
## Sidlastarbehållare-Body Side Loader

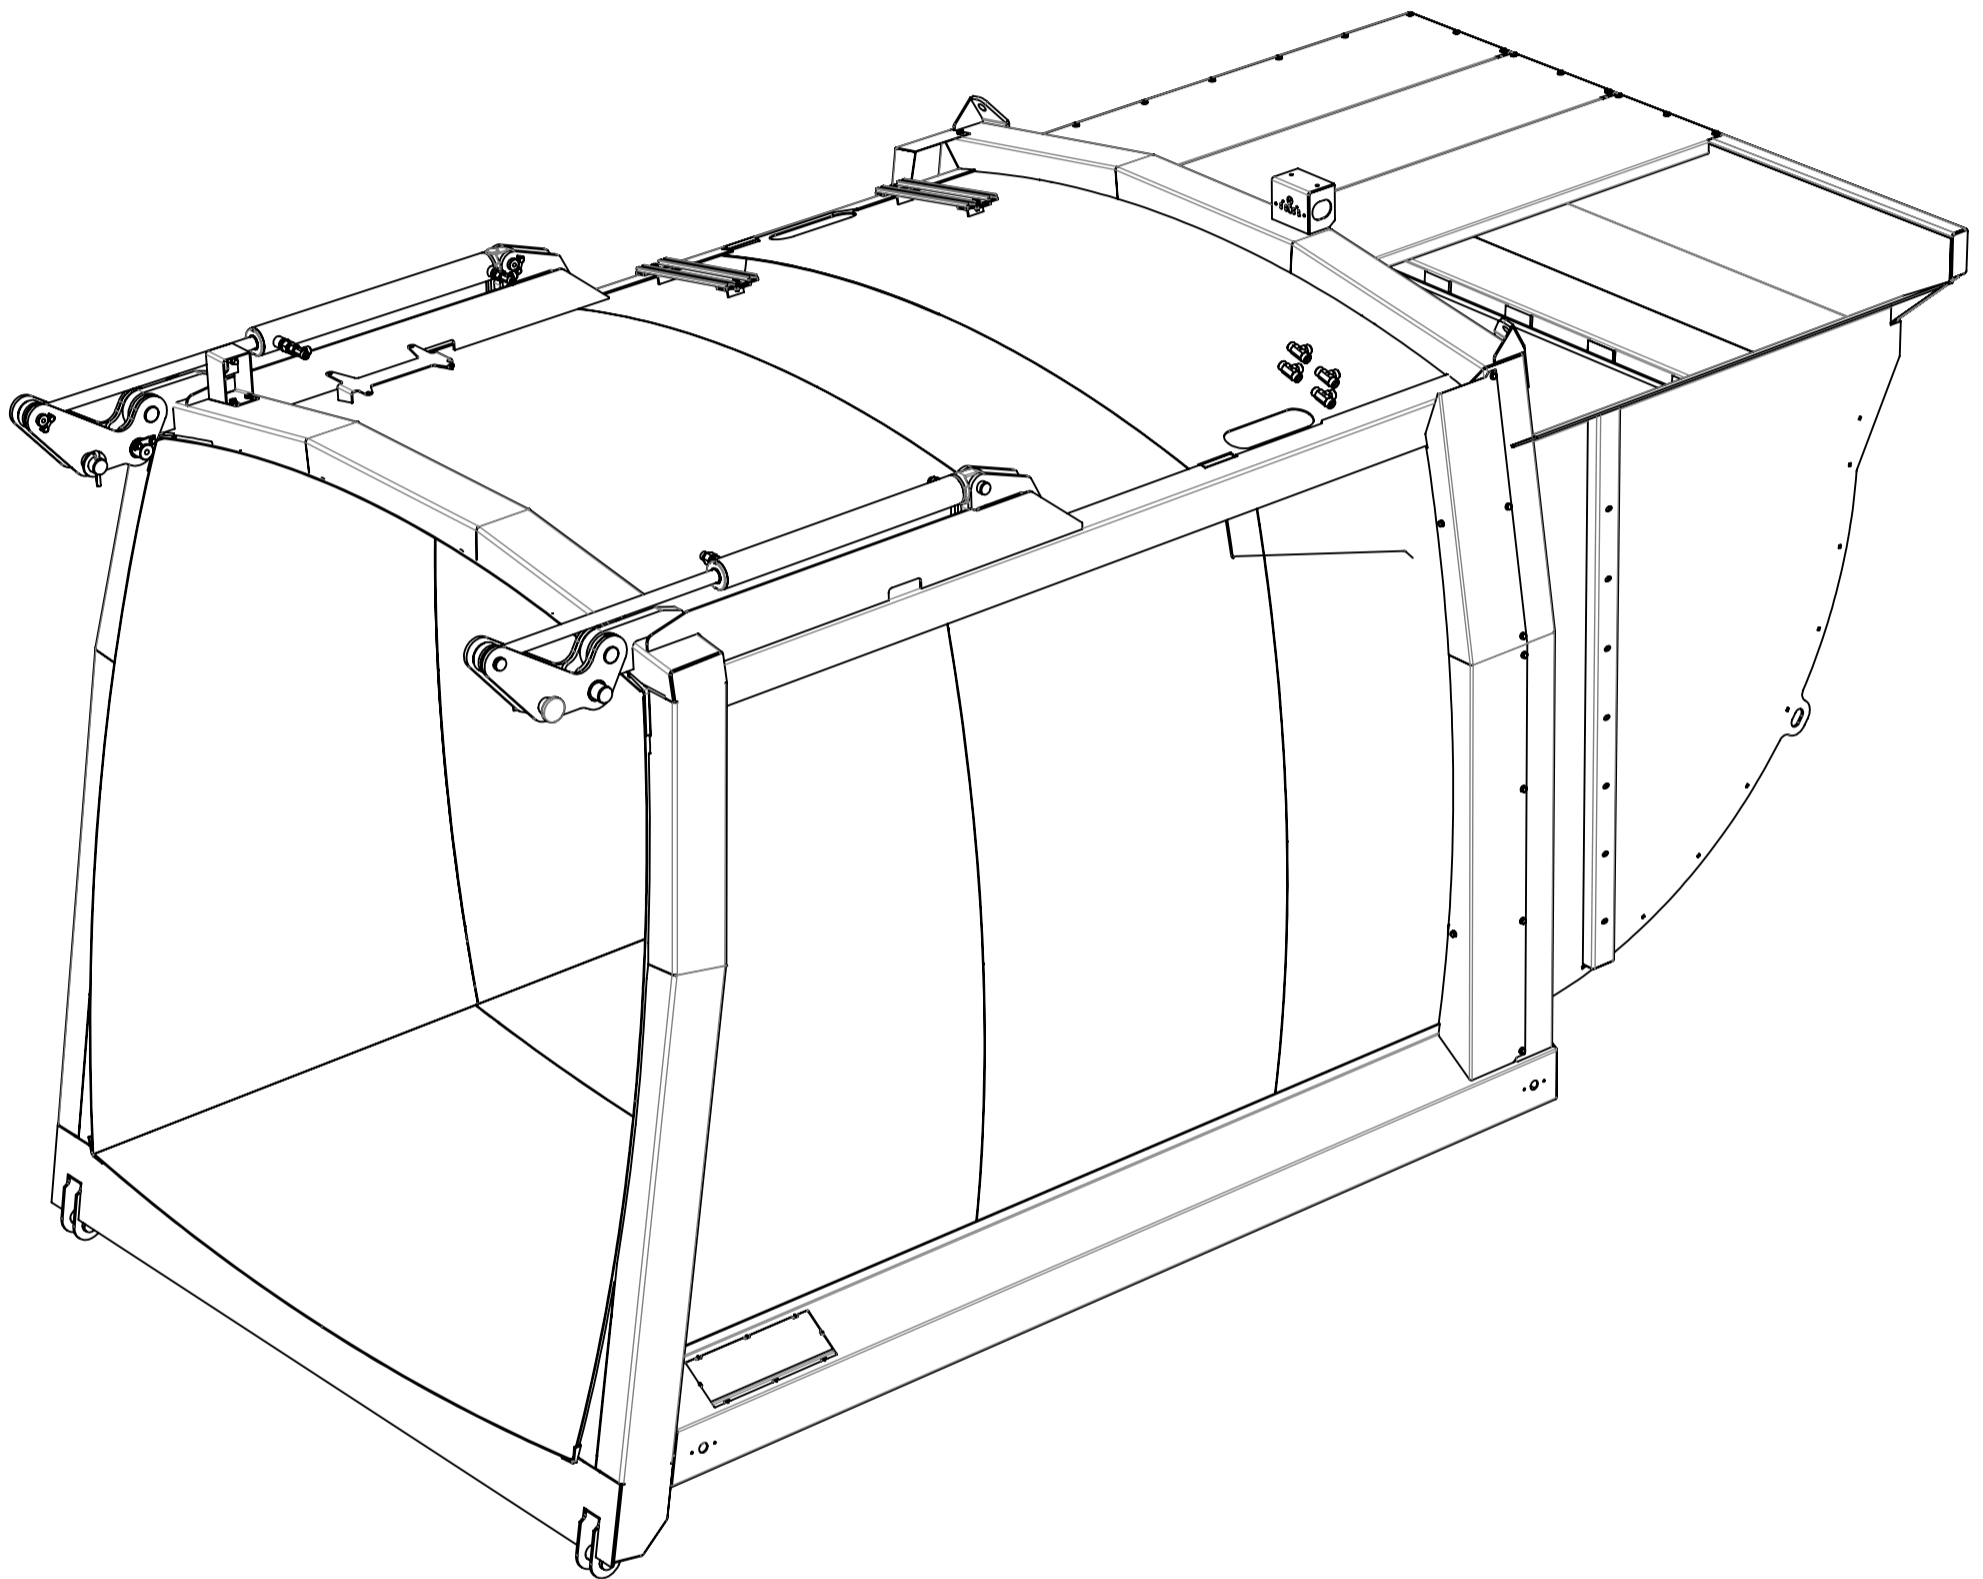


 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

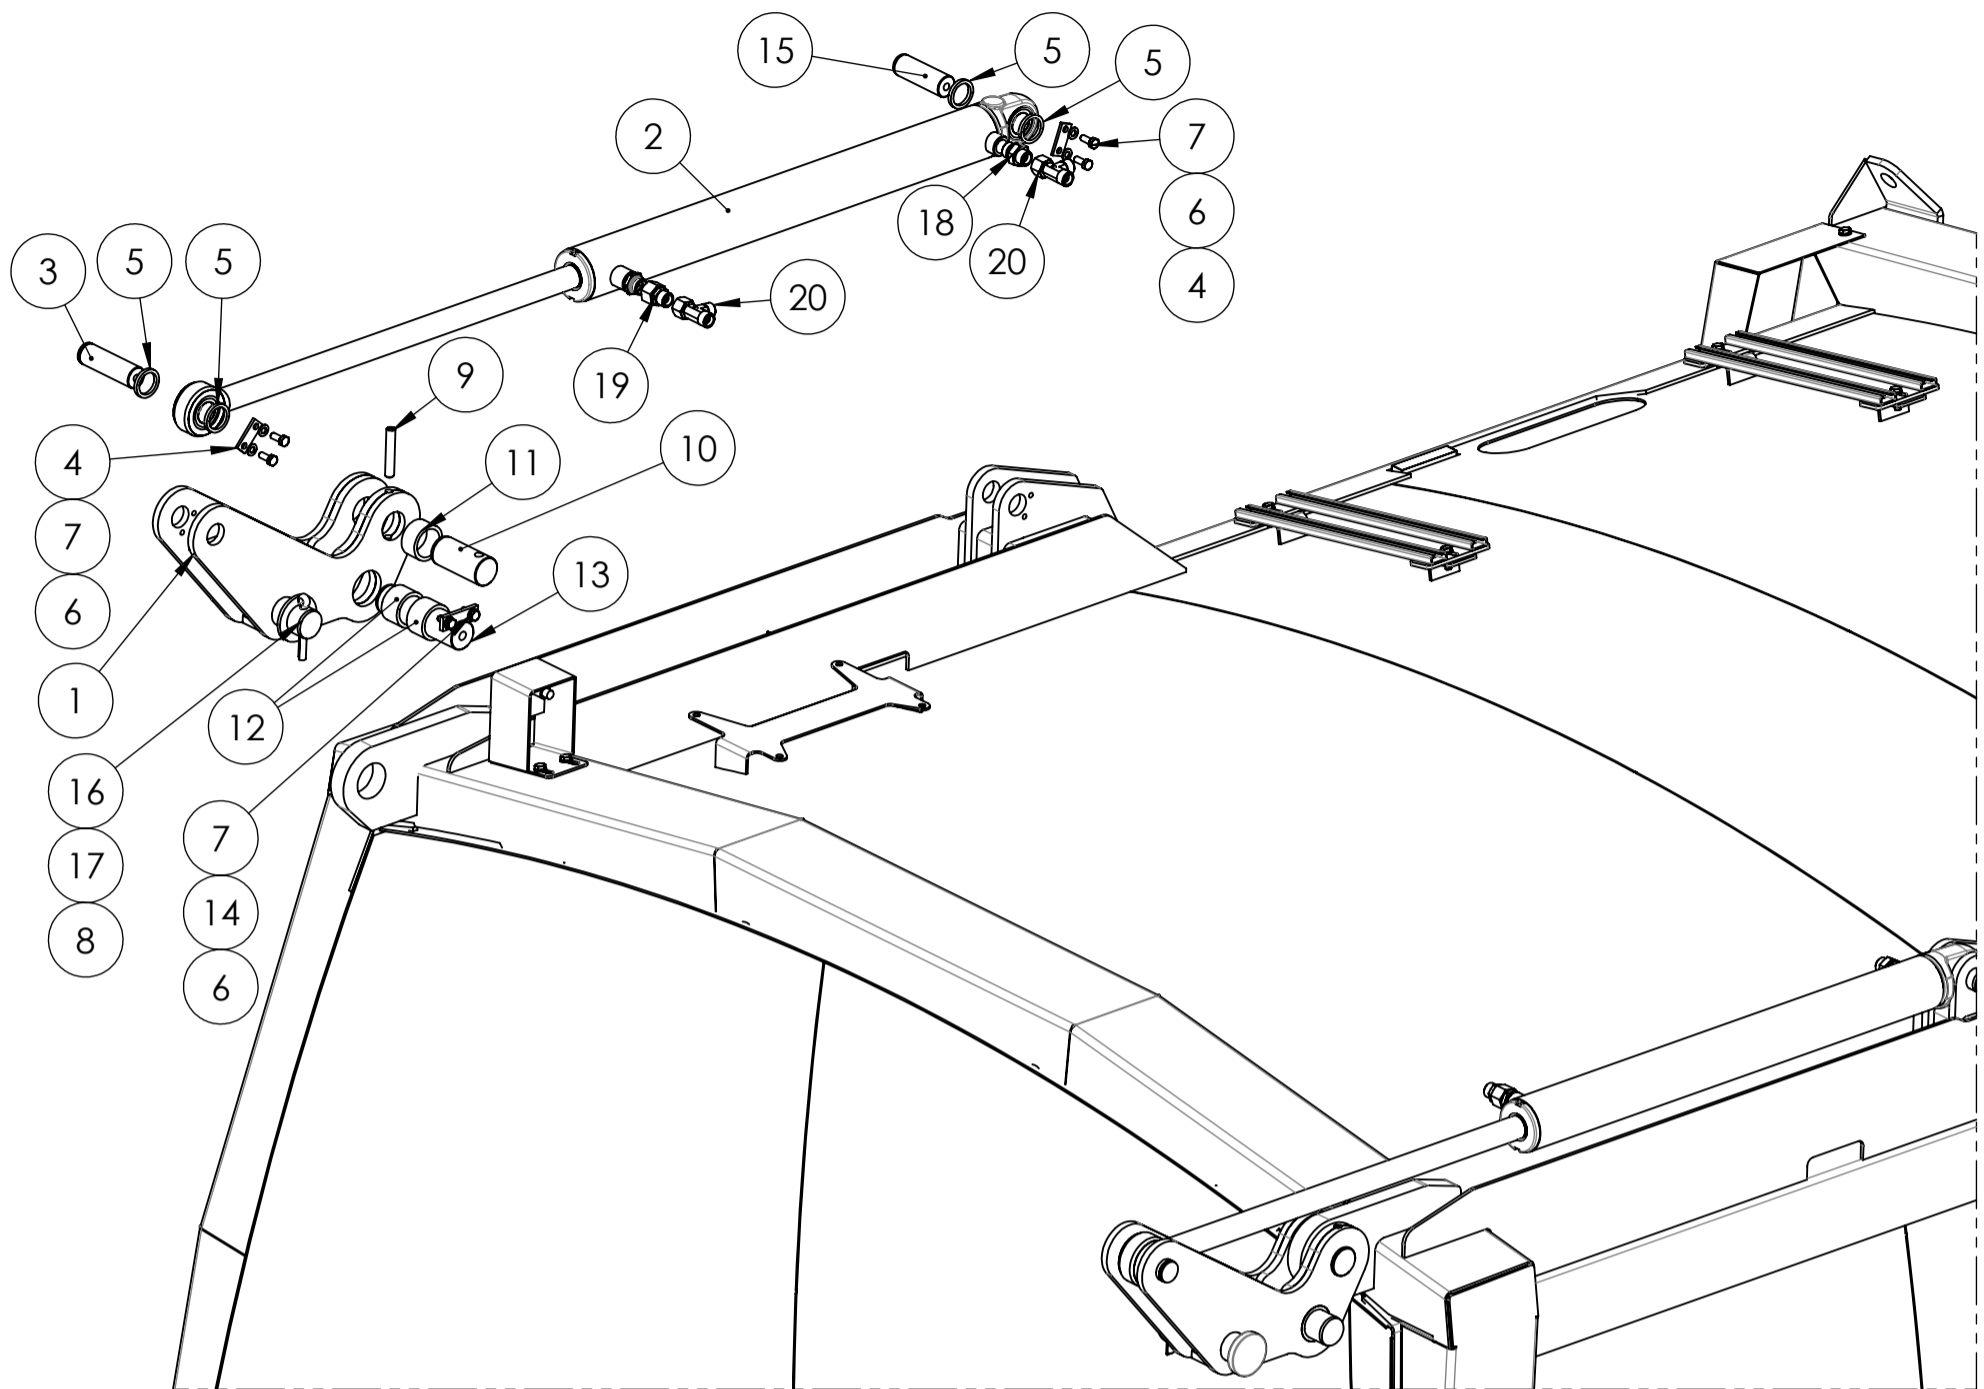



20	Adapter	Adapter	1505758	
19	Adapter	Adapter	1505850	
18	Adapter	Adapter	1505849	
17	Bricka	Washer	1516195	
16	Bult	Bolt	1516194	
15	Bult	Bolt	1506882	3
14	Låsplatta	Locking plate	504337	2
13	Bult	Bolt	504345	3
12	Bussning	Bushing	1505505	
11	Bussning	Bushing	1512299	
10	Bult	Bolt	1516173	
9	Skruv	Screw	1516174	
8	Saxpinne	Cotter pin	1516196	
7	Skruv	Screw	1505263	
6	Bricka	Washer	1504899	
5	Bricka	Washer	1506926	
4	Låsplatta	Locking plate	1506881	
3	Bult	Bolt	1516156	
2	Hydraulcylinder	Hydraulic cylinder	1523878	2
1	Arm SL	Arm SL	1516155	4
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

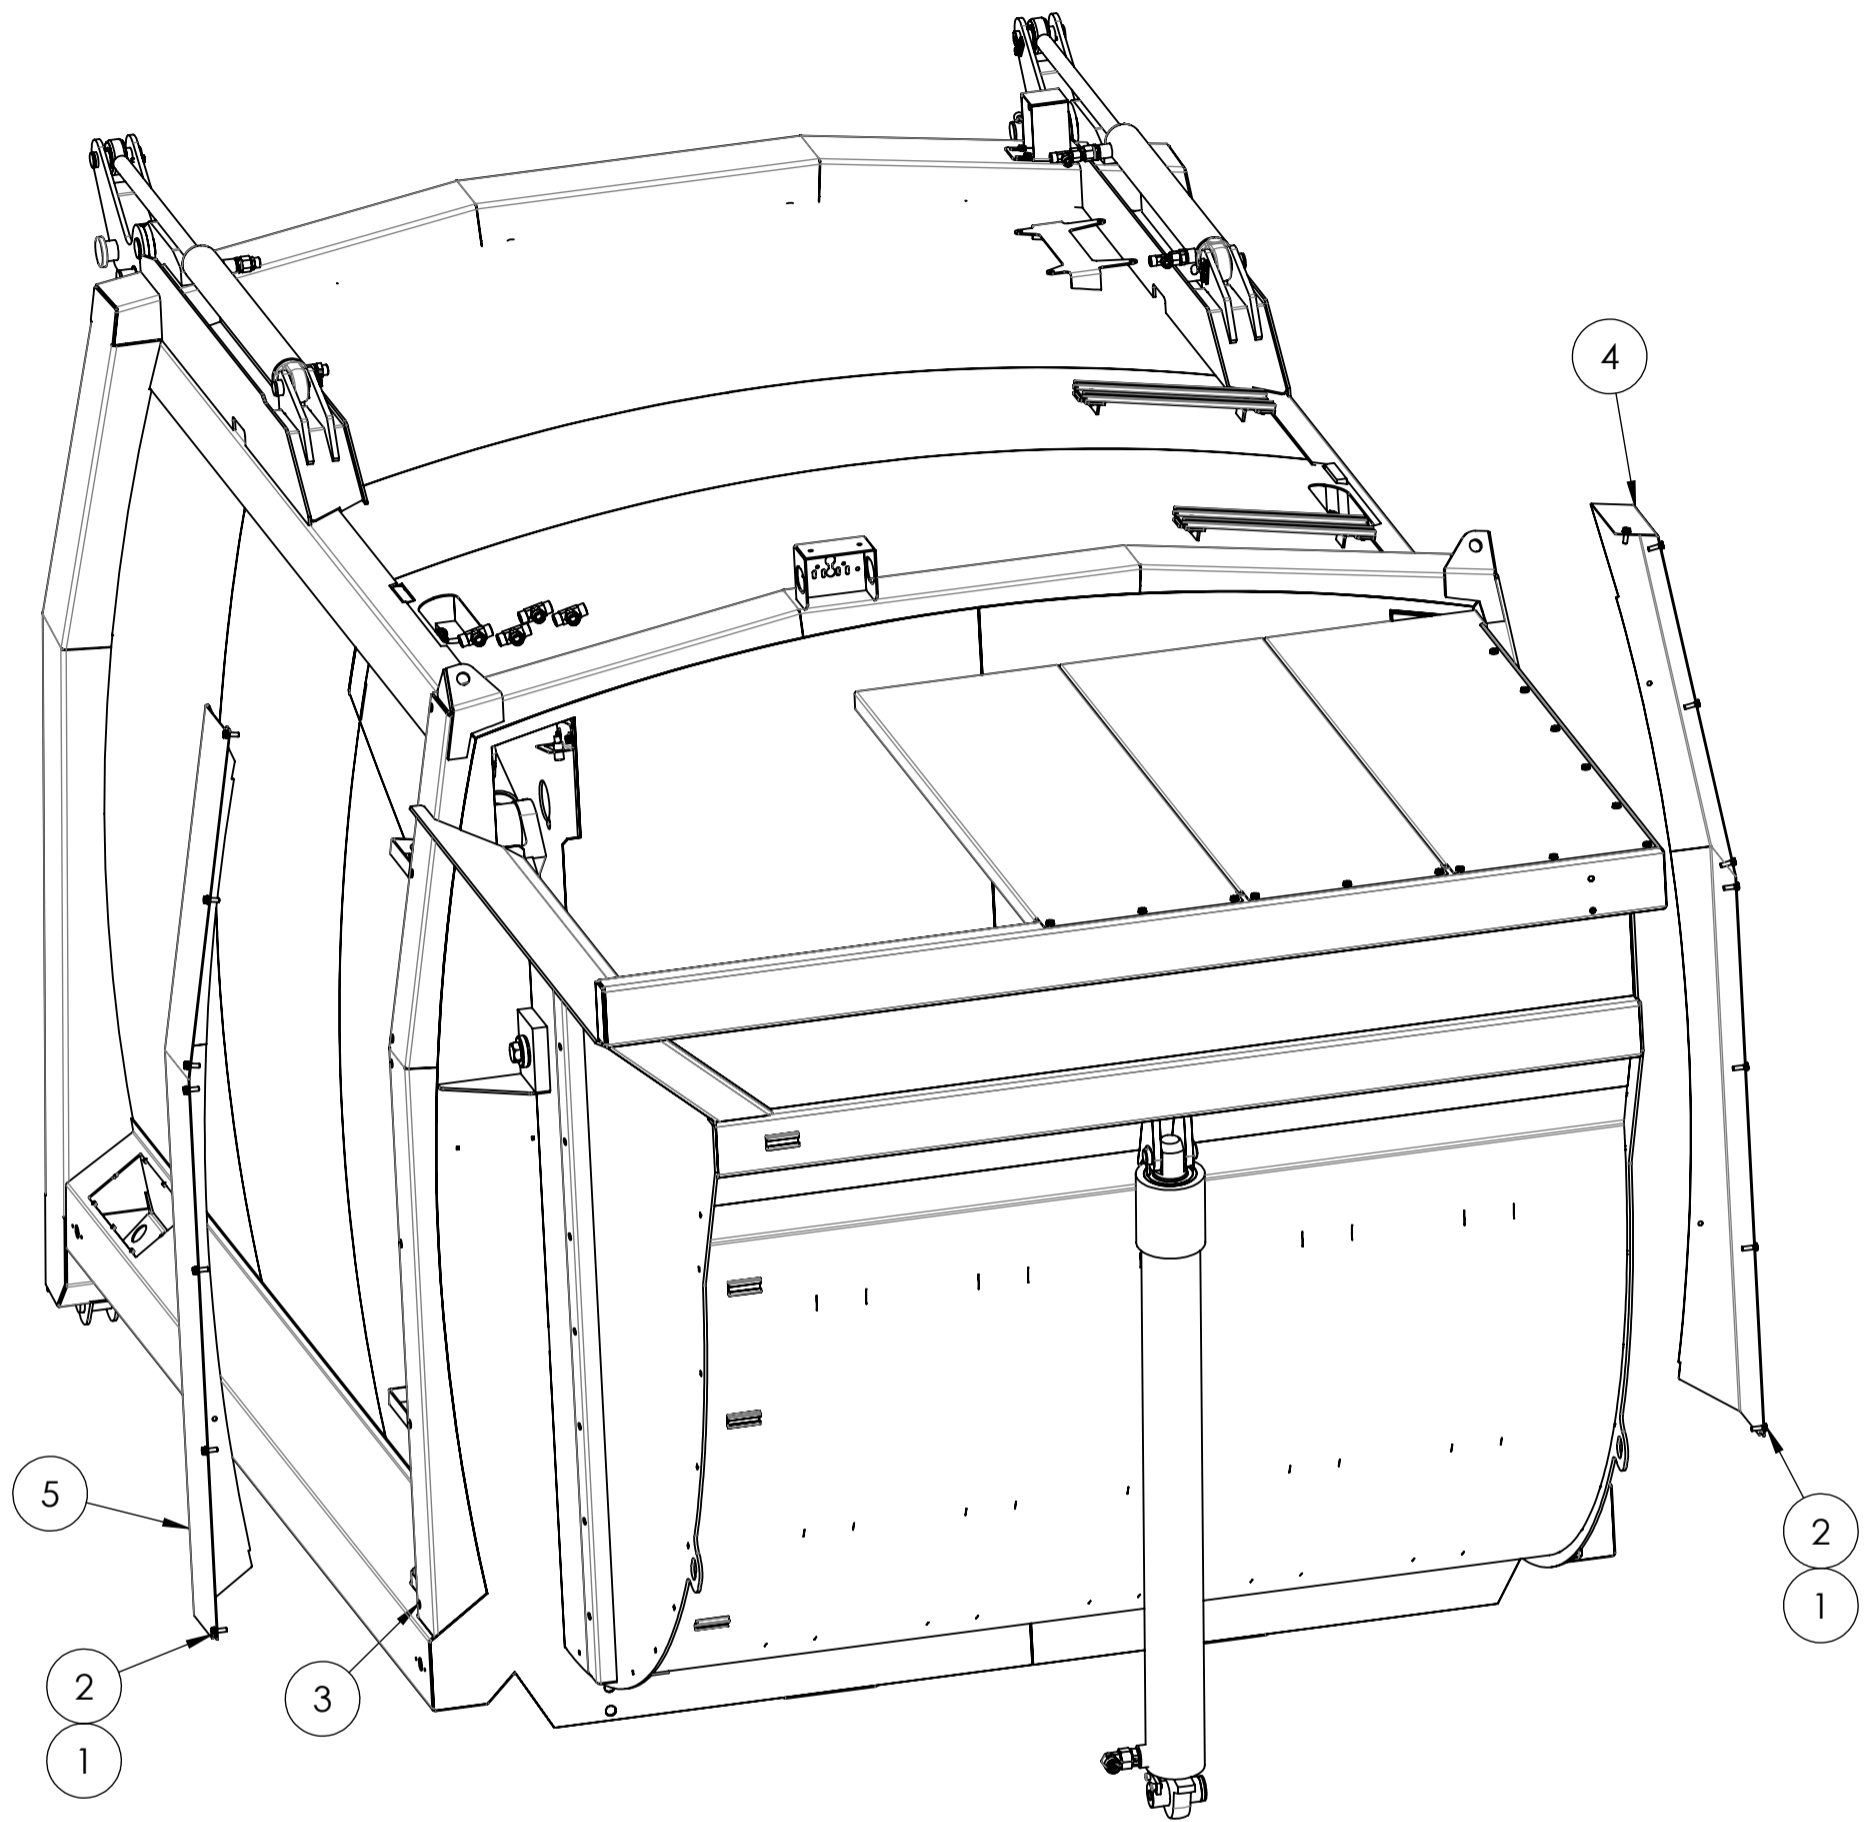

5	Slangskydd höger	Hose cover right	1523931	1
4	Slangskydd vänster	Hose cover left	1516228	
3	Blindnitmutter	Rivet nut	1504886	
2	Skruv	Screw	1504922	
1	Bricka	Washer	1504899	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

  
Note! The images are for reference only. Components marked with \* contact spare part branch.

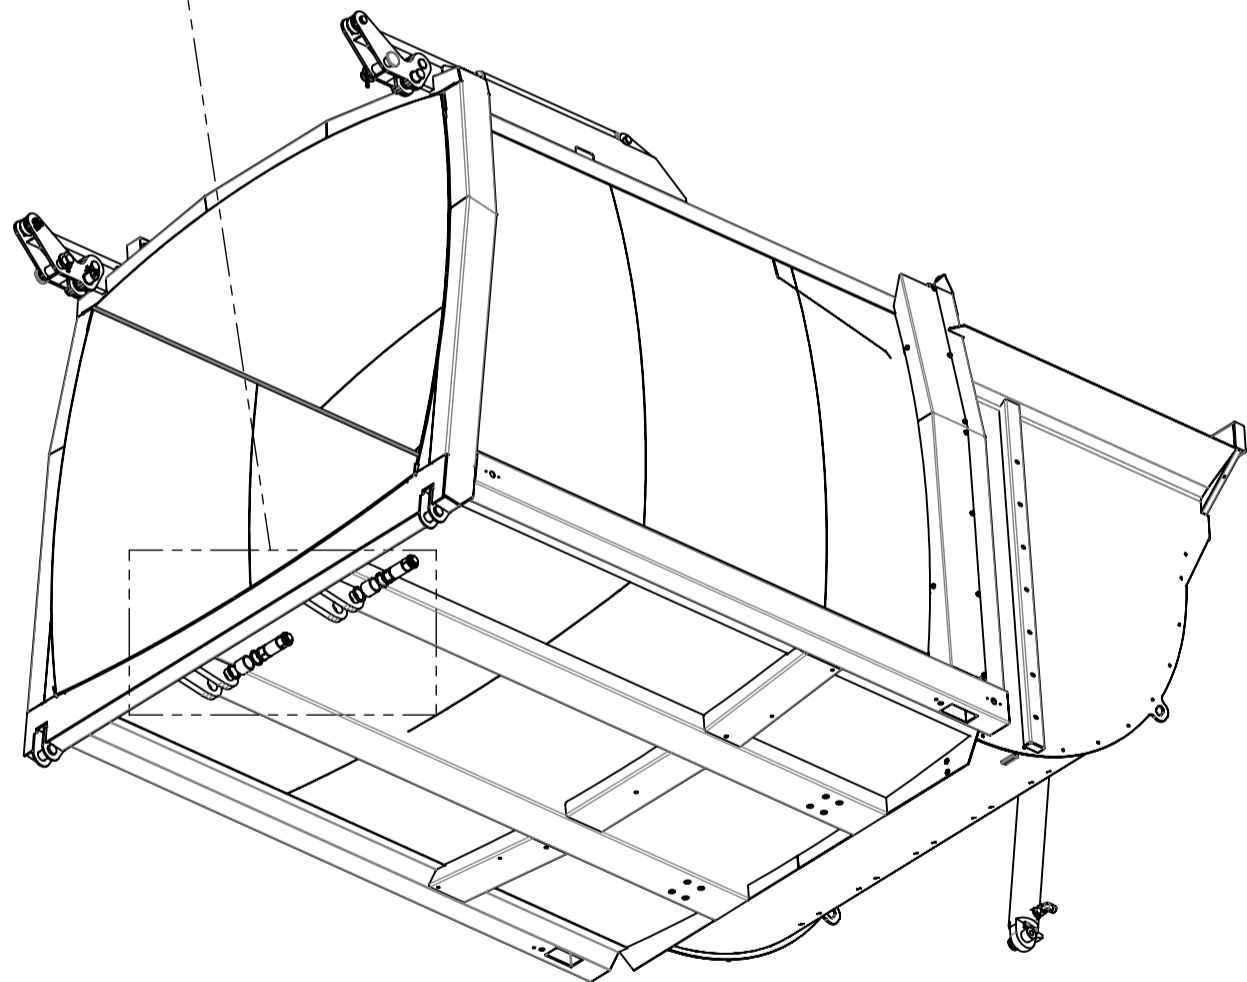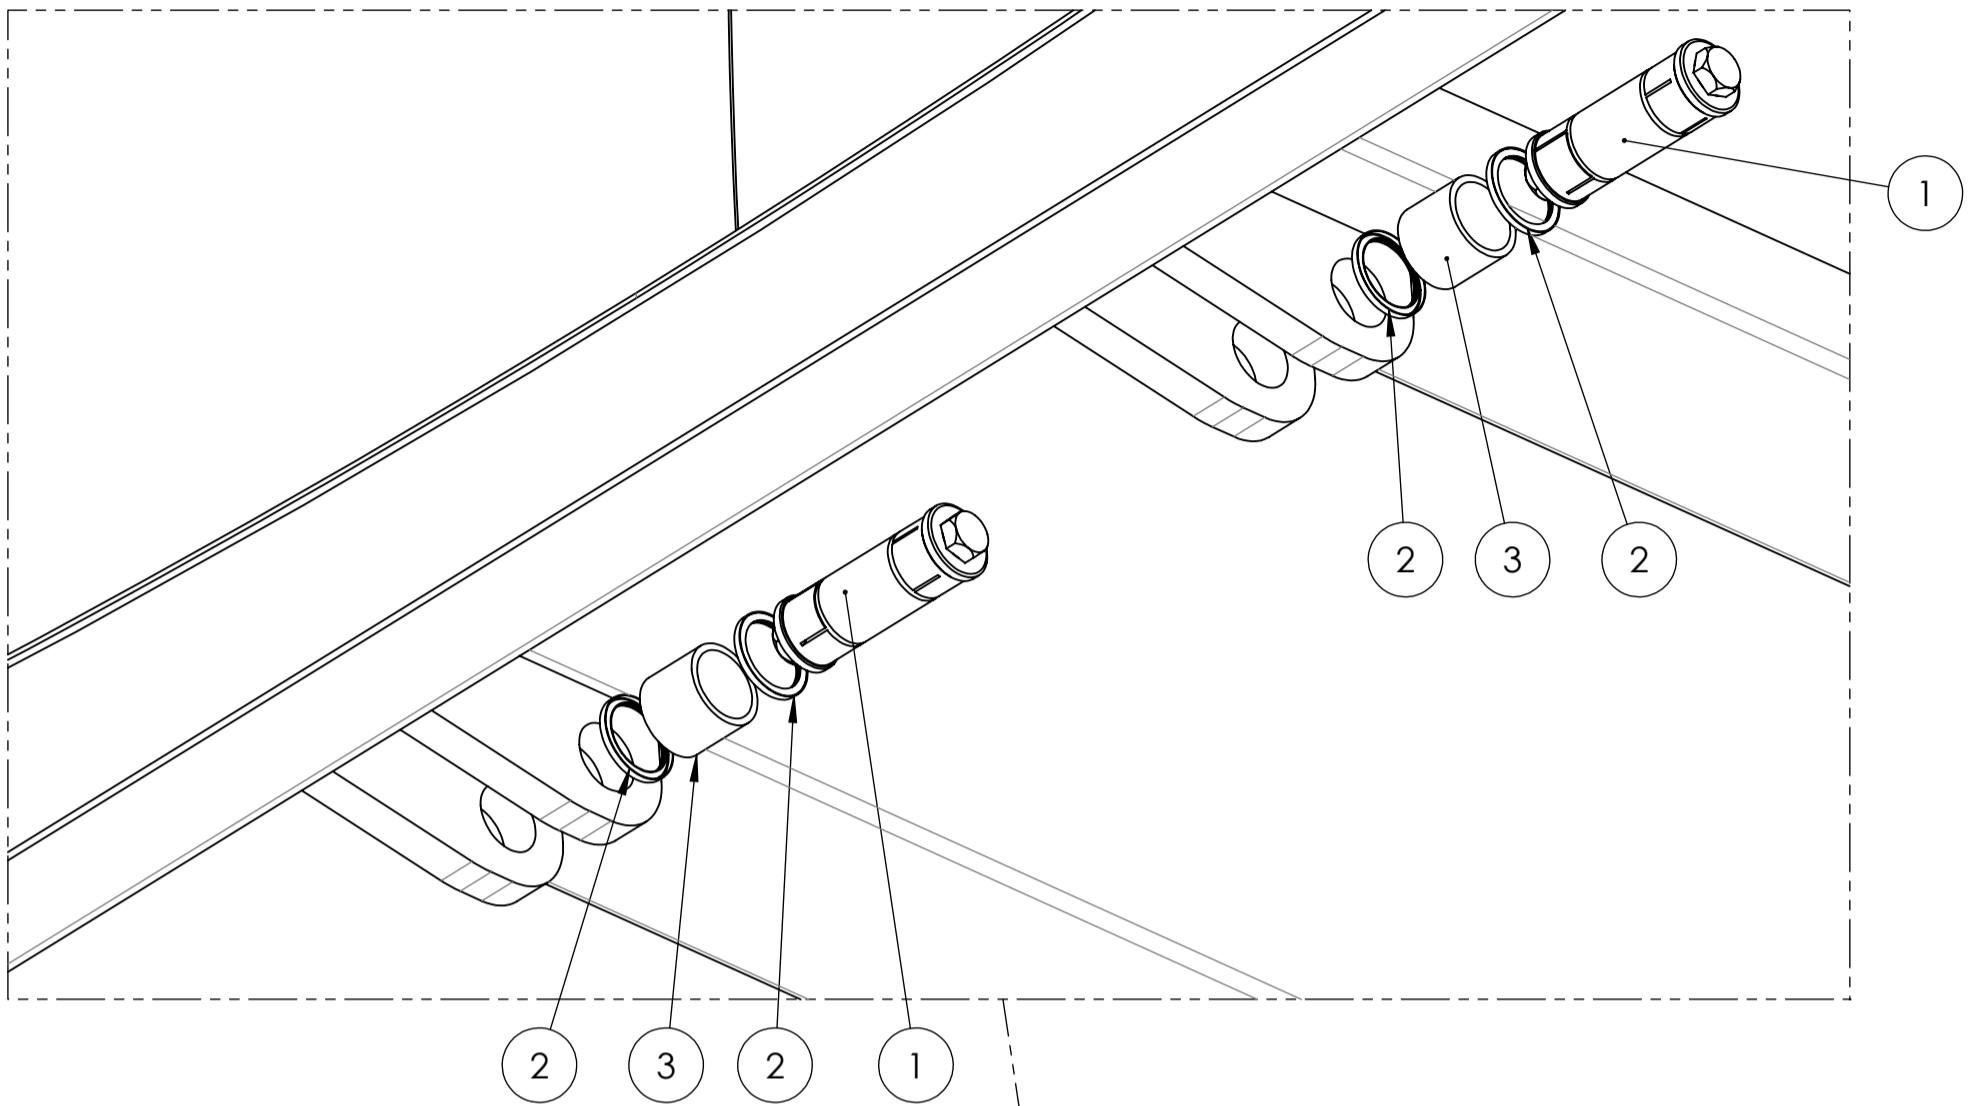



3	Bussning	Bushing	1505530	
2	Radialtätning	Radial seal	1515638	
1	Expanderbult	Expansion bolt	1515428	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Baklucka SL-Tailgate SL

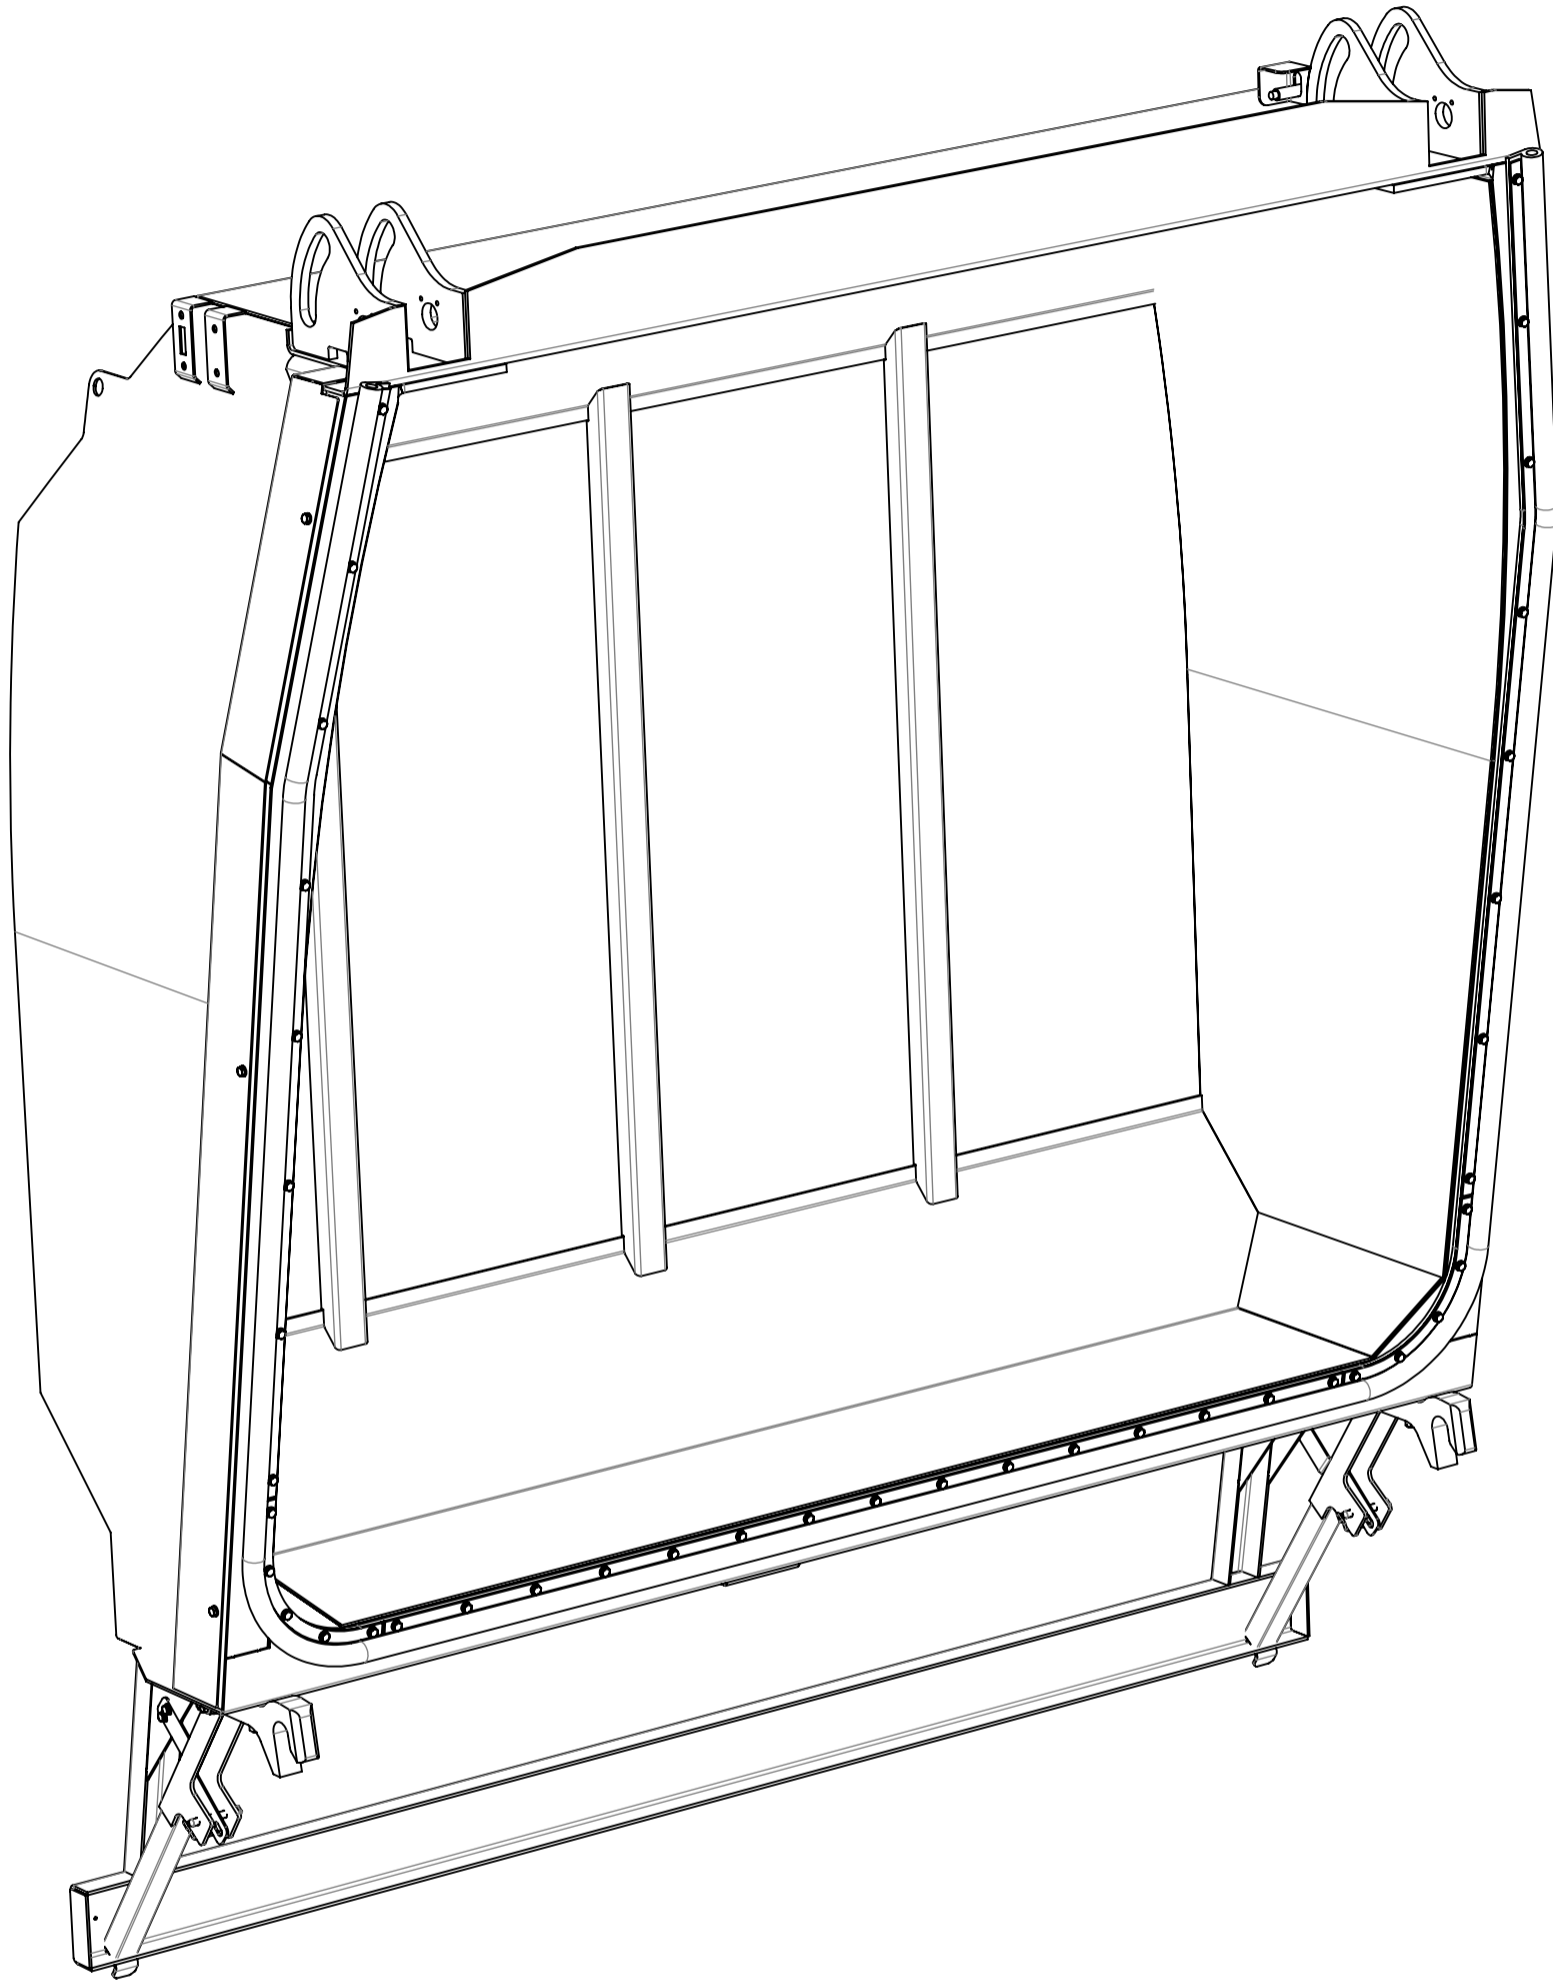 

  Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

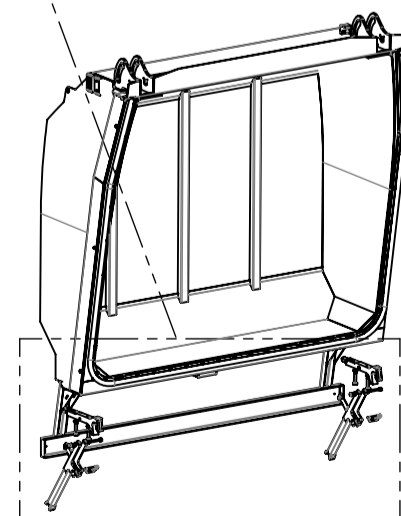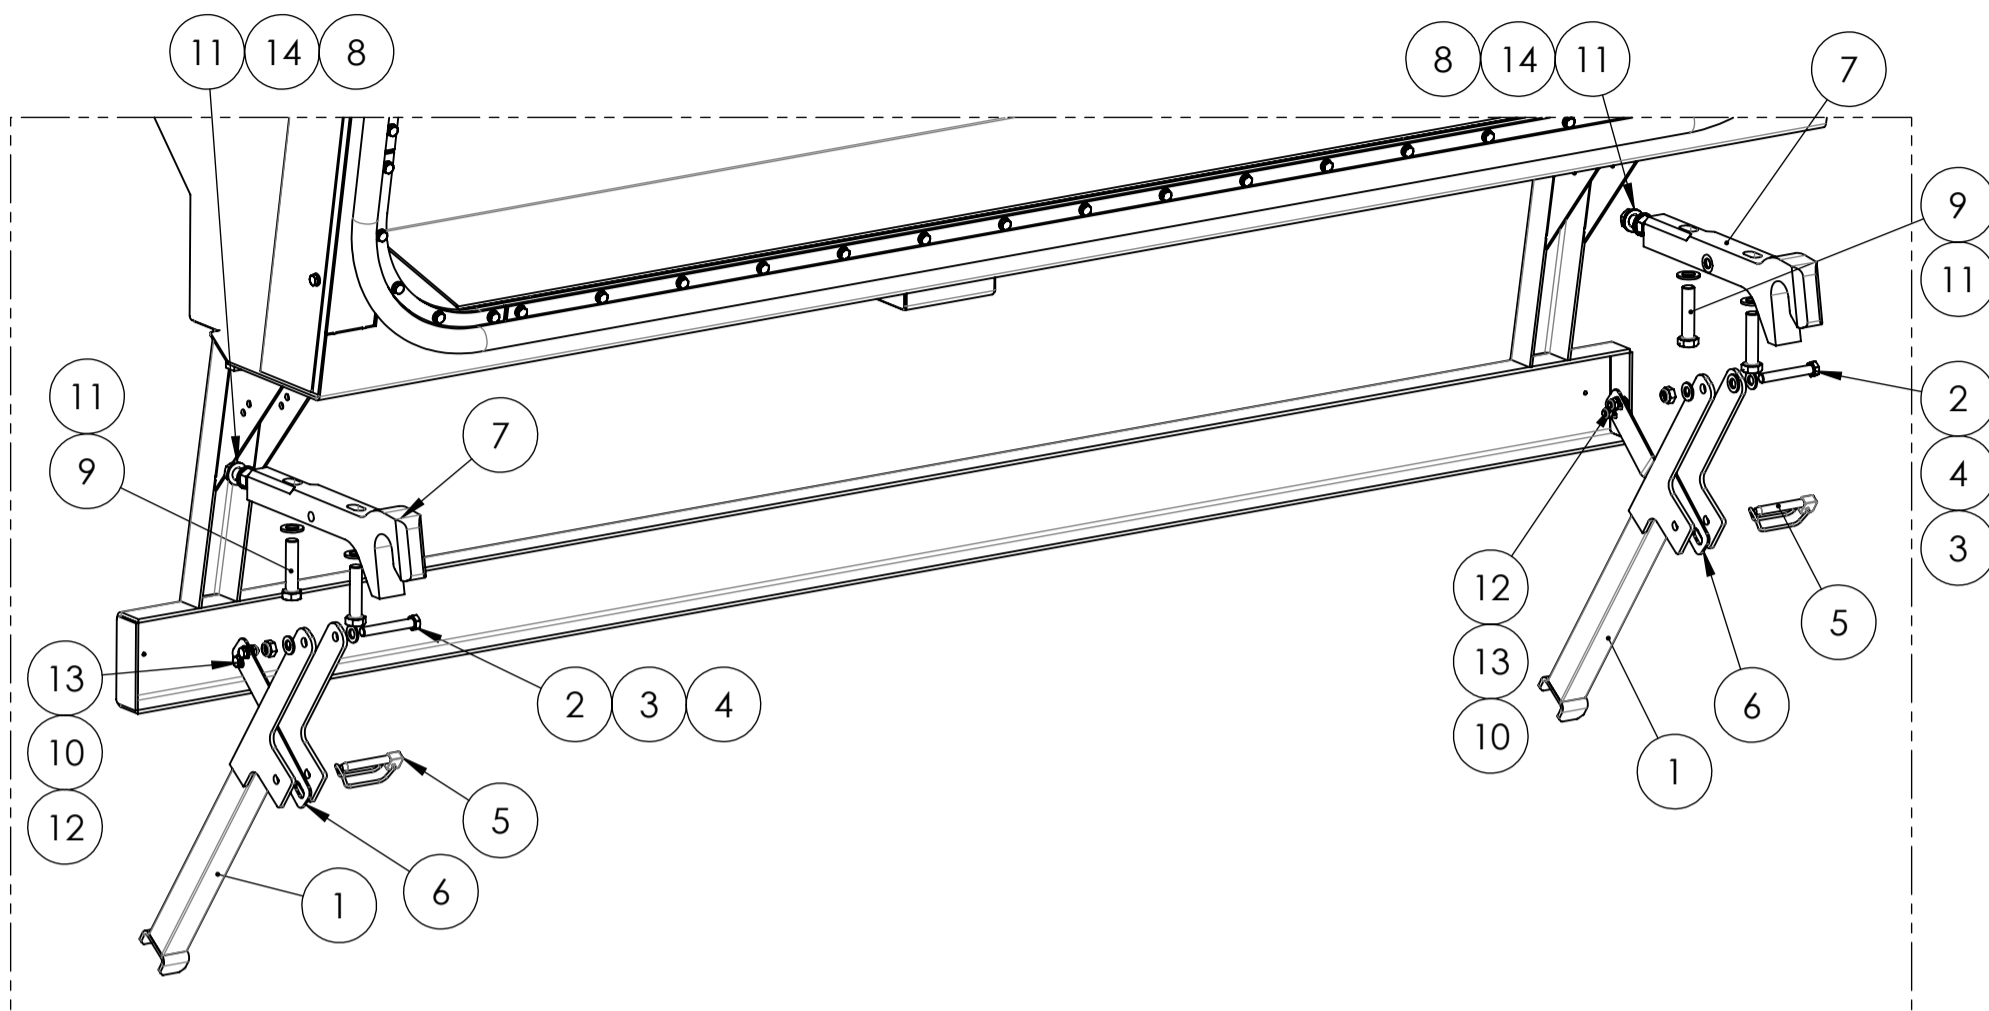

Note! The images are for reference only. Components marked with \* contact spare part branch.

14	Skruv	Screw	1505265	
13	Skruv	Screw	1505263	
12	Låsmutter	Locking nut	1505255	
11	Bricka	Washer	1504903	
10	Bricka	Washer	1504899	
9	Skruv	Screw	1505264	
8	Mutter	Nut	1504839	
7	Låshake	Lock latch	1509435	7
6	Stöthållare	Support leg holder	1516597	2
5	Låssprint	Locking pin	1507262	
4	Låsmutter	Locking nut	1505258	
3	Bricka	Washer	1504901	
2	Skruv	Screw	1508833	
1	Skyddsstötta	Support leg	1505804	4
ITEM NO.	Benämning	Title	Part no	YAP.Rev


## Låsning och stödben-Lock hooks and support legs

1520824 Baklucka SL-Tailgate SL

2014-02-13

Rev. 1

 Date: 2014-03-27

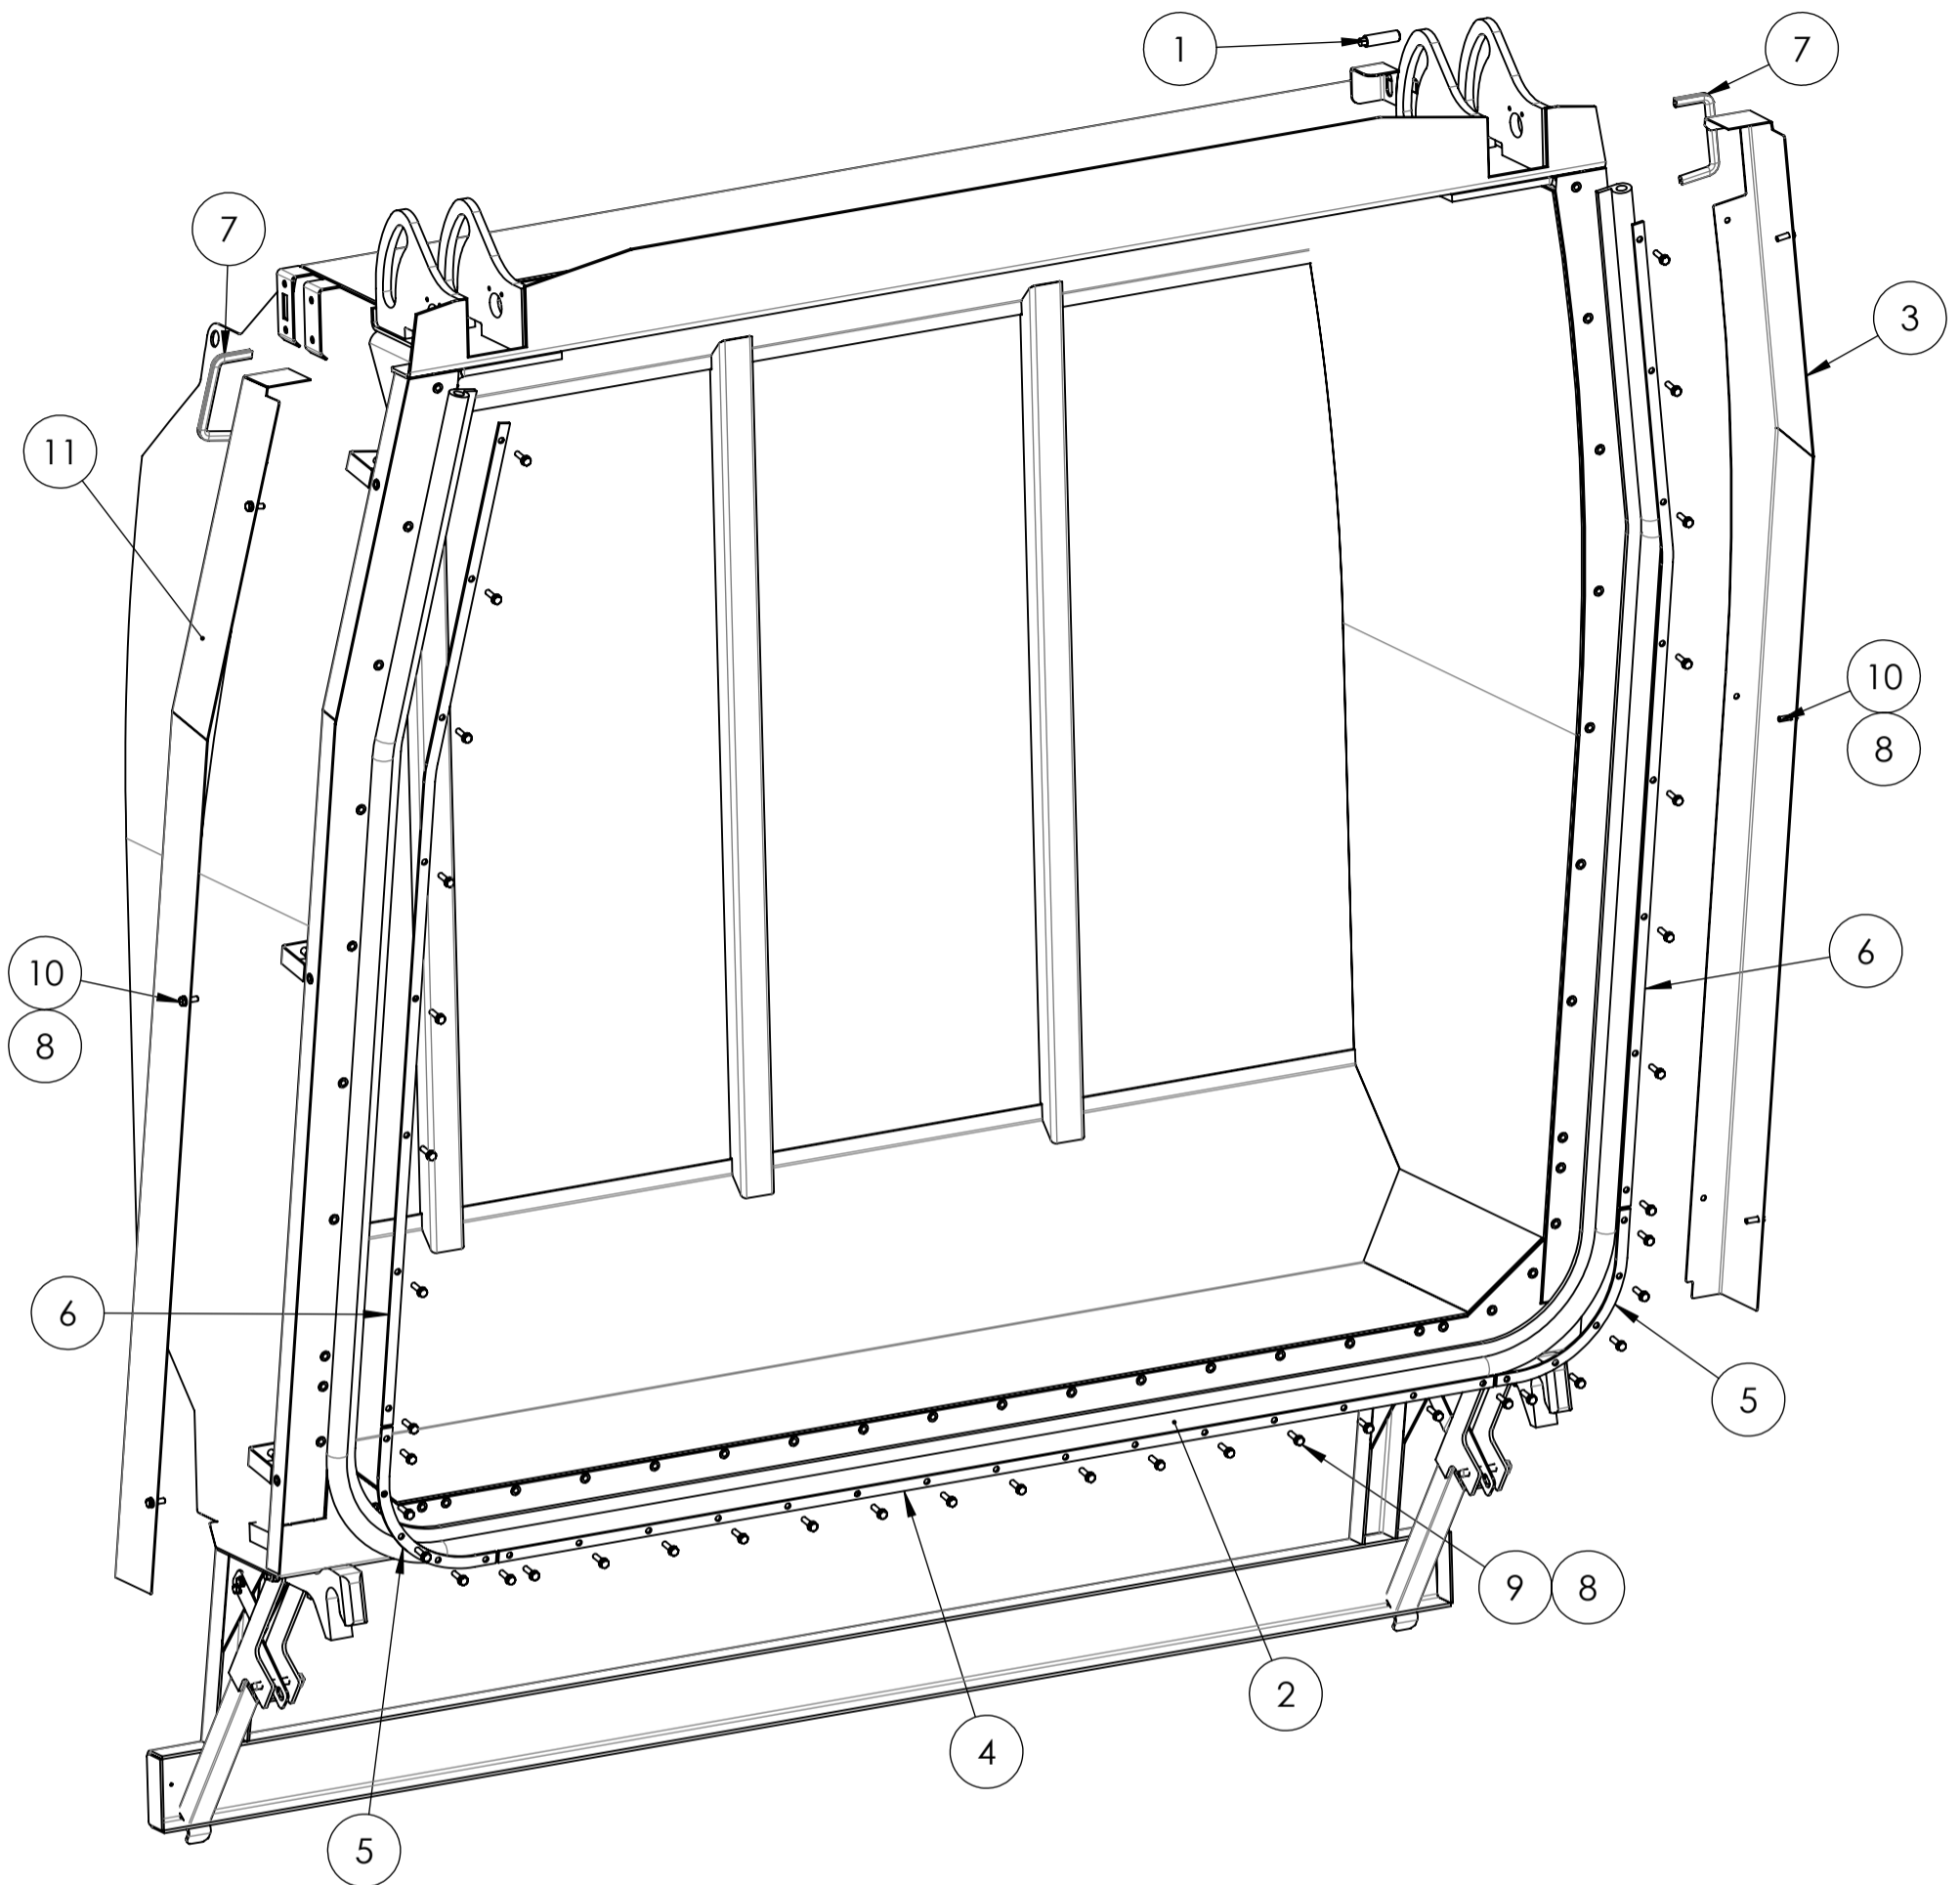

11	Täckplåt SL höger	Cover plate right	1516652	
10	Mutter	Nut	1504922	
9	Skruv	Screw	1505262	
8	Bricka	Washer	1504899	
7	Kantskyddslist	Edge trim	1506828-7	
6	Gummilishållare	Rubber seal holder	1516612	
5	Gummilishållare 90°	Rubber seal holder	1516610	
4	Gummilishållare rak	Rubber seal holder	1520815	
3	Täckplåt vänster SL	Cover plate left	1516650	
2	Tätninglist	Rubber seal	1505165-11	
1	Induktiv givare	Inductive sensor	1511077	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.



Gummitätning, kabelskydd-Rubber gasket, Wire cover

1520824 Baklucka SL-Tailgate SL

2014-02-13

Rev. 1

  Date: 2014-03-27

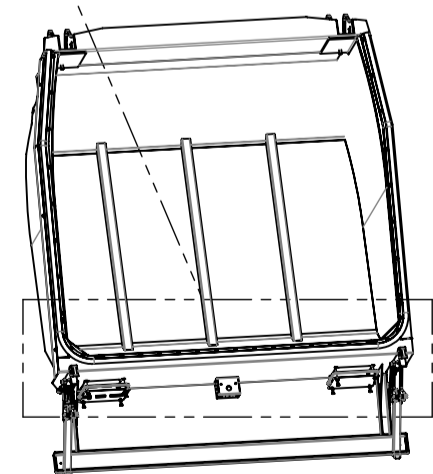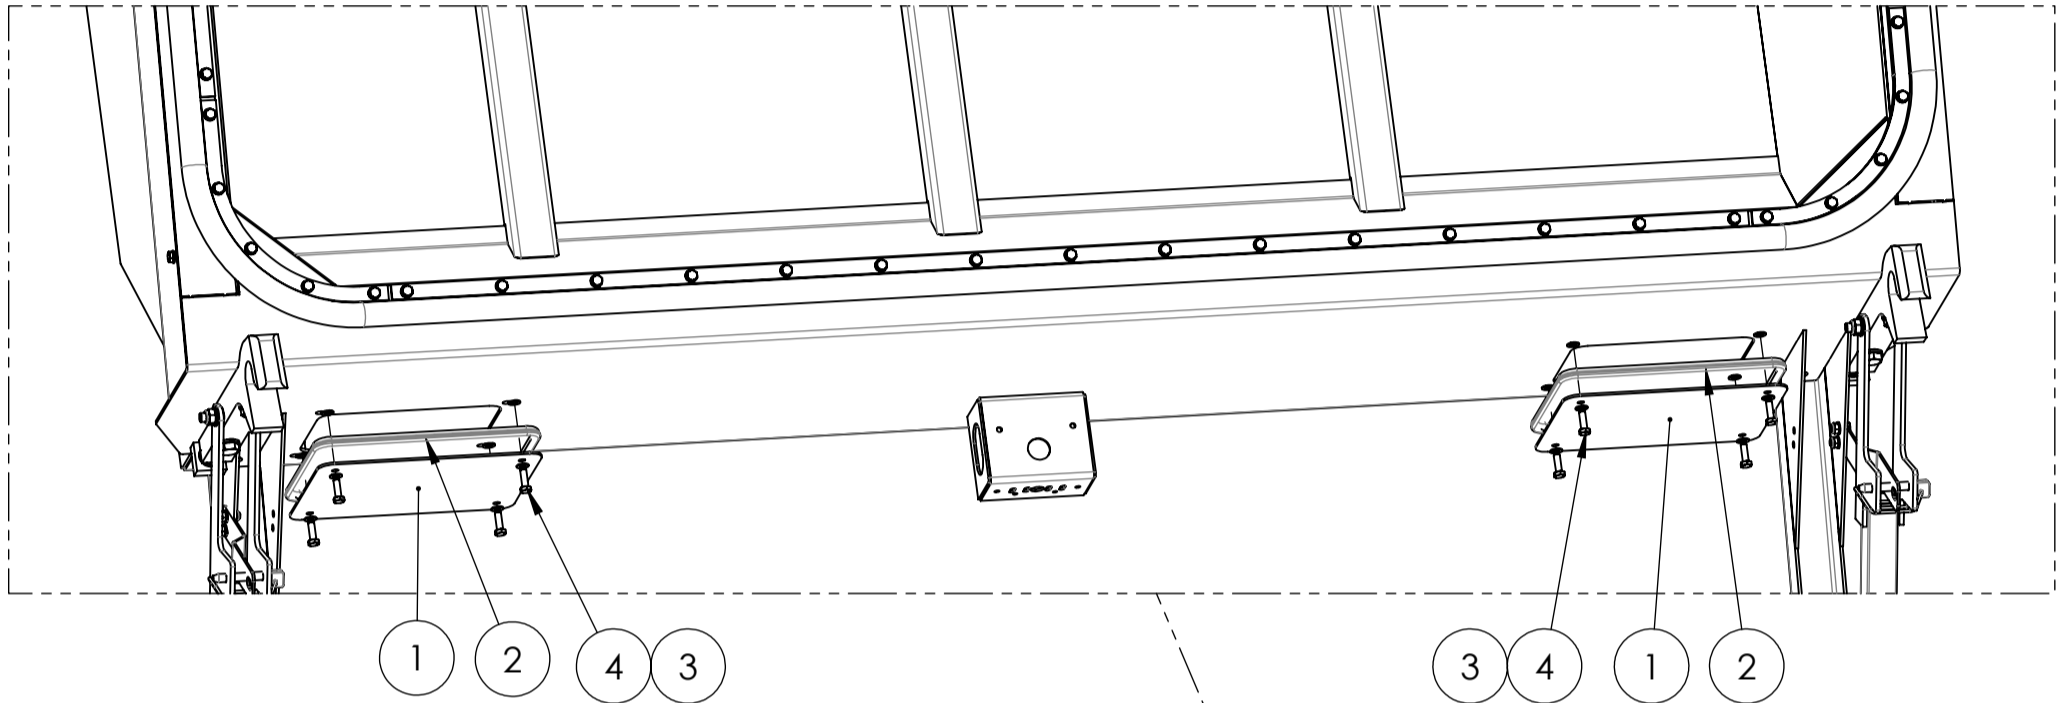


Note! The images are for reference only. Components marked with \* contact spare part branch.

4	Skruv	Screw	1504922	
3	Bricka	Washer	1504899	
2	Gummilist	Edge trim	1504928-11	
1	Täcklock	Cover plate	1516591	
ITEM NO.	Benämning	Title	Part no	YAP.Rev


Täcklock-Cover plate

1520824 Baklucka SL-Tailgate SL  
 2014-02-13  
 Rev. 1 Date: 2014-03-27

## Sidlastare komprimatorhus Side loader Compress Module


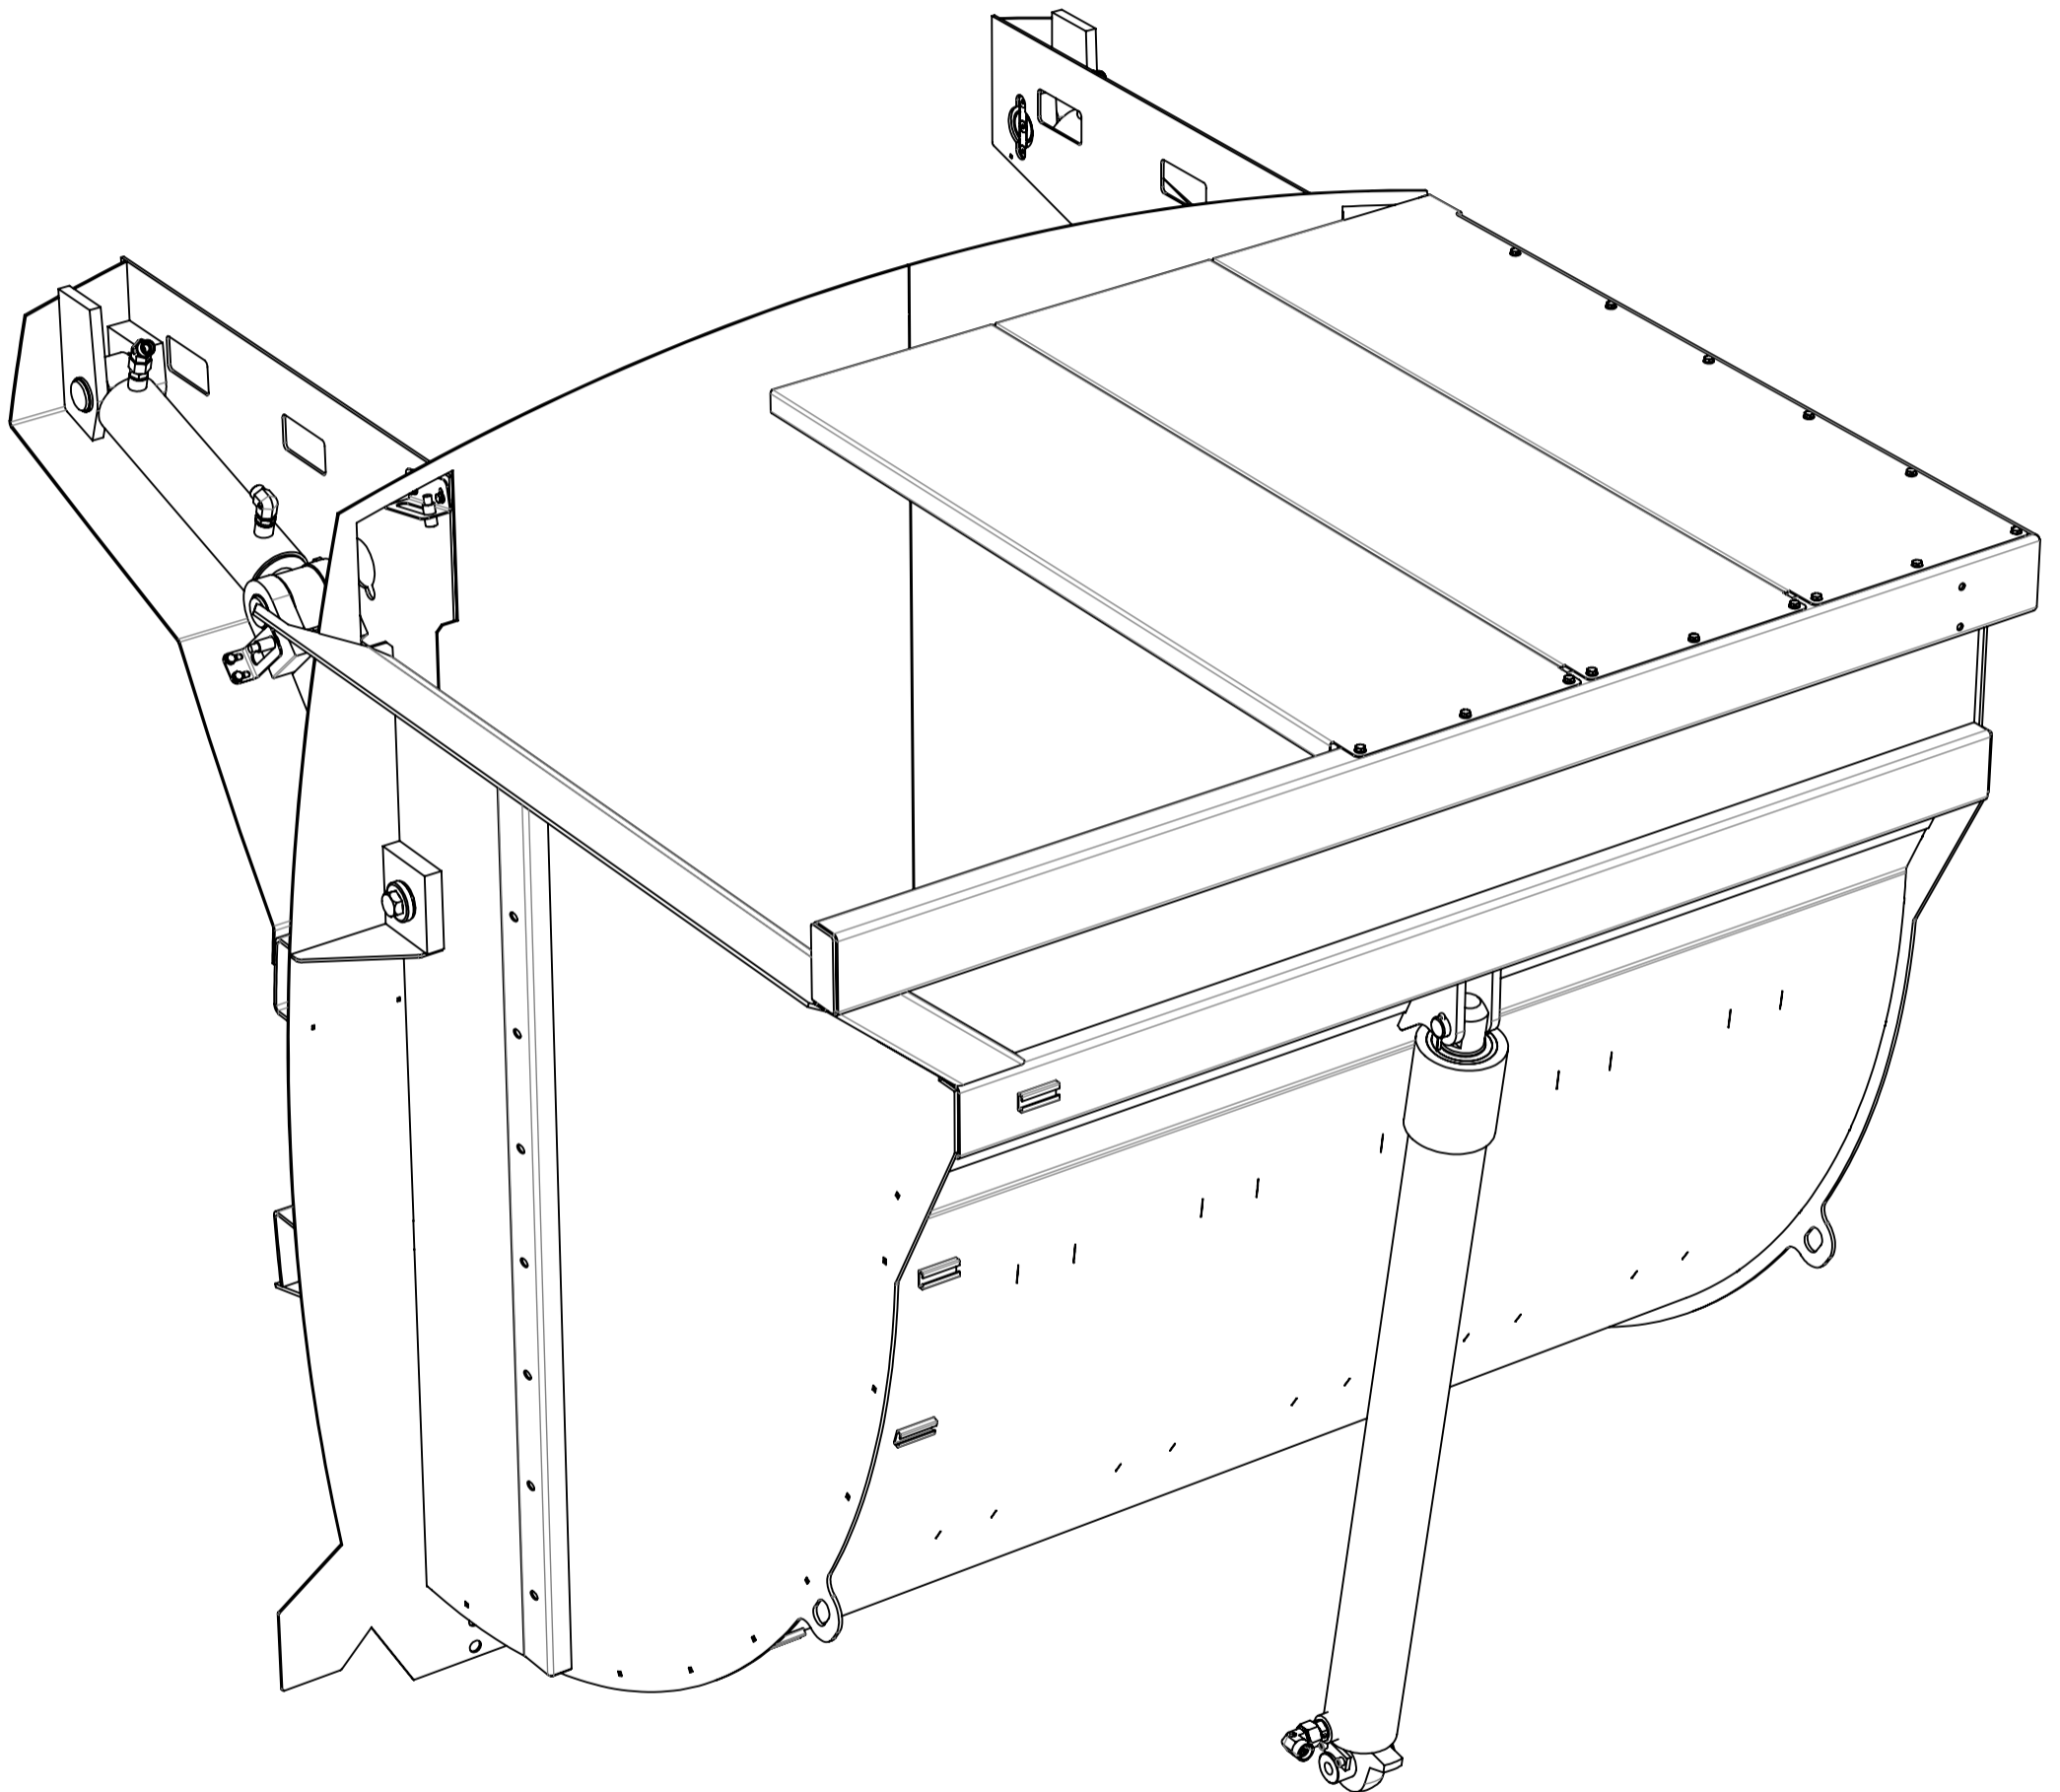 


 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

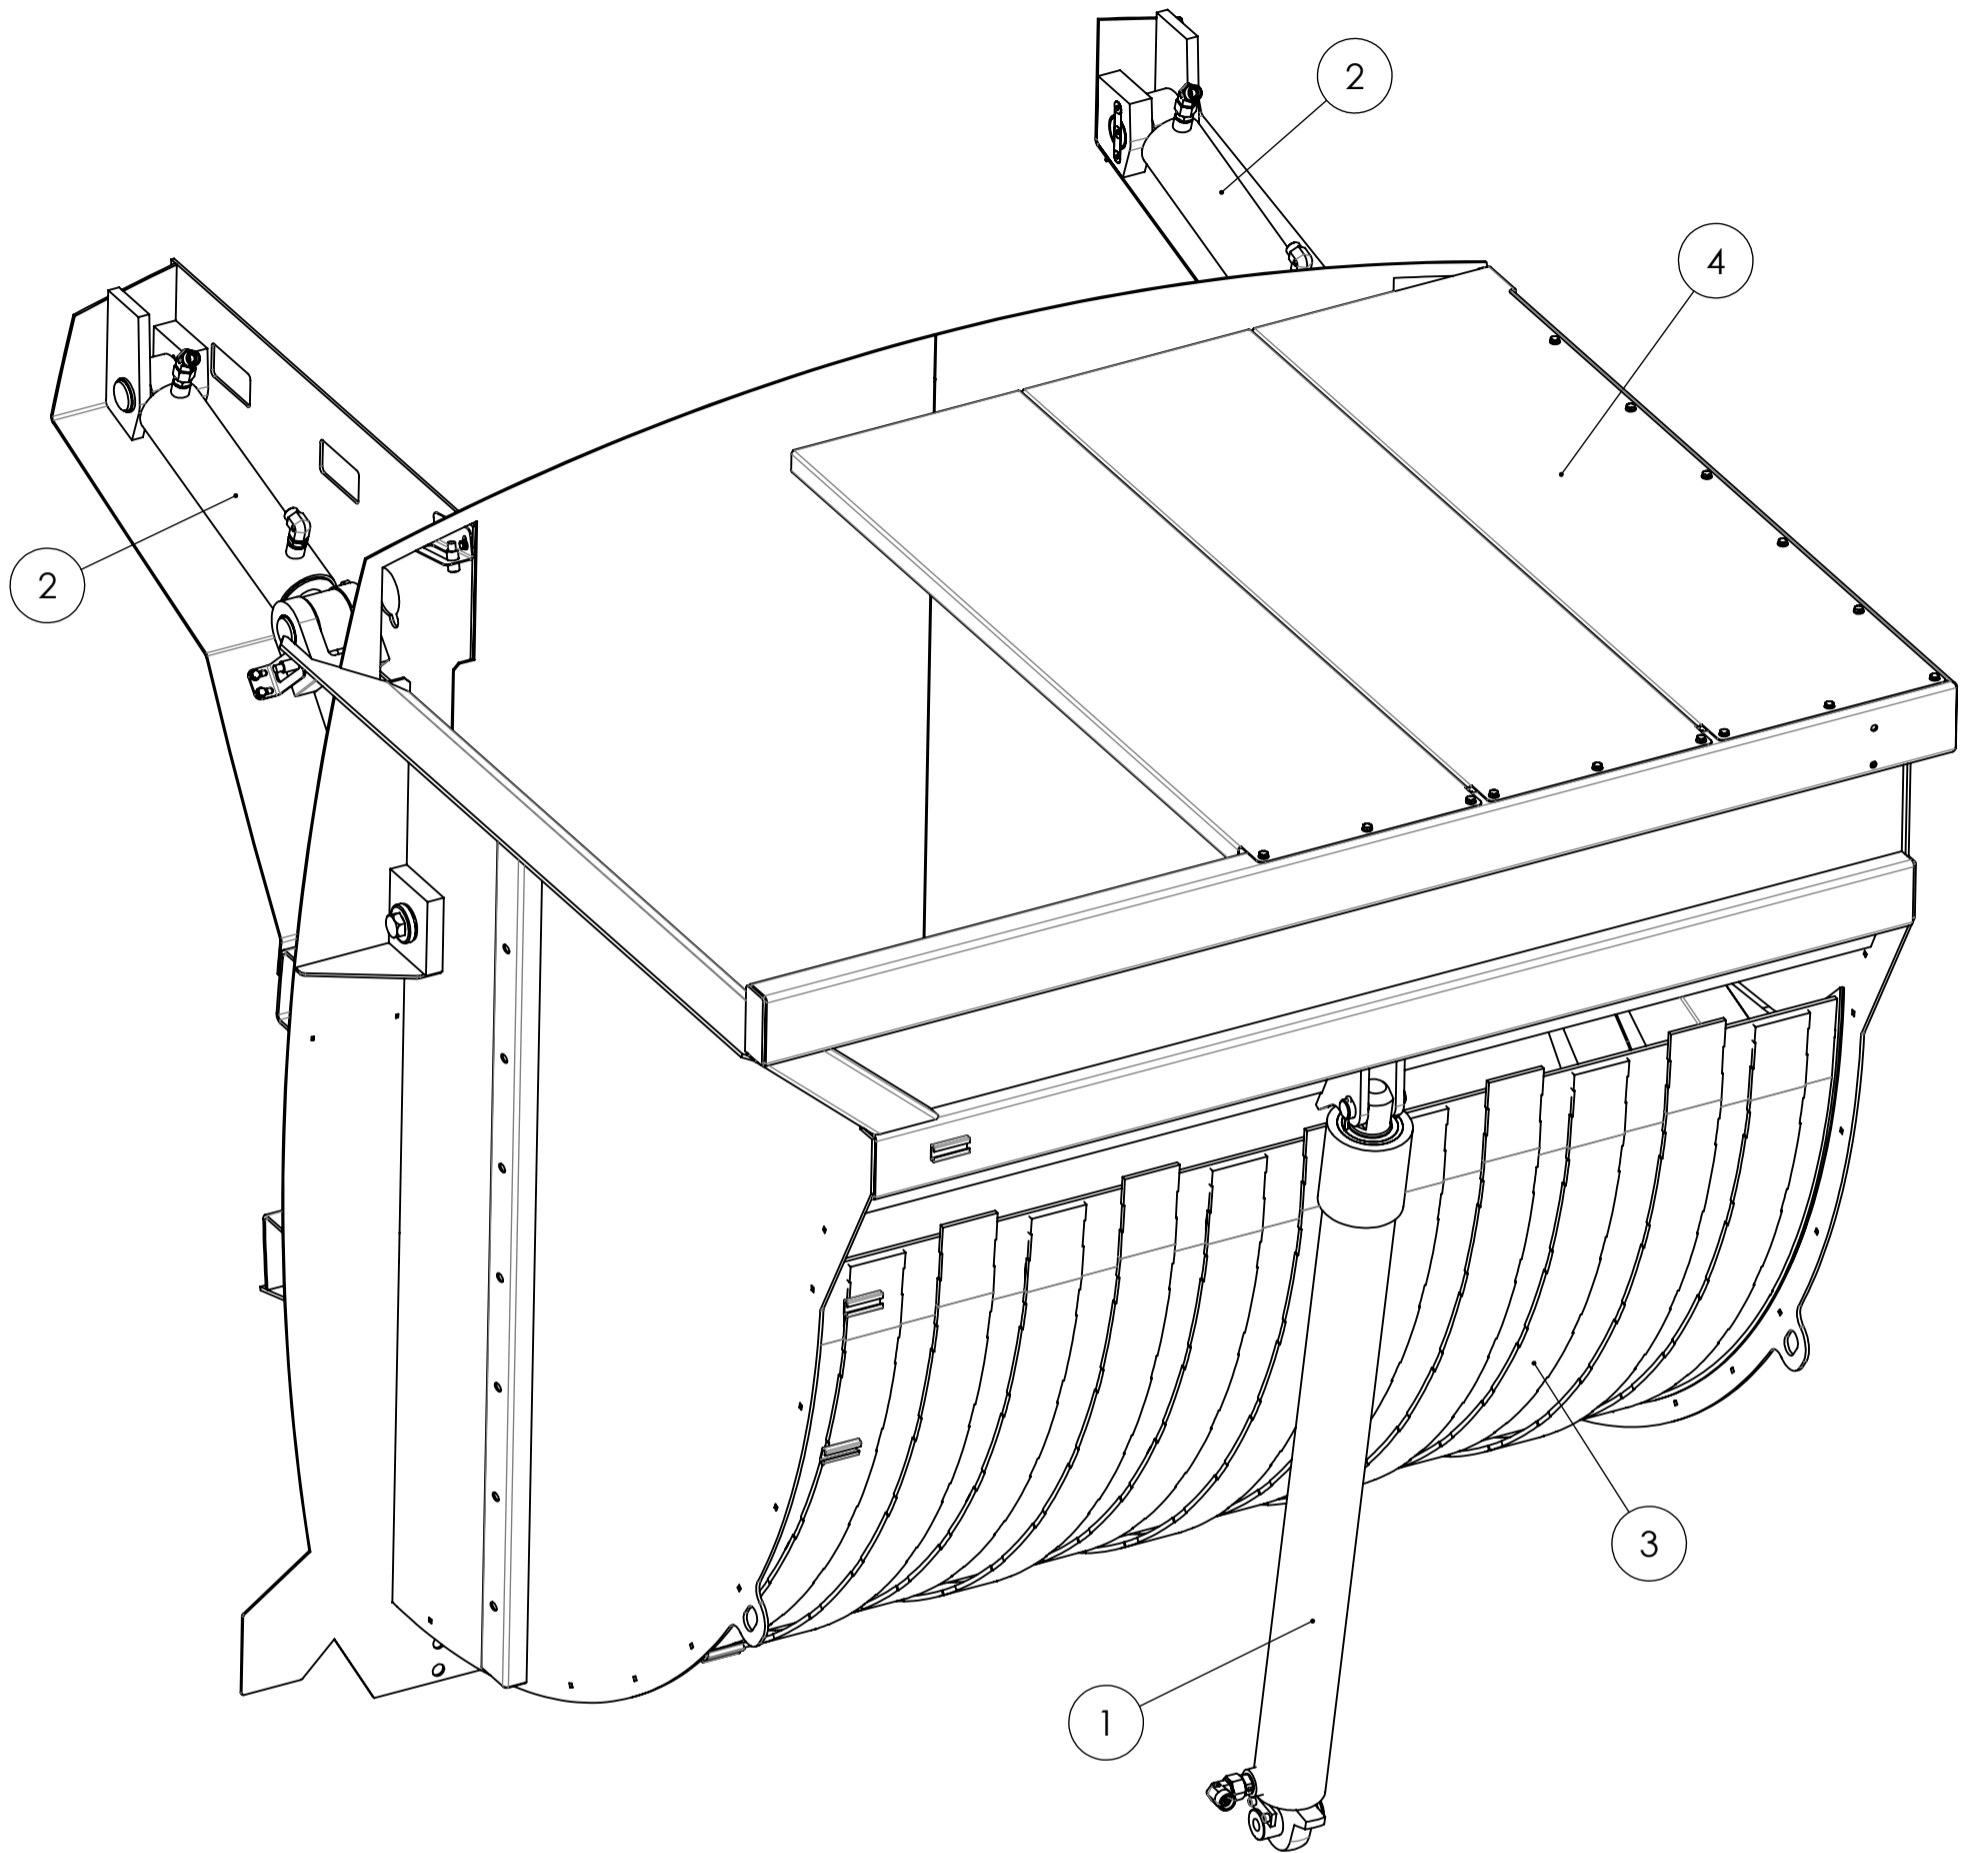


4	Takplåt	Roof plate	1524891	1
3	Pendel SL enfacks	Pendulum SL	1520784	7
2	Hydraulcylinder	Hydraulic cylinder	1524061	2
1	Hydraulcylinder	Hydraulic cylinder	1516219	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

  Note! The images are for reference only. Components marked with \* contact spare part branch.

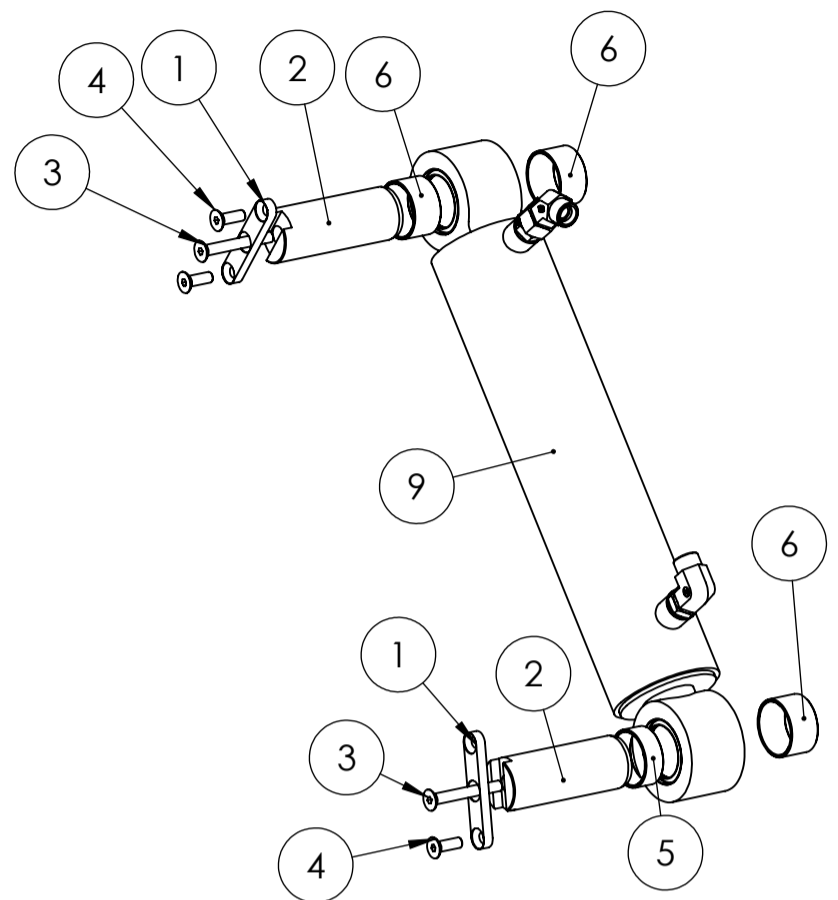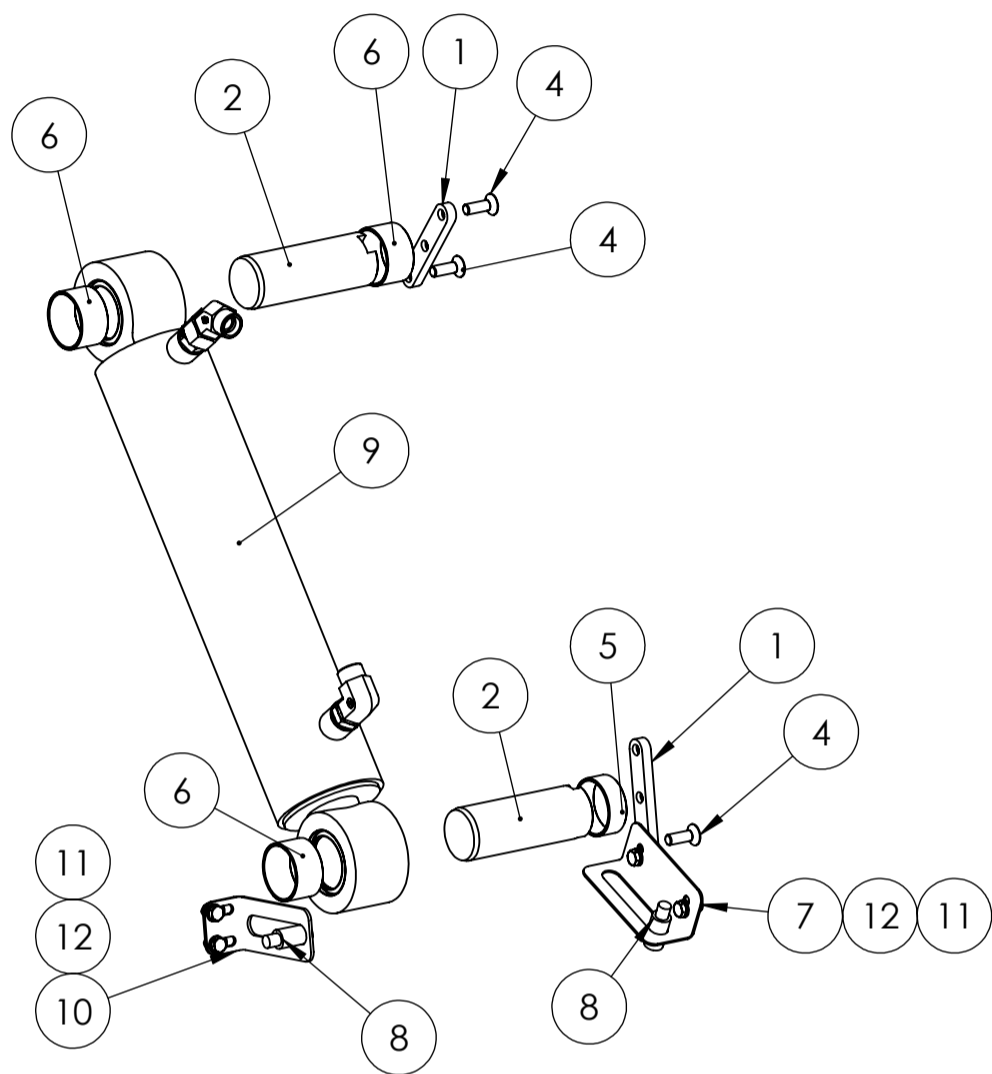

12	Skruv	Screw	1506640	
11	Bricka	Washer	1504899	
10	Givartfäste pendel	Sensor bracket	1522099	4
9	Hydraulcylinder	Hydraulic cylinder	1524061	2
8	Induktiv givare	Inductive sensor	1505621	
7	Givarfäste	Sensor bracket	1517000	2
6	Bussning	Bushing	1514831	
5	Bussning	Bushing	1516539	
4	Skruv	Screw	1505618	2
3	Skruv	Screw	1505619	2
2	Bult	Bolt	1516518	
1	Låskil	Wedge	504507	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

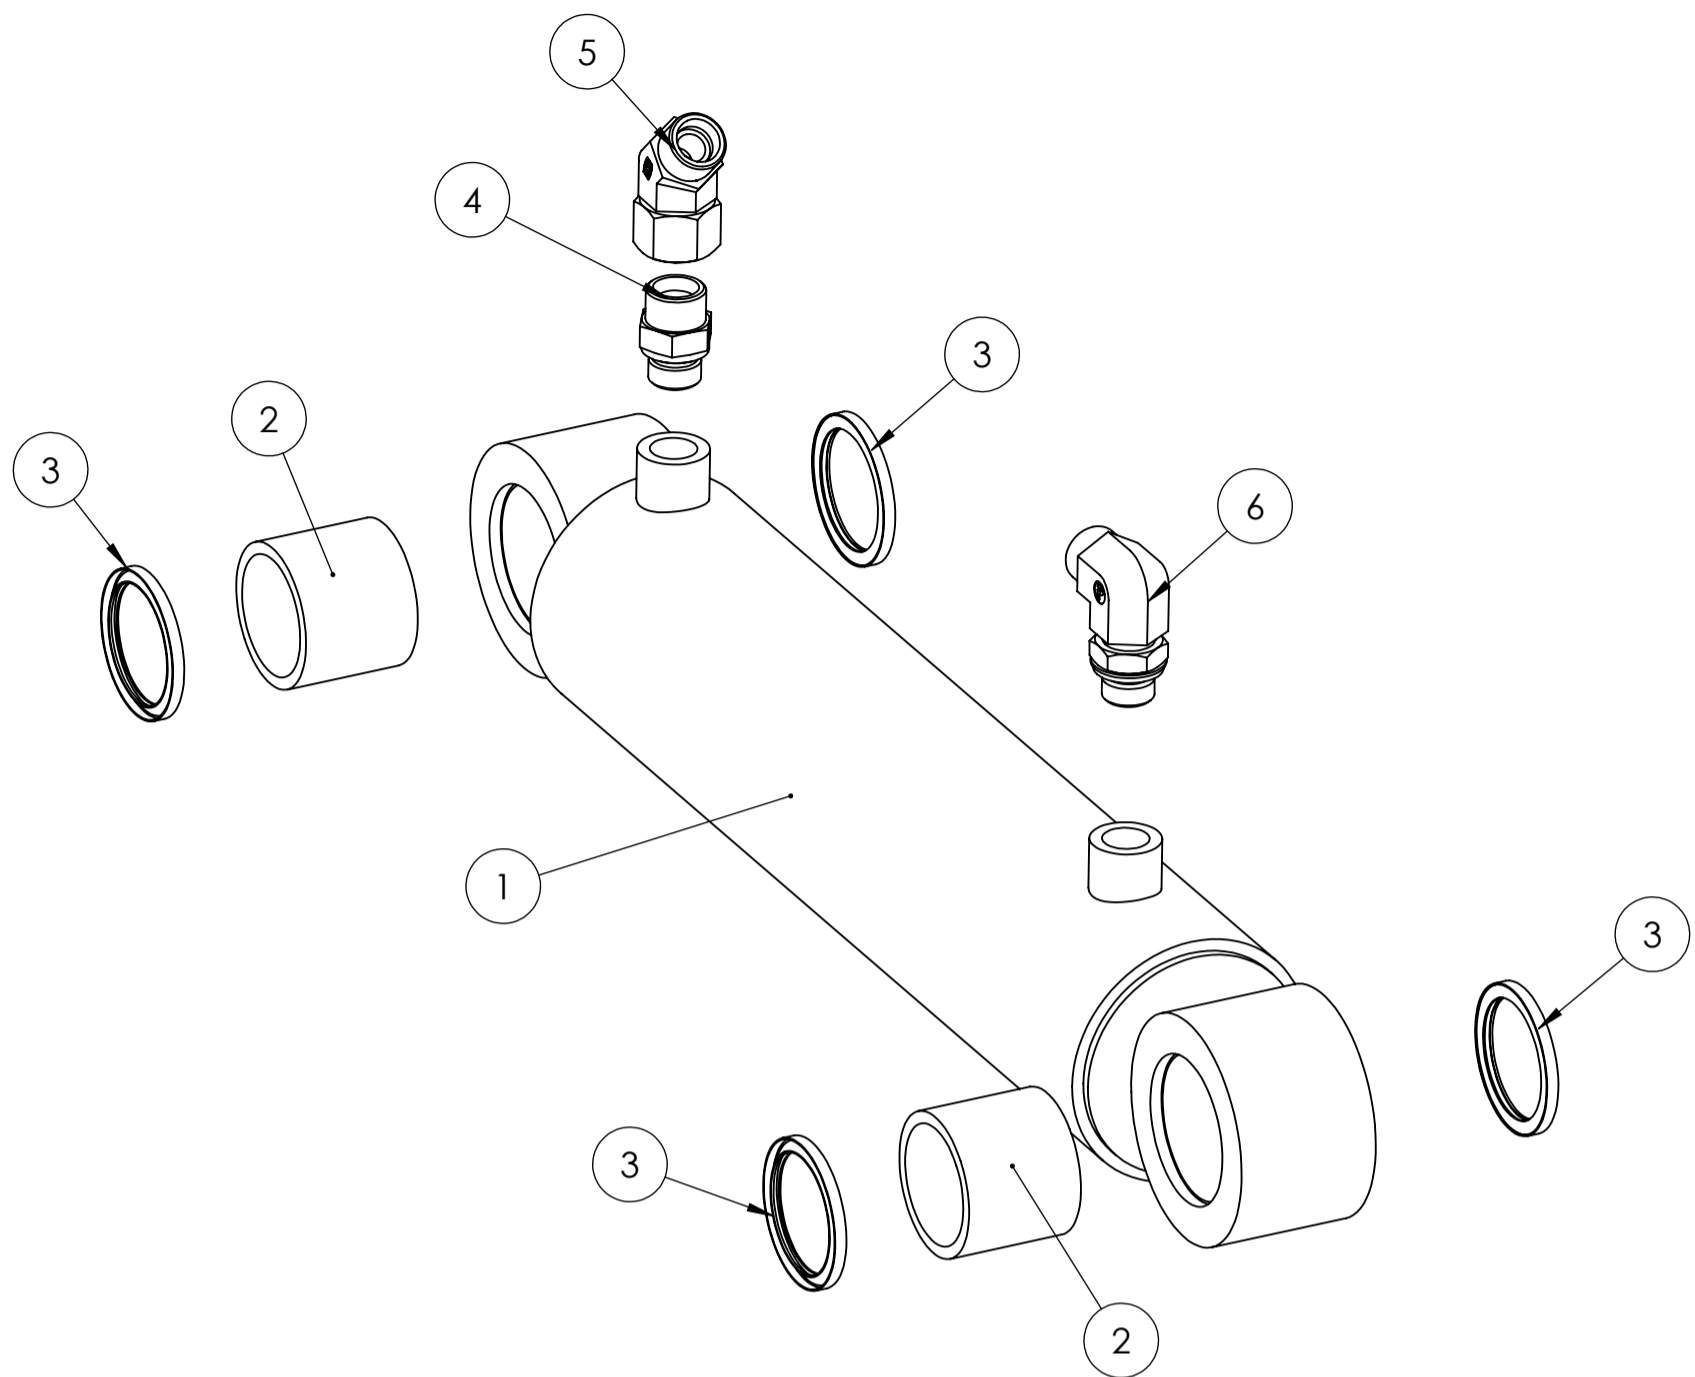

6	Adapter	Adapter	1506236	
5	Adapter	Adapter	1505924	
4	Adapter	Adapter	1506192	
3	Radialtätning	Radial seal	1515638	
2	Bussning	Bushing	1519571	
1	Hydraulcylinder	Hydraulic cylinder	1524039	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.


Hydraulcylinder-Hydraulic cylinder

1520839  
2014-02-14

Sidlastare komprimatorhus-Side loader Compress Module


Rev. 1

 Date: 2014-03-27

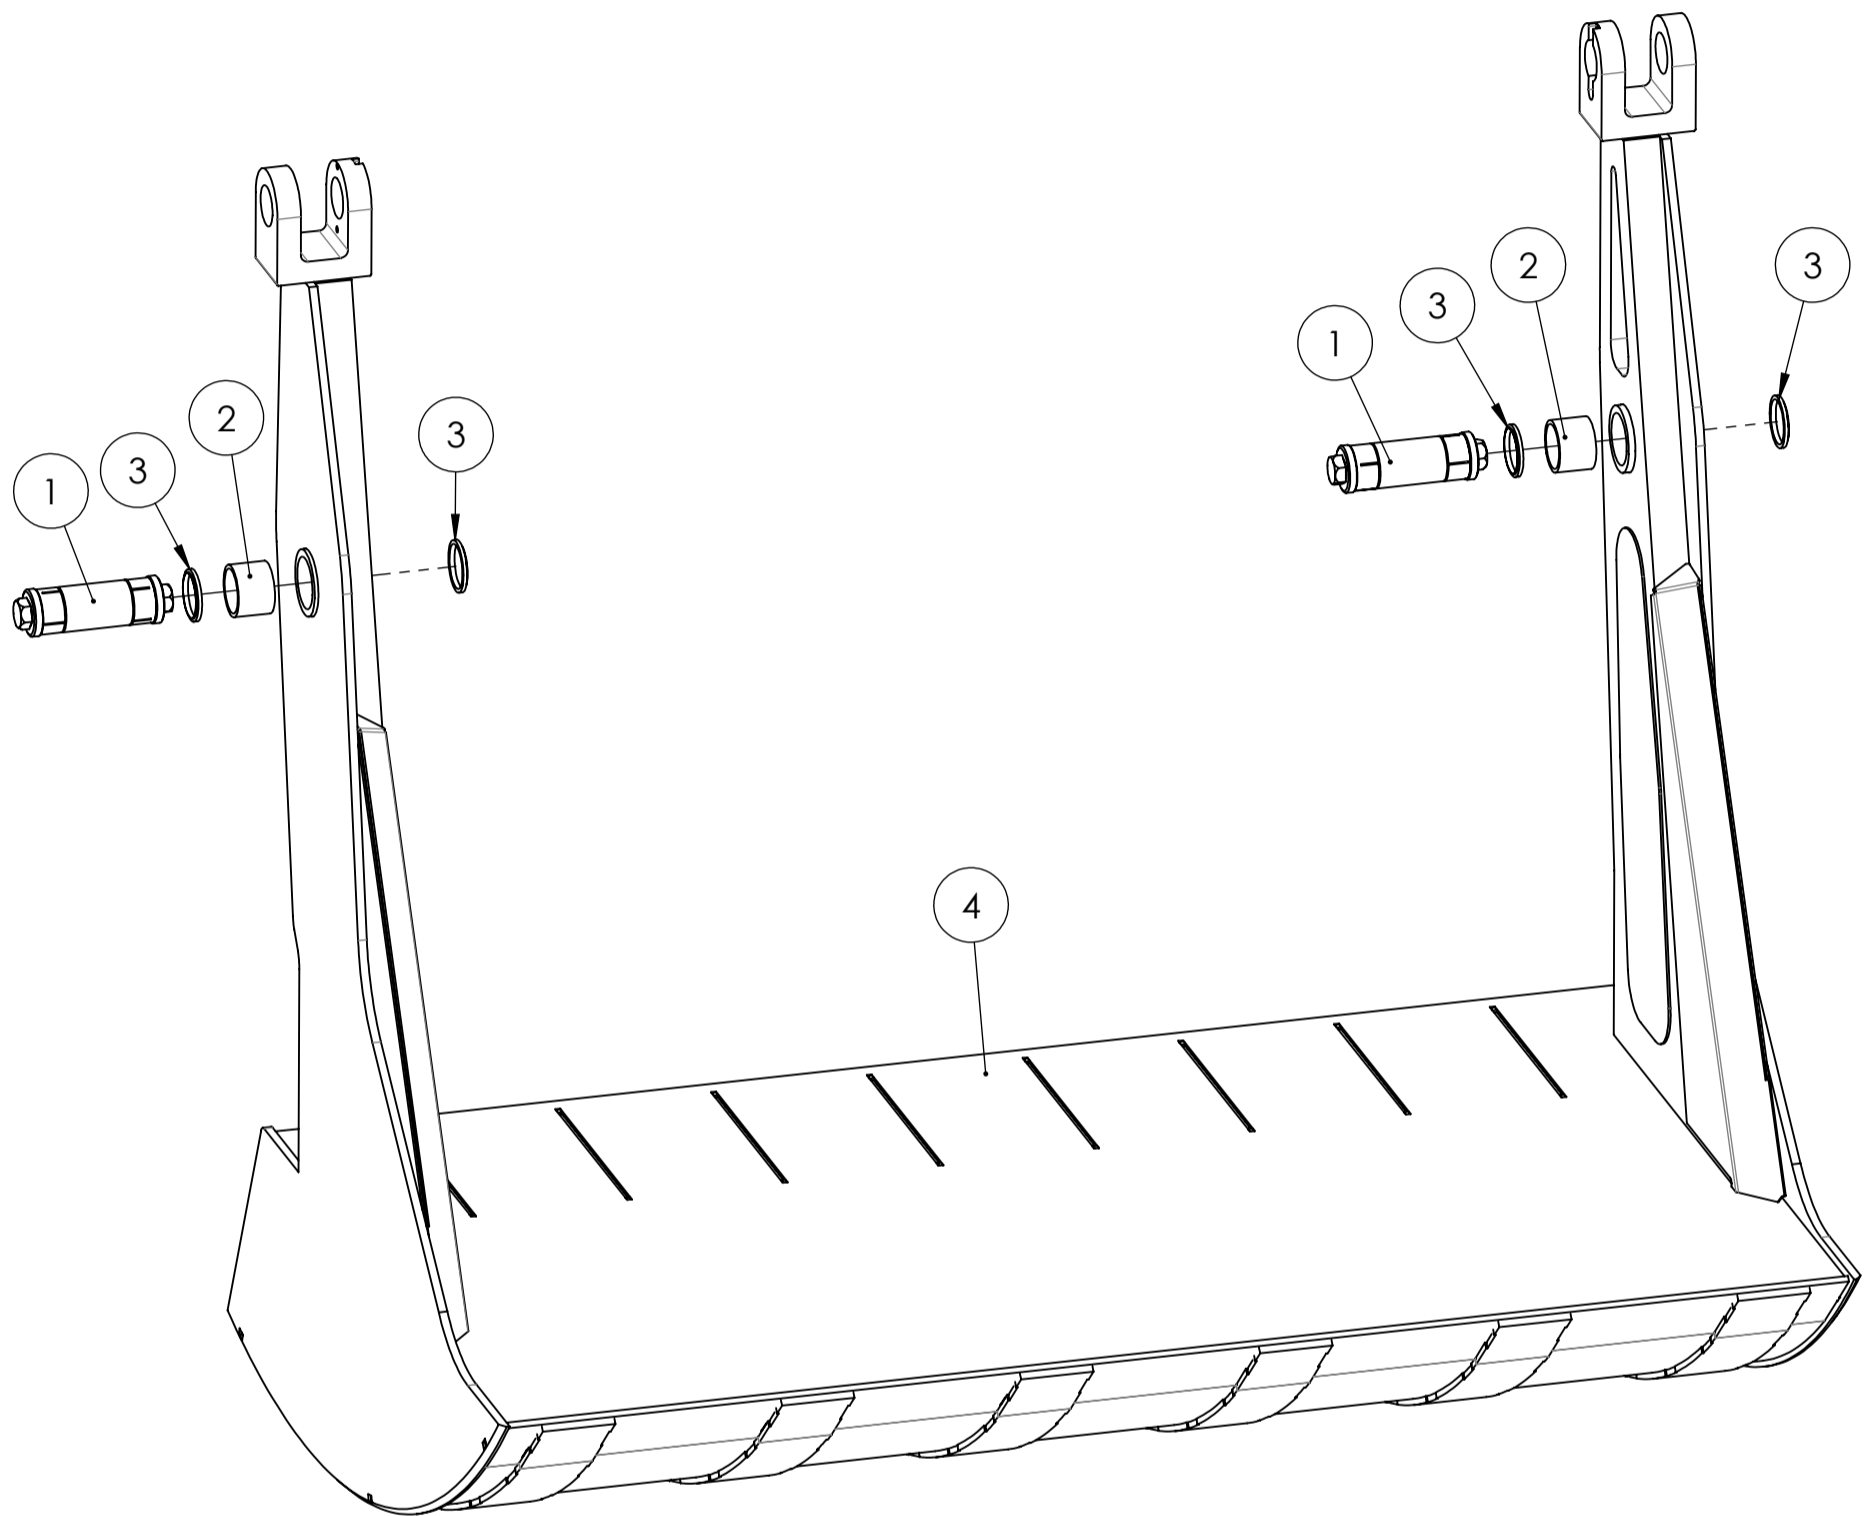

4	Pendel SL enfacks	Pendulum	1520784	7
3	Radialtätning	Radial seal	1516530	
2	Bussning	Bushing	1518404	
1	Expanderbult	Expansion bolt	1516512	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

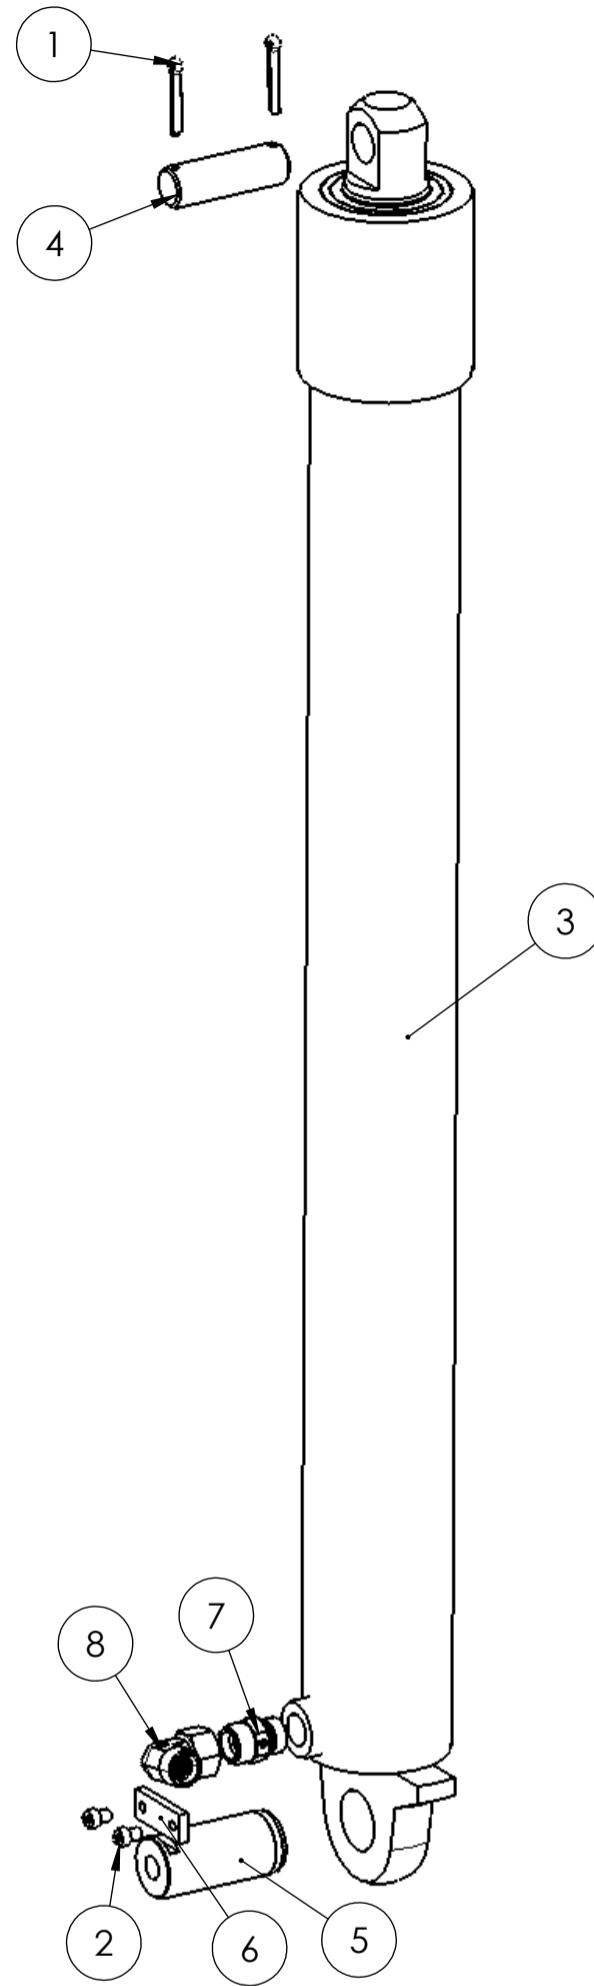

8	Slangbrottsventil	Hose break valve	1519791	
7	Adapter	Adapter	504730	
6	Låsplatta	Locking plate	504332	2
5	Bult	Bolt	504781	
4	Bult	Bolt	1516542	
3	Hydraulcylinder	Hydraulic cylinder	1516219	
2	Skruv	Screw	1512953	
1	Saxpinne	Cotter pin	1519179	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

Tippcylinder-Tilt cylinder


1520839  
2014-02-14

Sidlastare komprimatorhus-Side loader Compress Module

Rev. 1

Date: 2014-03-27

 
Page  
6 / 7

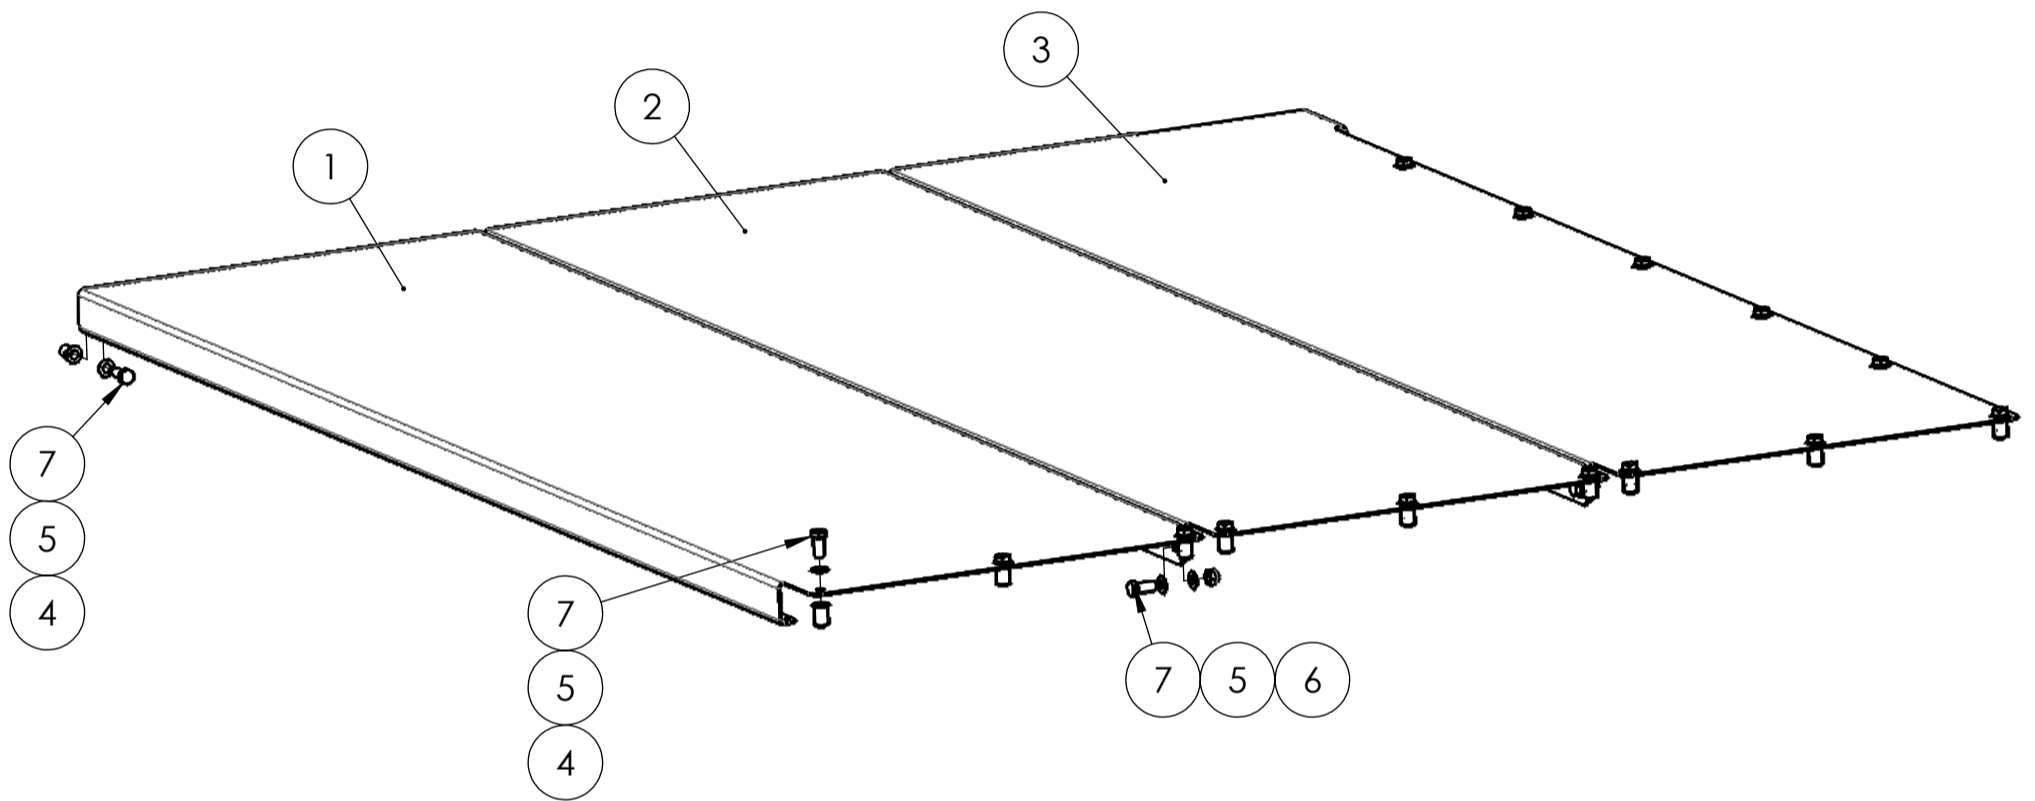


7	Skruv	Screw	1505263	
6	Låsmutter	Locking nut	1505255	
5	Bricka	Washer	1504899	
4	Blindnitmutter	Rivet nut	1504886	
3	SI takplåt mitten	Roof plate	1524893	1
2	SI takplåt mitten	Roof plate	1524892	1
1	Takplåt sidlastare	Roof plate	1524860	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Kärlfångare Sidlastare STD Bin catcher Side loader STD

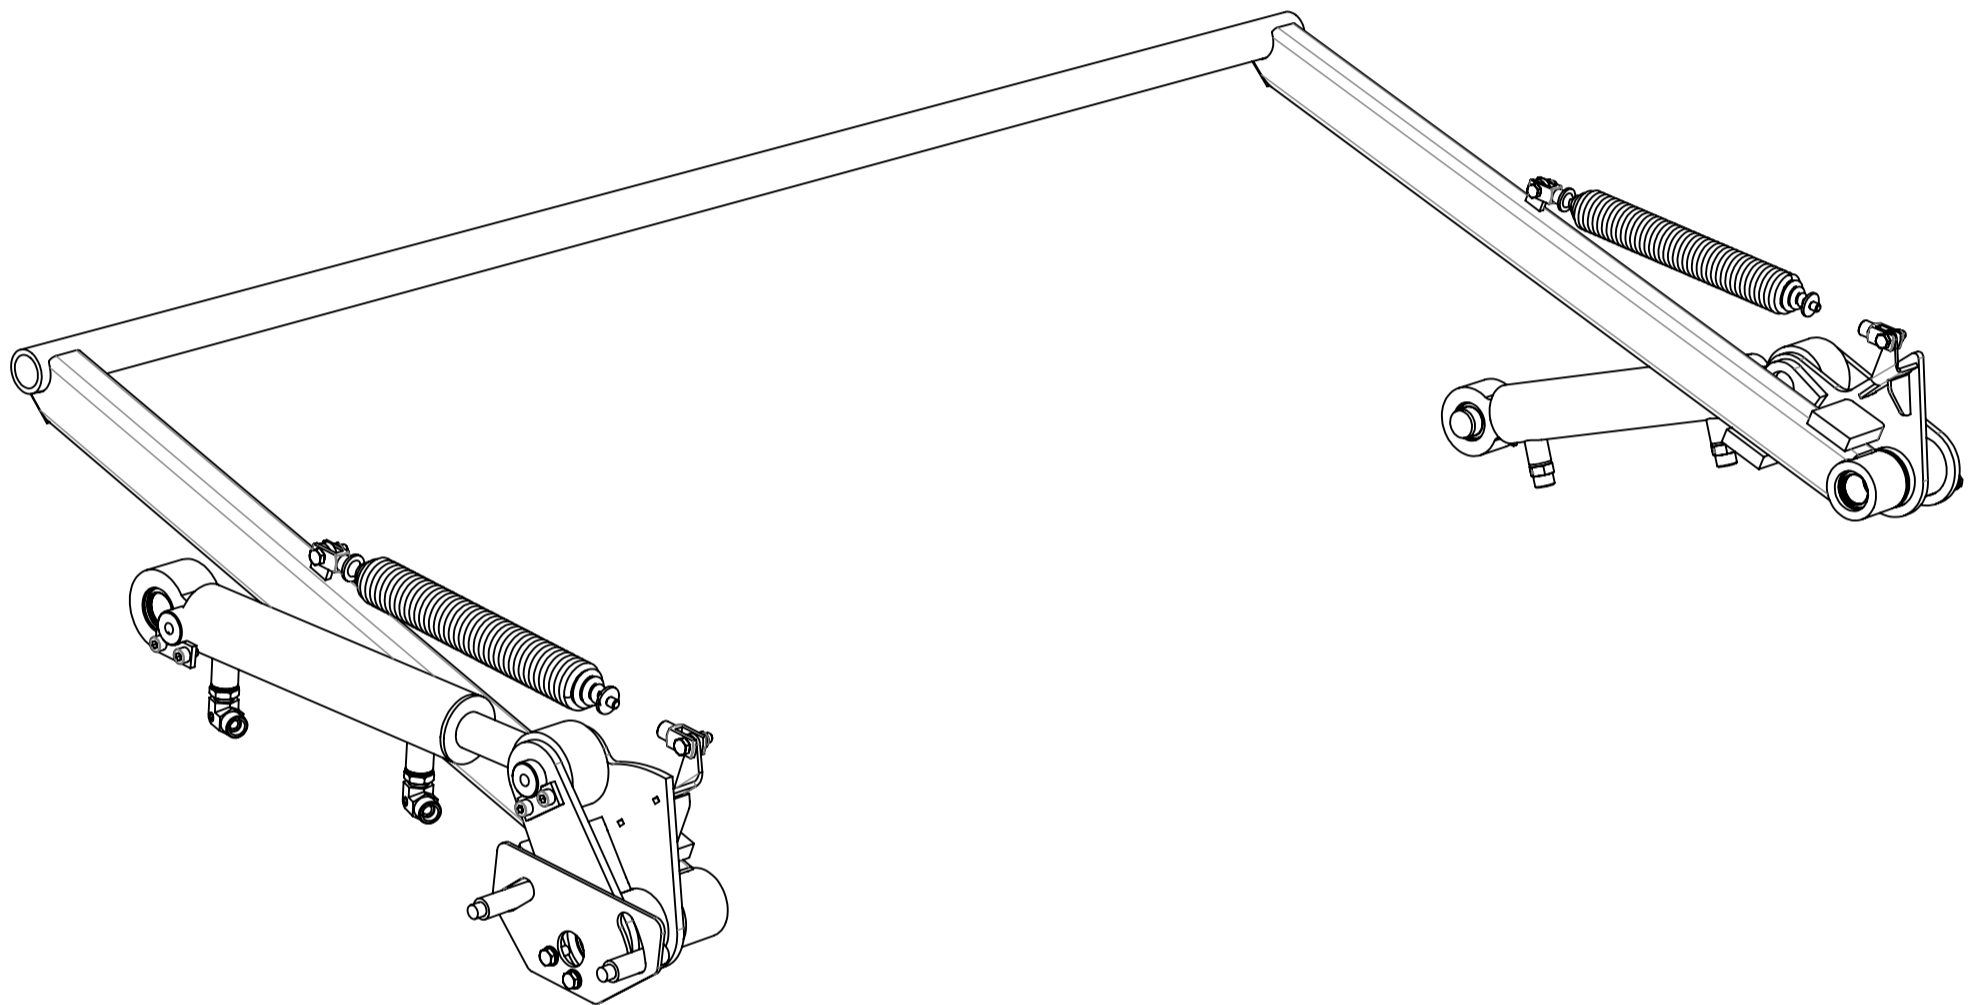 

 
Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

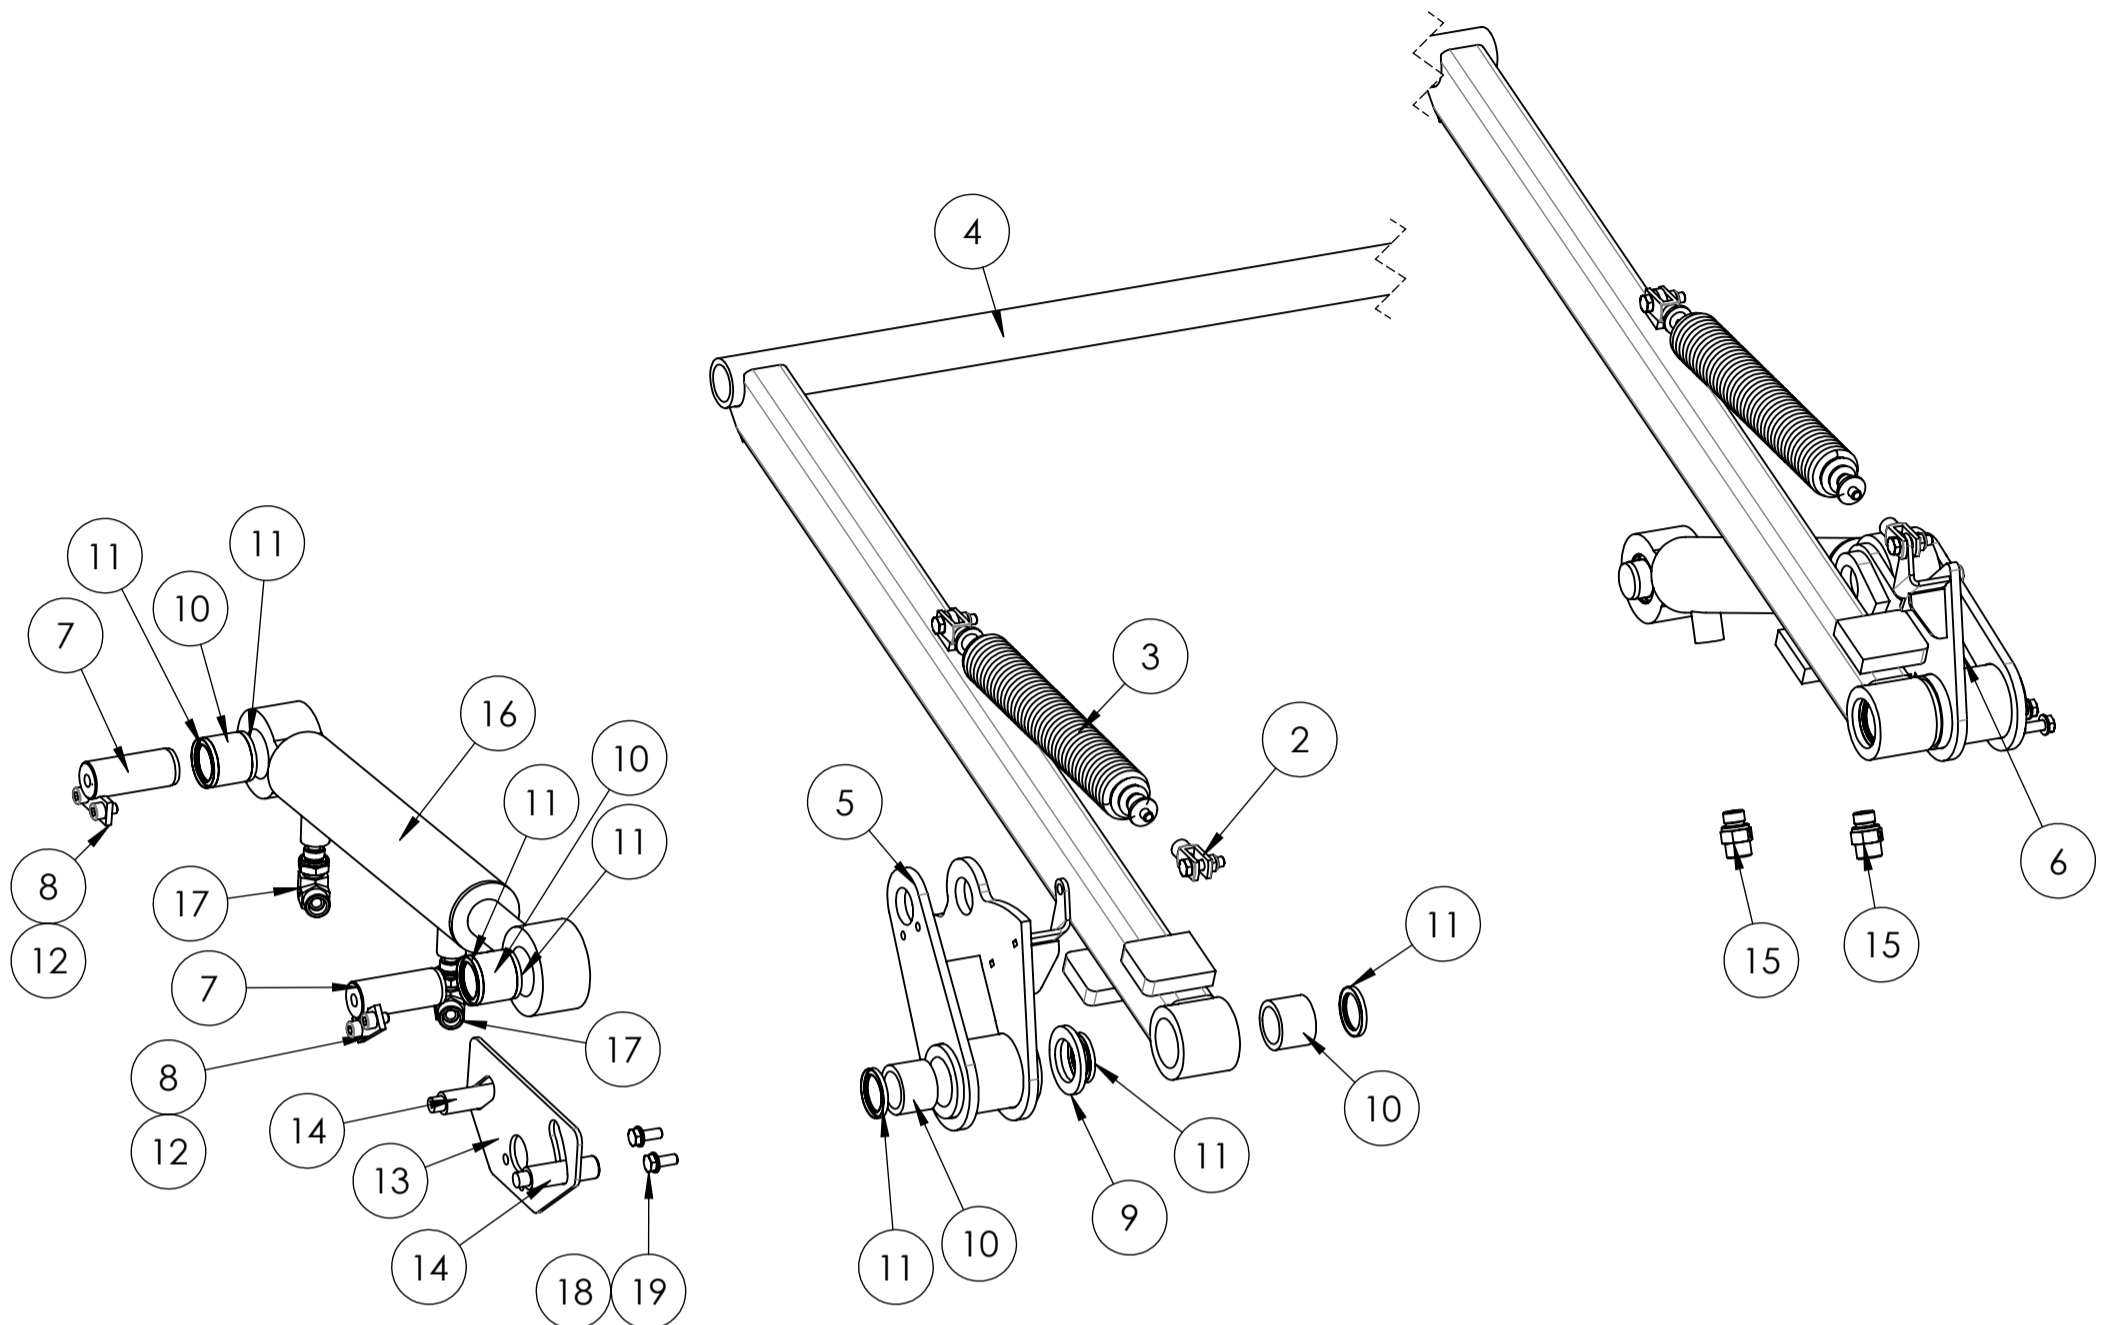


19	Skruv	Screw	1505263	
18	Bricka	Washer	1504899	
17	Adapter	Adapter	1505700	
16	Hydraulcylinder	Hydraulic cylinder	1521146	
15	Adapter	Adapter	1505025	
14	Induktiv givare	Sensor	1511077	
13	Givarfäste	Sensor bracket	1521725	1
12	Skruv	Screw	1512953	
11	Radialtätning	Seal	1515635	
10	Bussning	Bushing	1518675	
9	Bussning	Bushing	1508308	
8	Låsplatta	Locking plate	504335	2
7	Bult	Bolt	1519356	
6	Kärlfångarfäste SL	Bin cather bracket	1521833	2
5	Kärlfångarfäste SL	Bin cather bracket	1521860	2
4	Kärlfångararm SL	Bin cather arm	1516709	3
3	Fjäder	Spring	1509289	
2	Gaffellänk	End fitting	1507830	3
1	Kärlfångare SL	Bin catcher SL	1521832	4
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Sidlastararm - Loading arm Side Loader

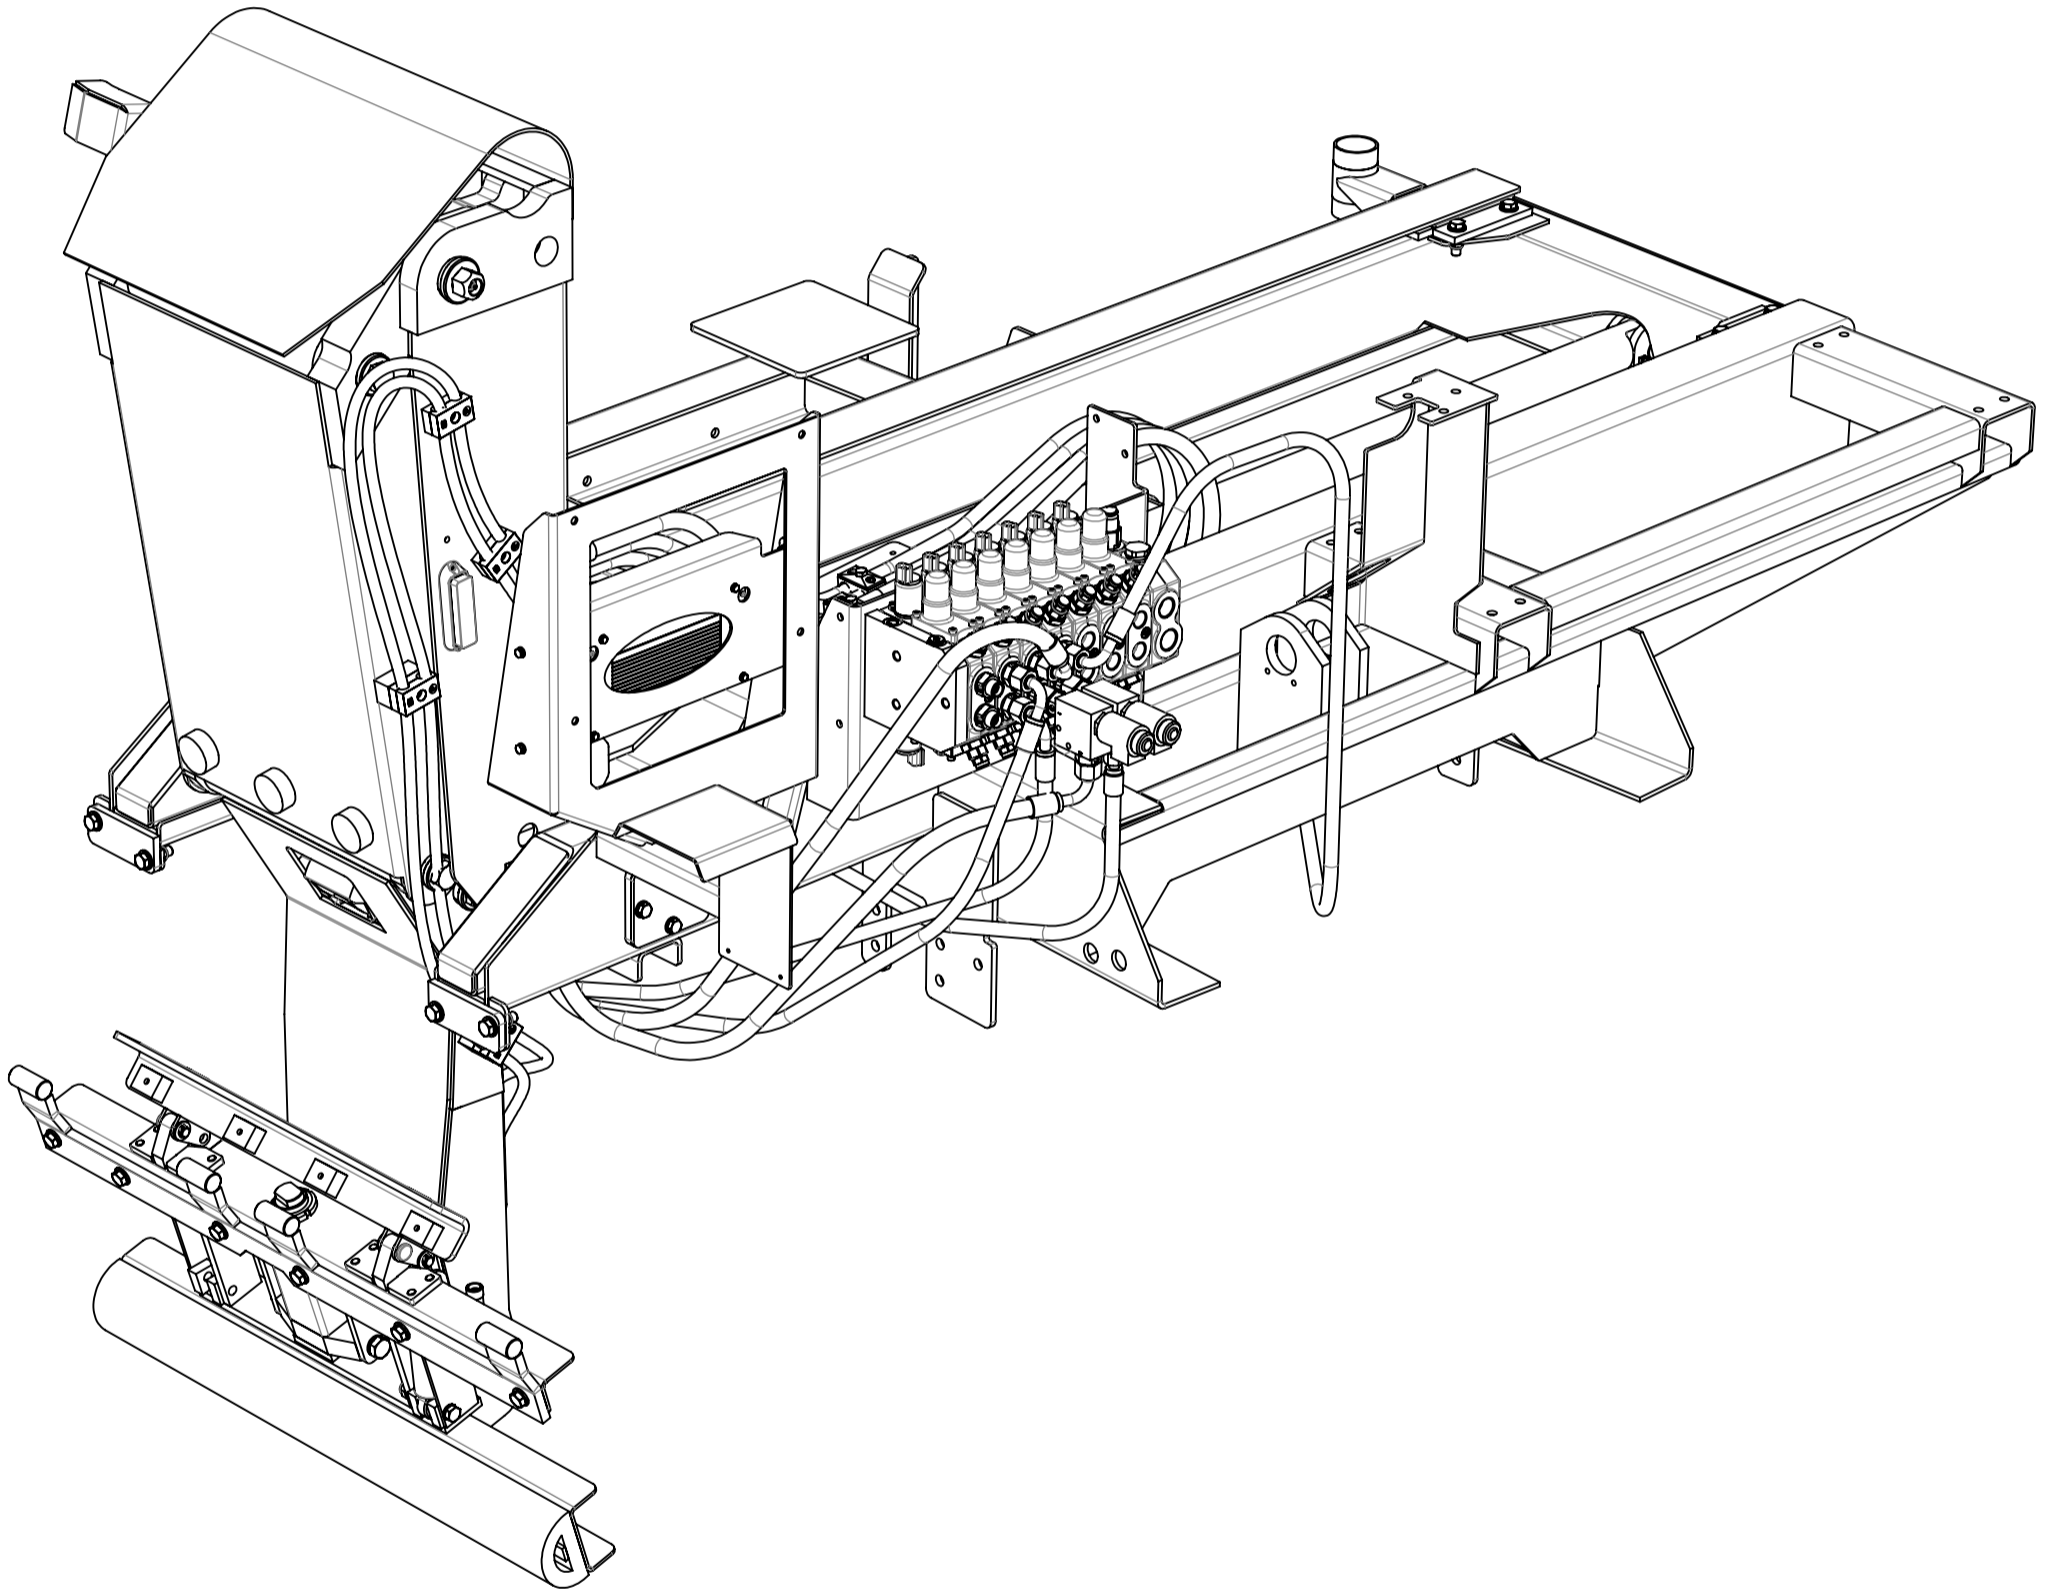 


 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

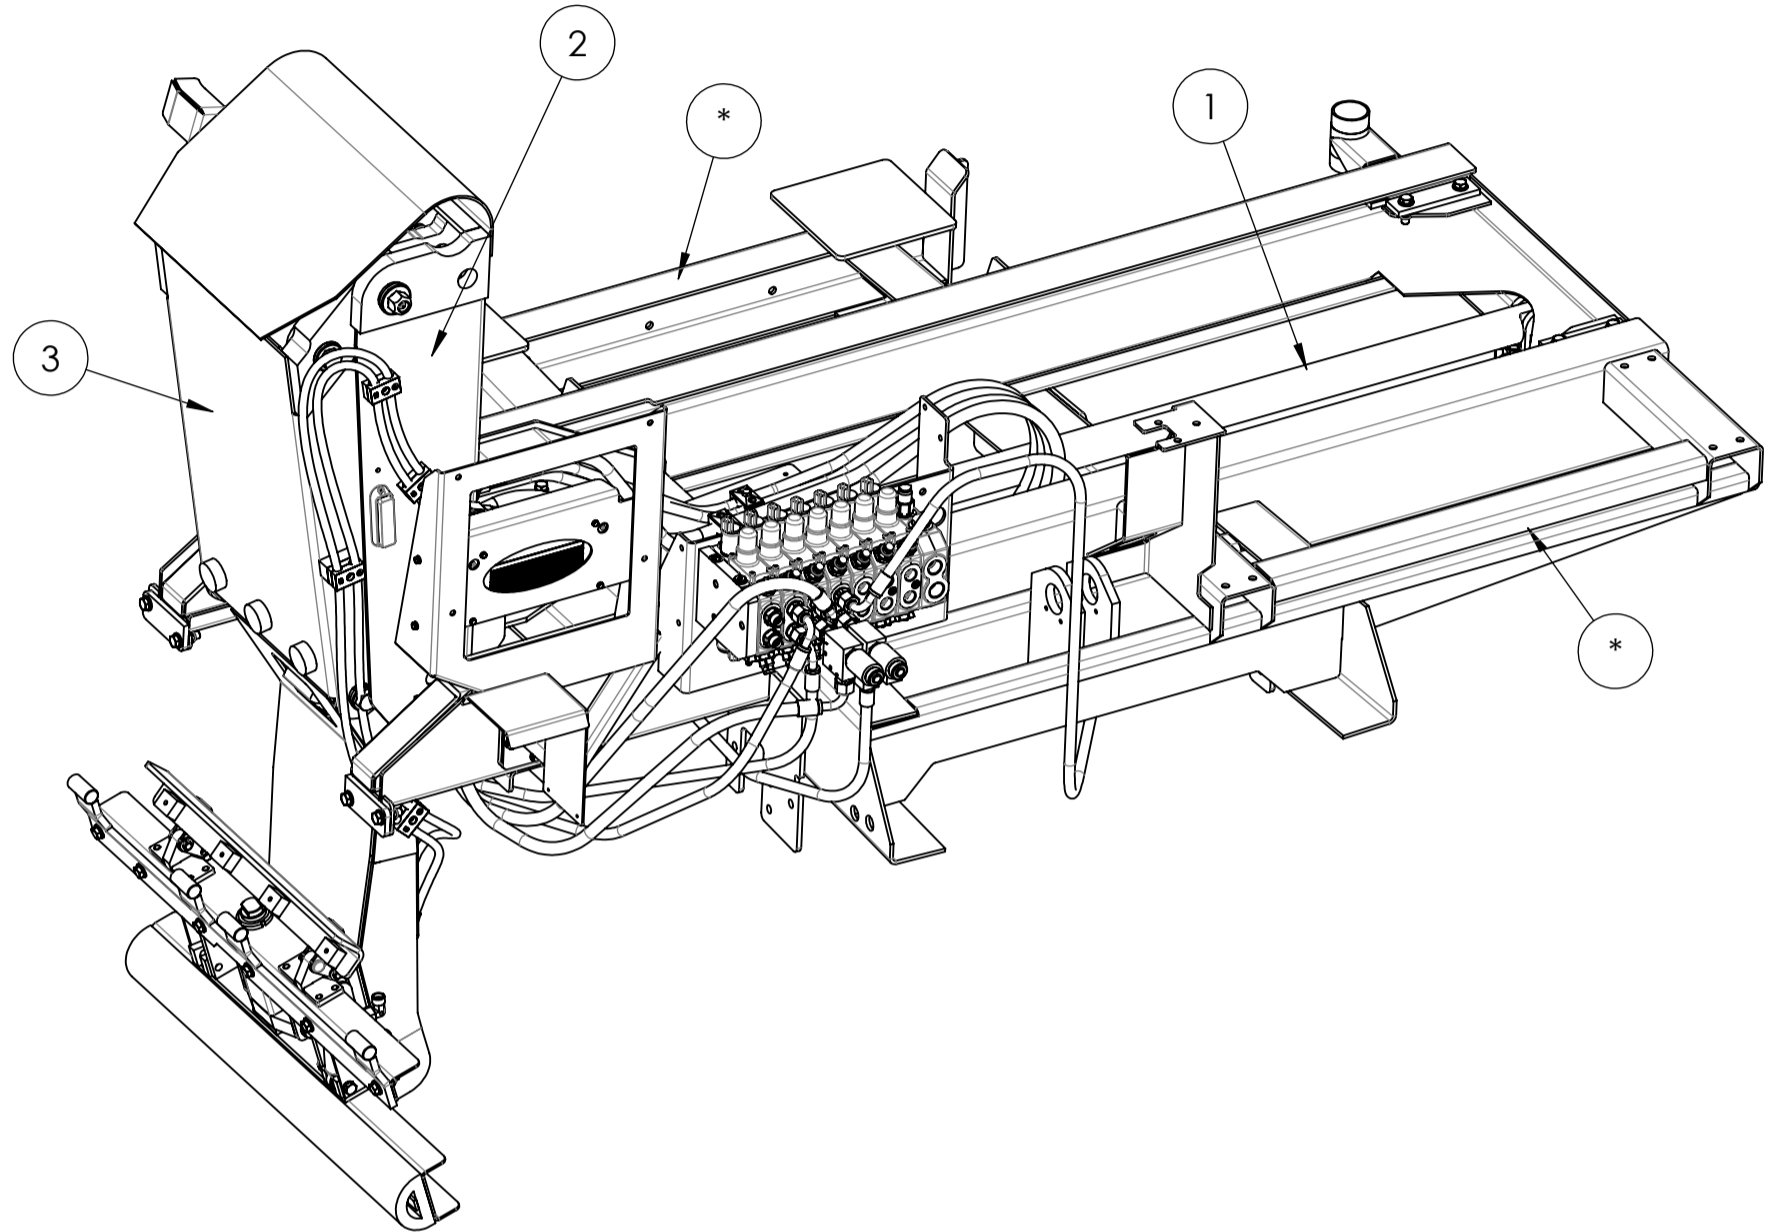


3	Mellanarm SL enkel	Middle arm SL	1523924	1
2	Inre Arm SL	Inner arm SL	1523923	2
1	Hydraulcylinder	Hydraulic cylinder	1515134	2
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

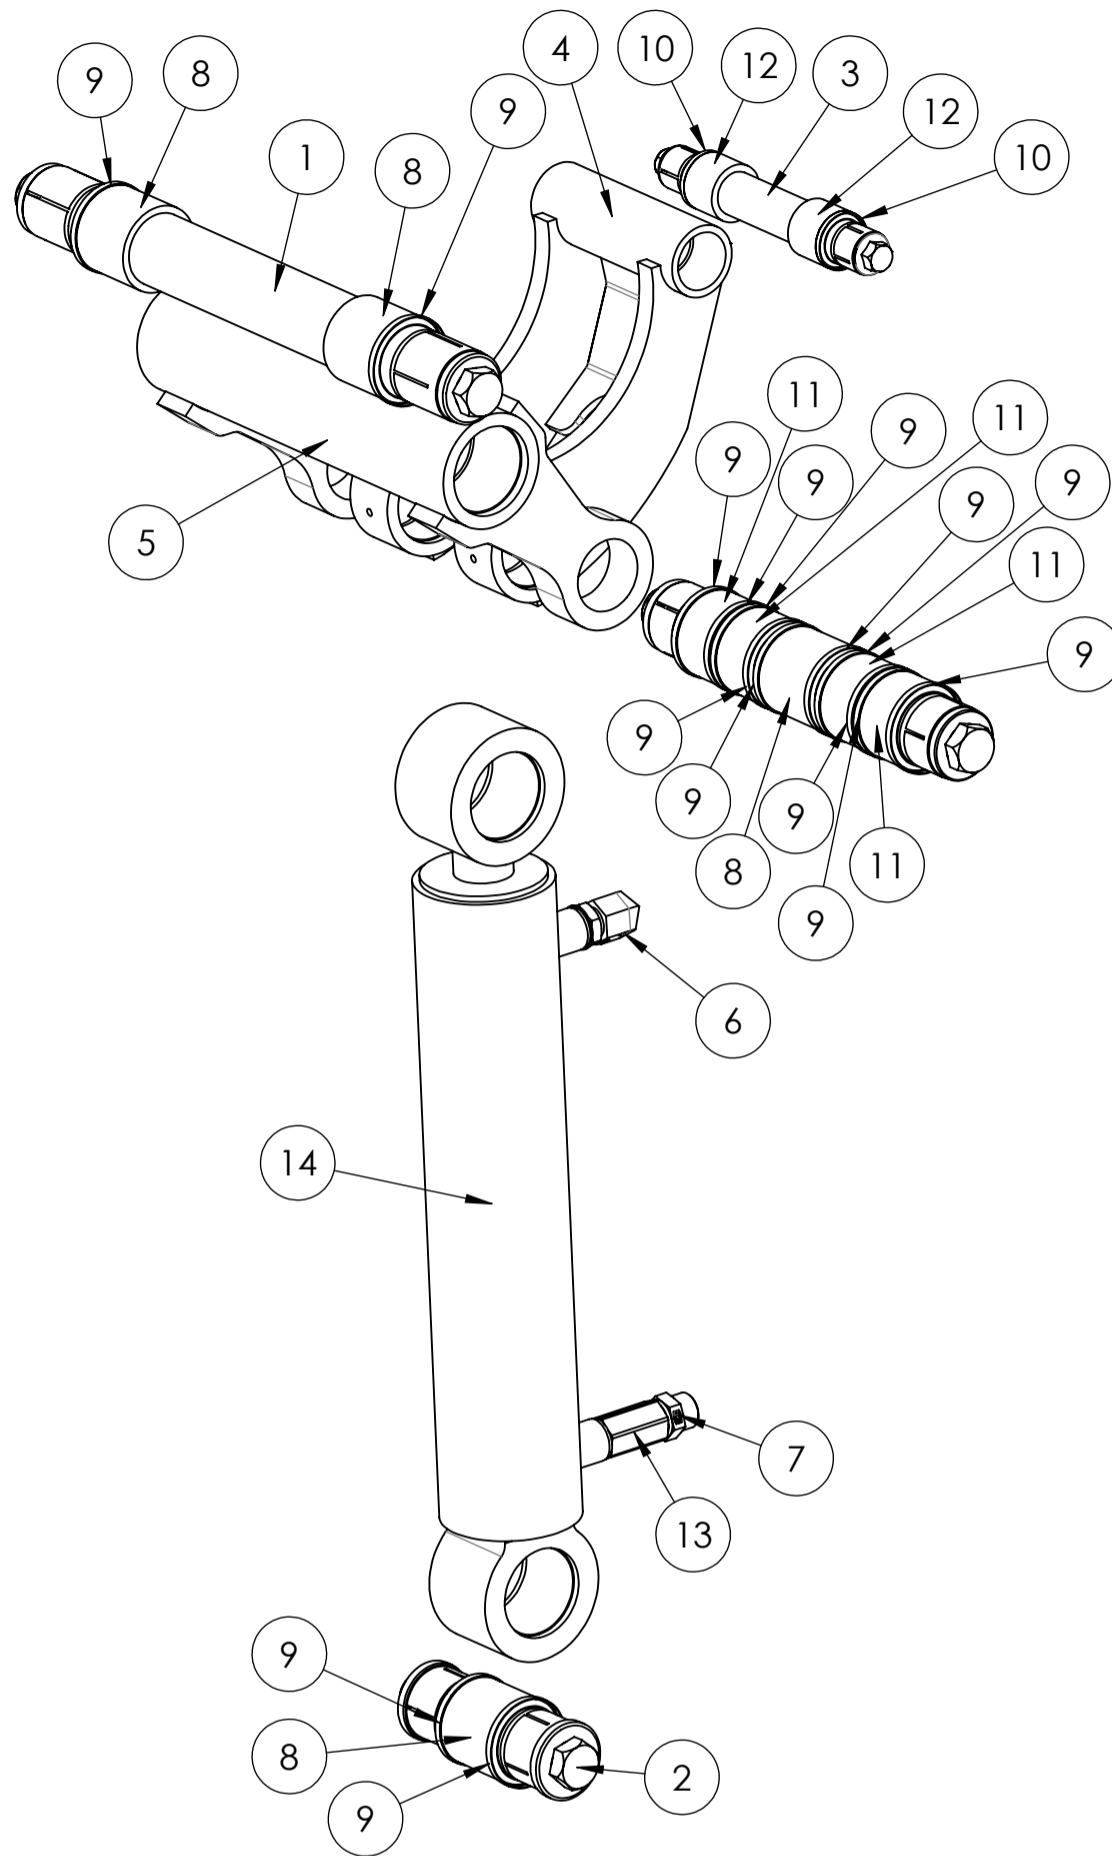


14	Hydraulcylinder	Hydraulic cylinder	1523129	2
13	Slangbrottsventil	Hose break valve	1514541	2
12	Bussning	Bushing	1518675	
11	Bussning	Bushing	1519572	
10	Radialtätning	Radial seal	1515635	
9	Radialtätning	Radial seal	1515638	
8	Bussning	Bushing	1519571	
7	Adapter	Adapter	1506192	
6	Adapter	Adapter	1506236	
5	Länk	Link	1515585	
4	Länk	Link	1518333	
3	Expanderbult 30x186	Expansion bolt	1515452	1
2	Expanderbult 50x122	Expansion bolt	1515428	1
1	Expanderbult 50x446	Expansion bolt	1515447	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

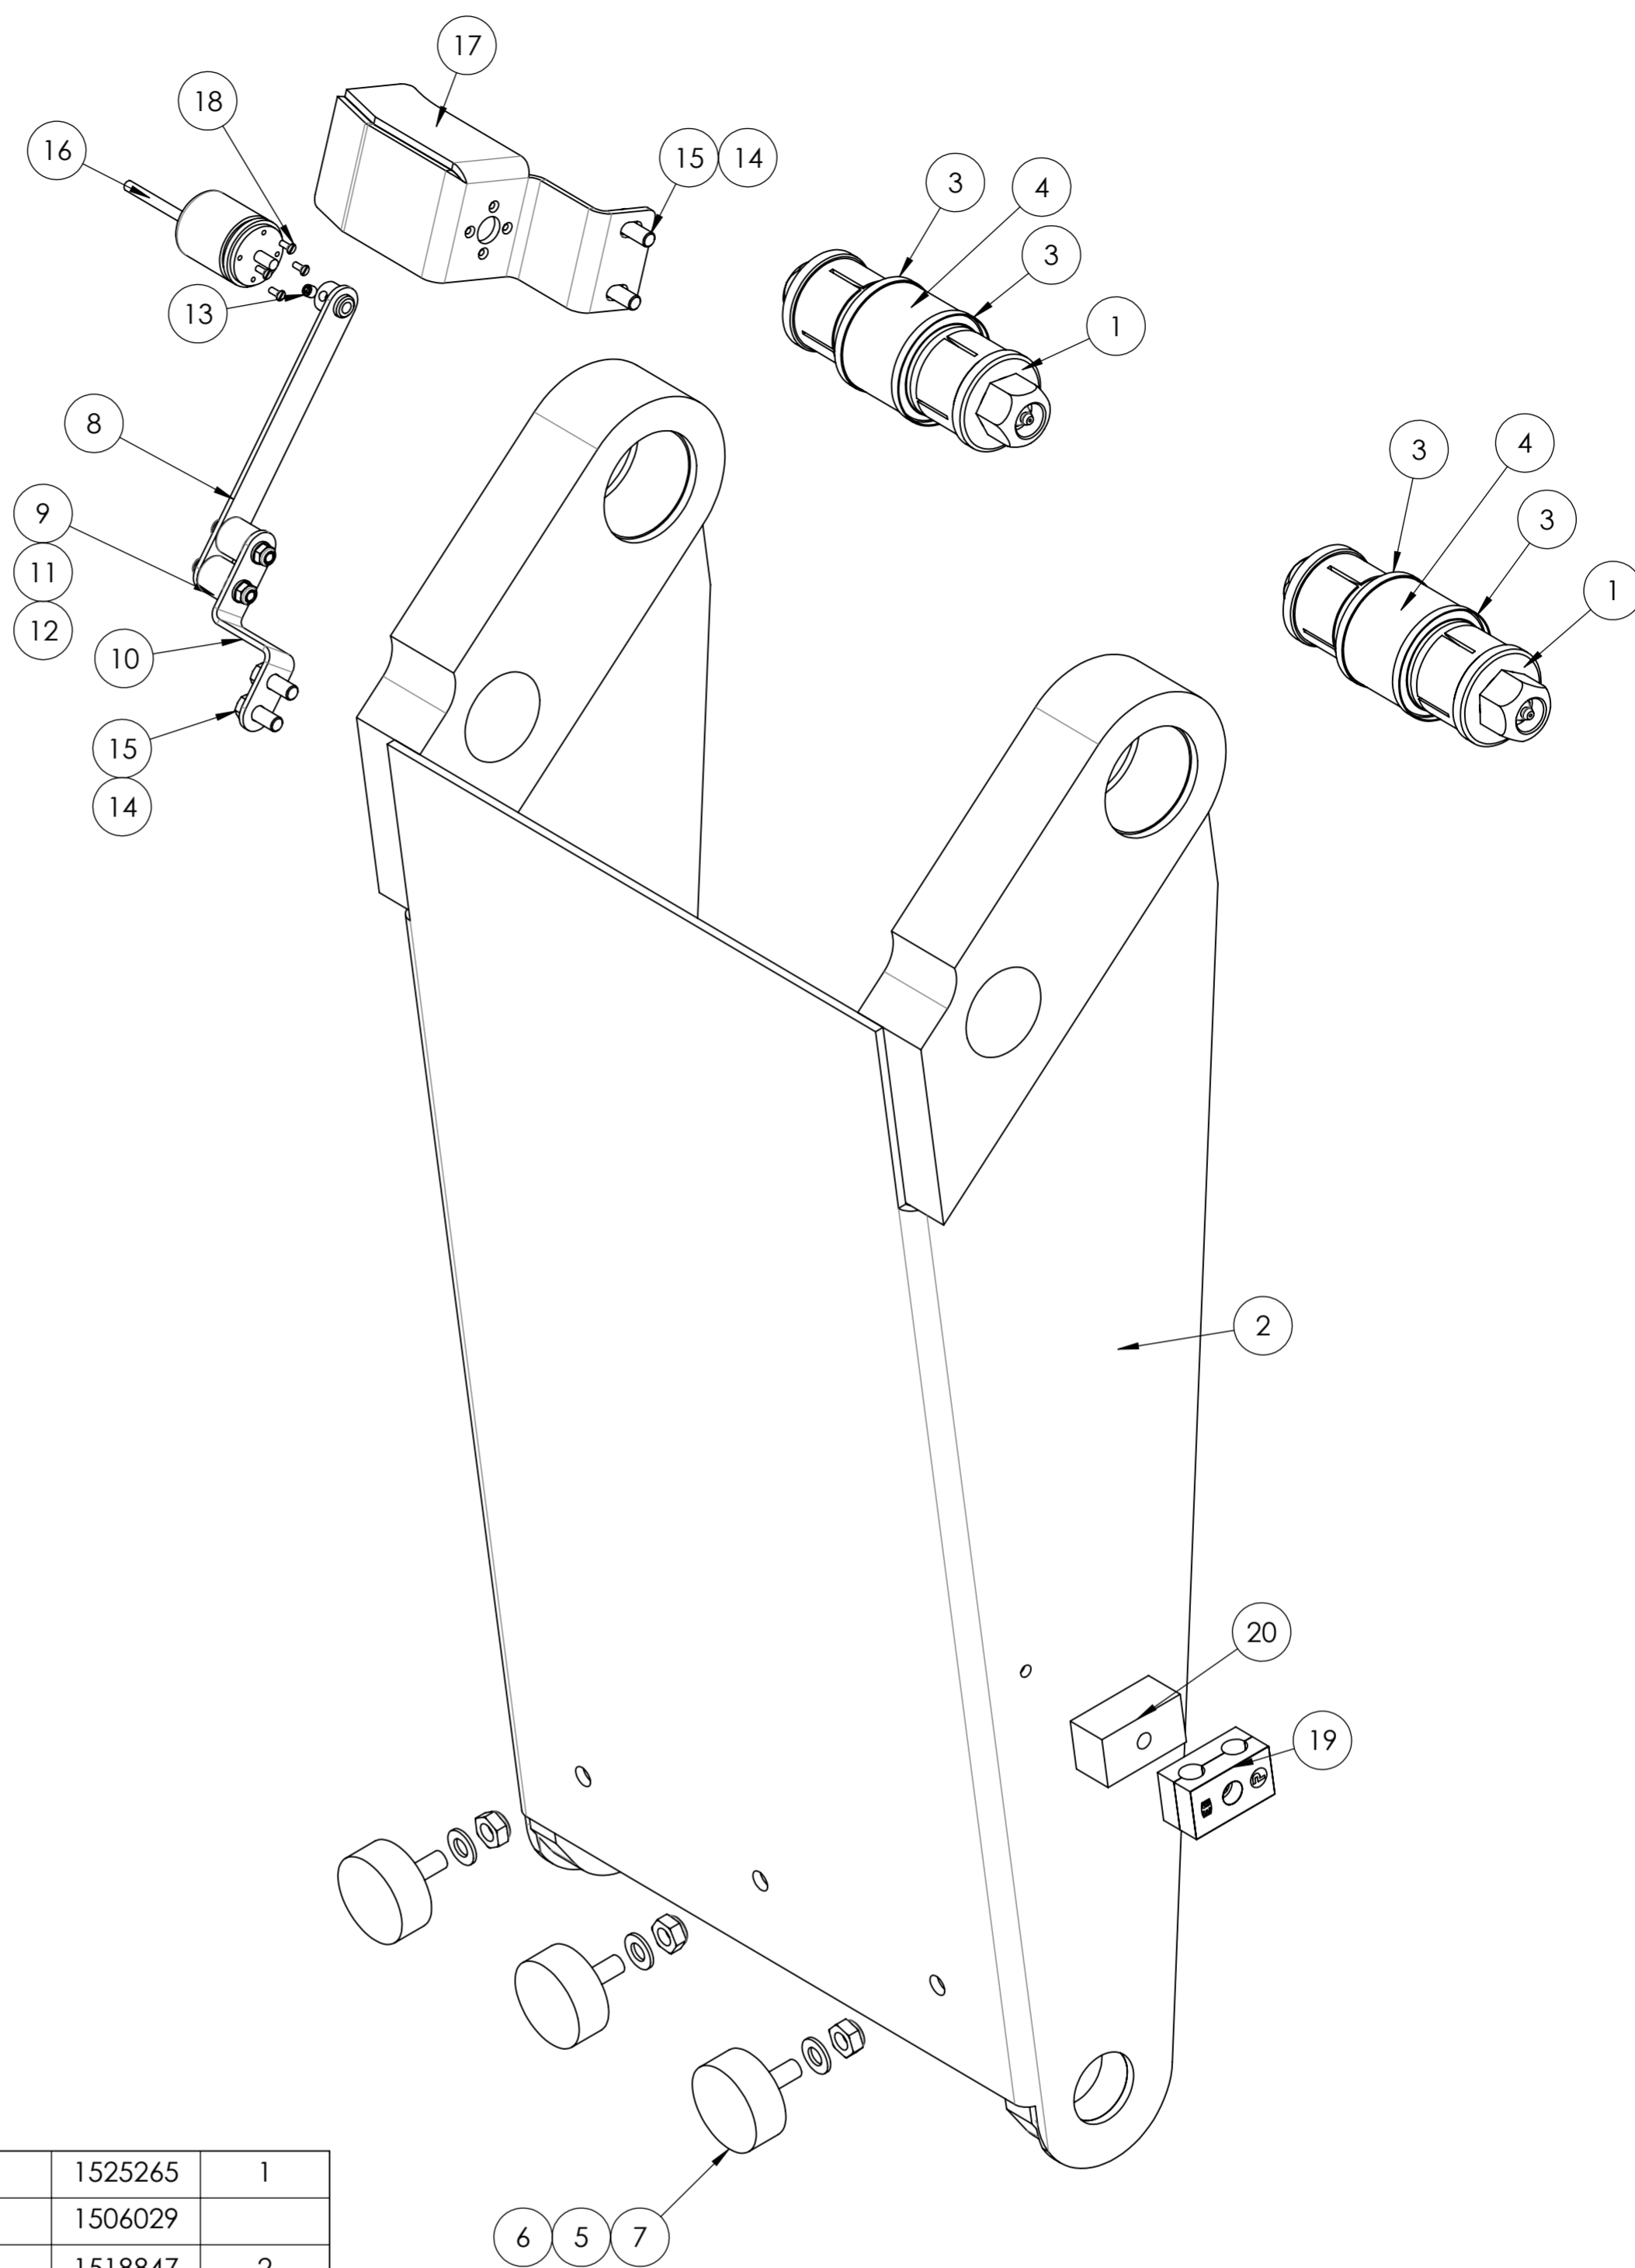


20	Distans	Spacer	1525265	1
19	Slangfäste	Hose bracket	1506029	
18	Skruv	Screw	1518847	2
17	Givarfästeplåt	Sensor plate	1525200	1
16	Vinkelgivare	Angle sensor	1522902	2
15	Skruv	Screw	1505263	
14	Bricka	Washer	1504899	
13	Skruv	Screw	1512861	
12	Låsmutter	Locking nut	1505256	
11	Bricka	Washer	1504898	
10	Arm 2 till vinkelgivare	Arm 2 angle sensor	1525197	1
9	Vibrationsdämpare	Bumper	1525194	1
8	Arm vinkelgivare	Arm angle sensor	1525199	1
7	Anslagsdämpare	Bumper	1517349	
6	Bricka	Washer	1504900	
5	Låsmutter	Locking nut	1505257	
4	Bussning	Bushing	1523903	1
3	Radialtätning	Radial seal	1515638	
2	Mellanarm SL enkel	Middle arm SL	1523924	1
1	Expanderbult	Expansion bolt	1523902	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

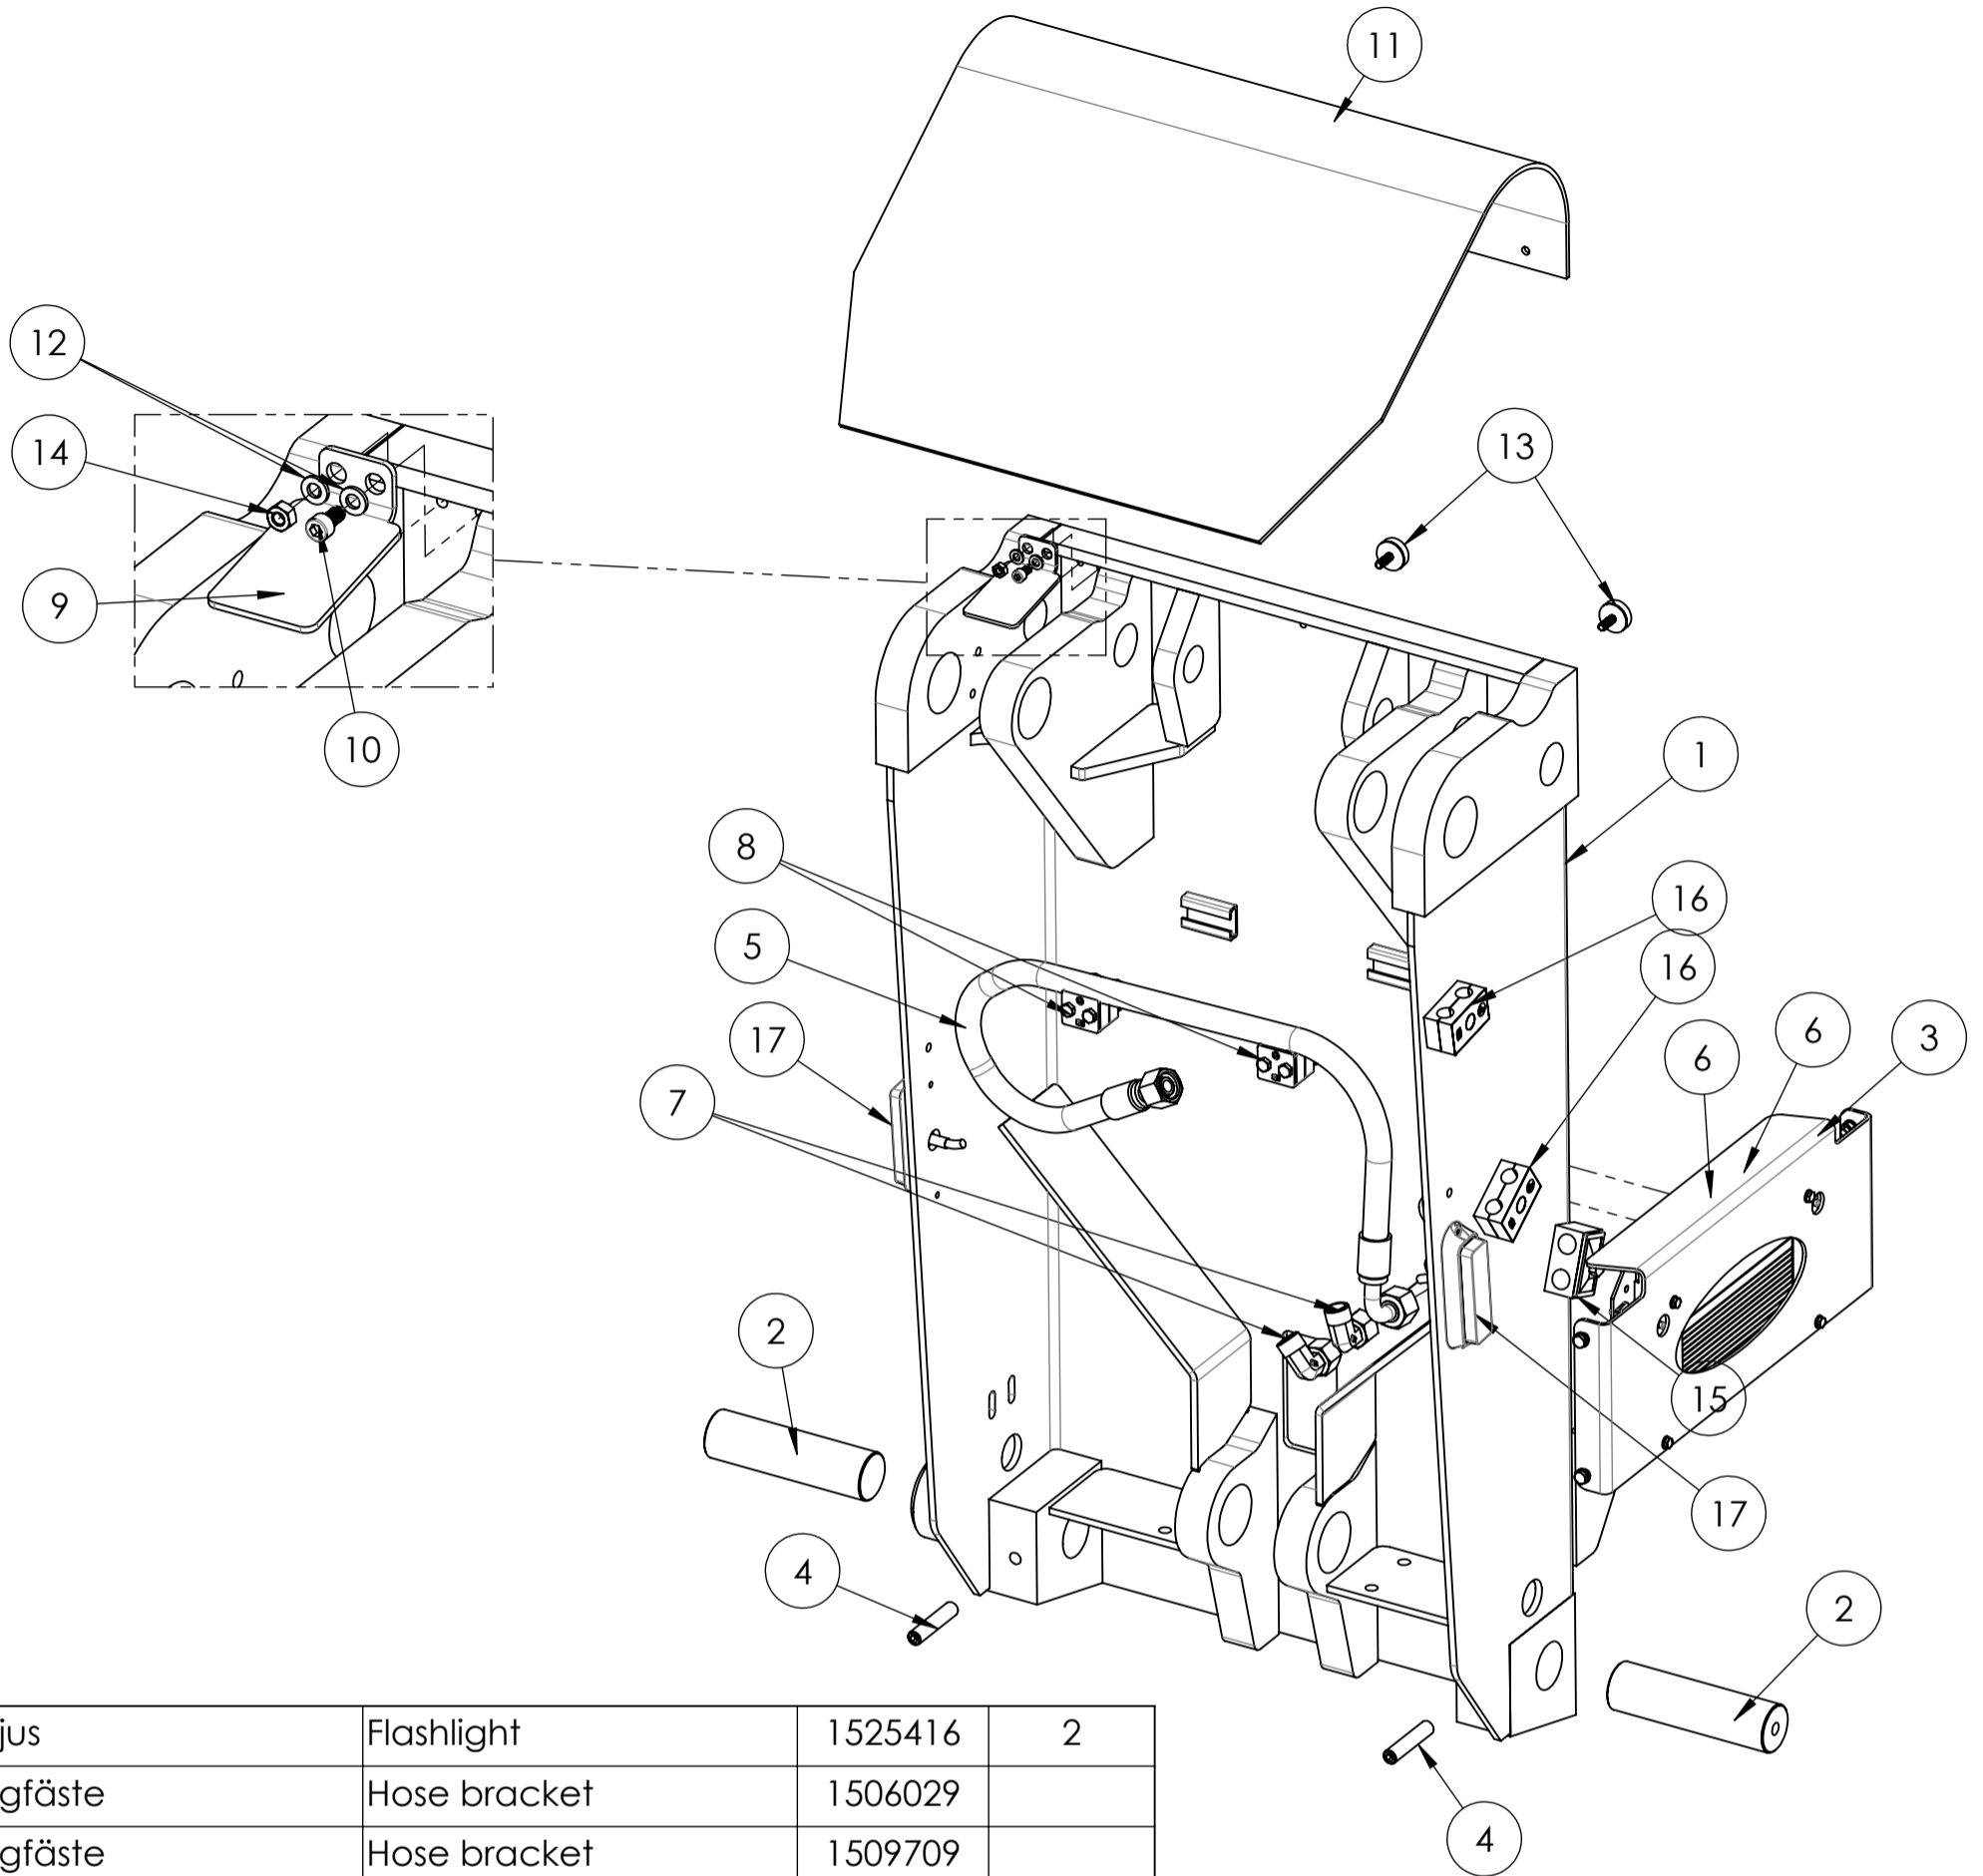

17	Blixtljus	Flashlight	1525416	2
16	Slangfäste	Hose bracket	1506029	
15	Slangfäste	Hose bracket	1509709	
14	Mutter	Nut	1504834	
13	Gummidämpare	Bumper	1525264	1
12	Bricka	Washer	1504898	
11	Plastskydd	Plastic cover	1525257	1
10	Skruv	Screw	1508603	
9	Plåt	Plate	1523942	1
8	Slangfäste	Hose bracket	1513267	
7	Adapter	Adapter	1505760	
6	Adapter	Adapter	1516429	
5	Hydraulslang	Hose	1518511	1
4	Skruv	Screw	1509326	
3	Adapter	Adapter	1517209	
2	Bult	Bolt	1516048	
1	Inre Arm SL	Inner arm SL	1523923	2
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 
Note! The images are for reference only. Components marked with \* contact spare part branch.

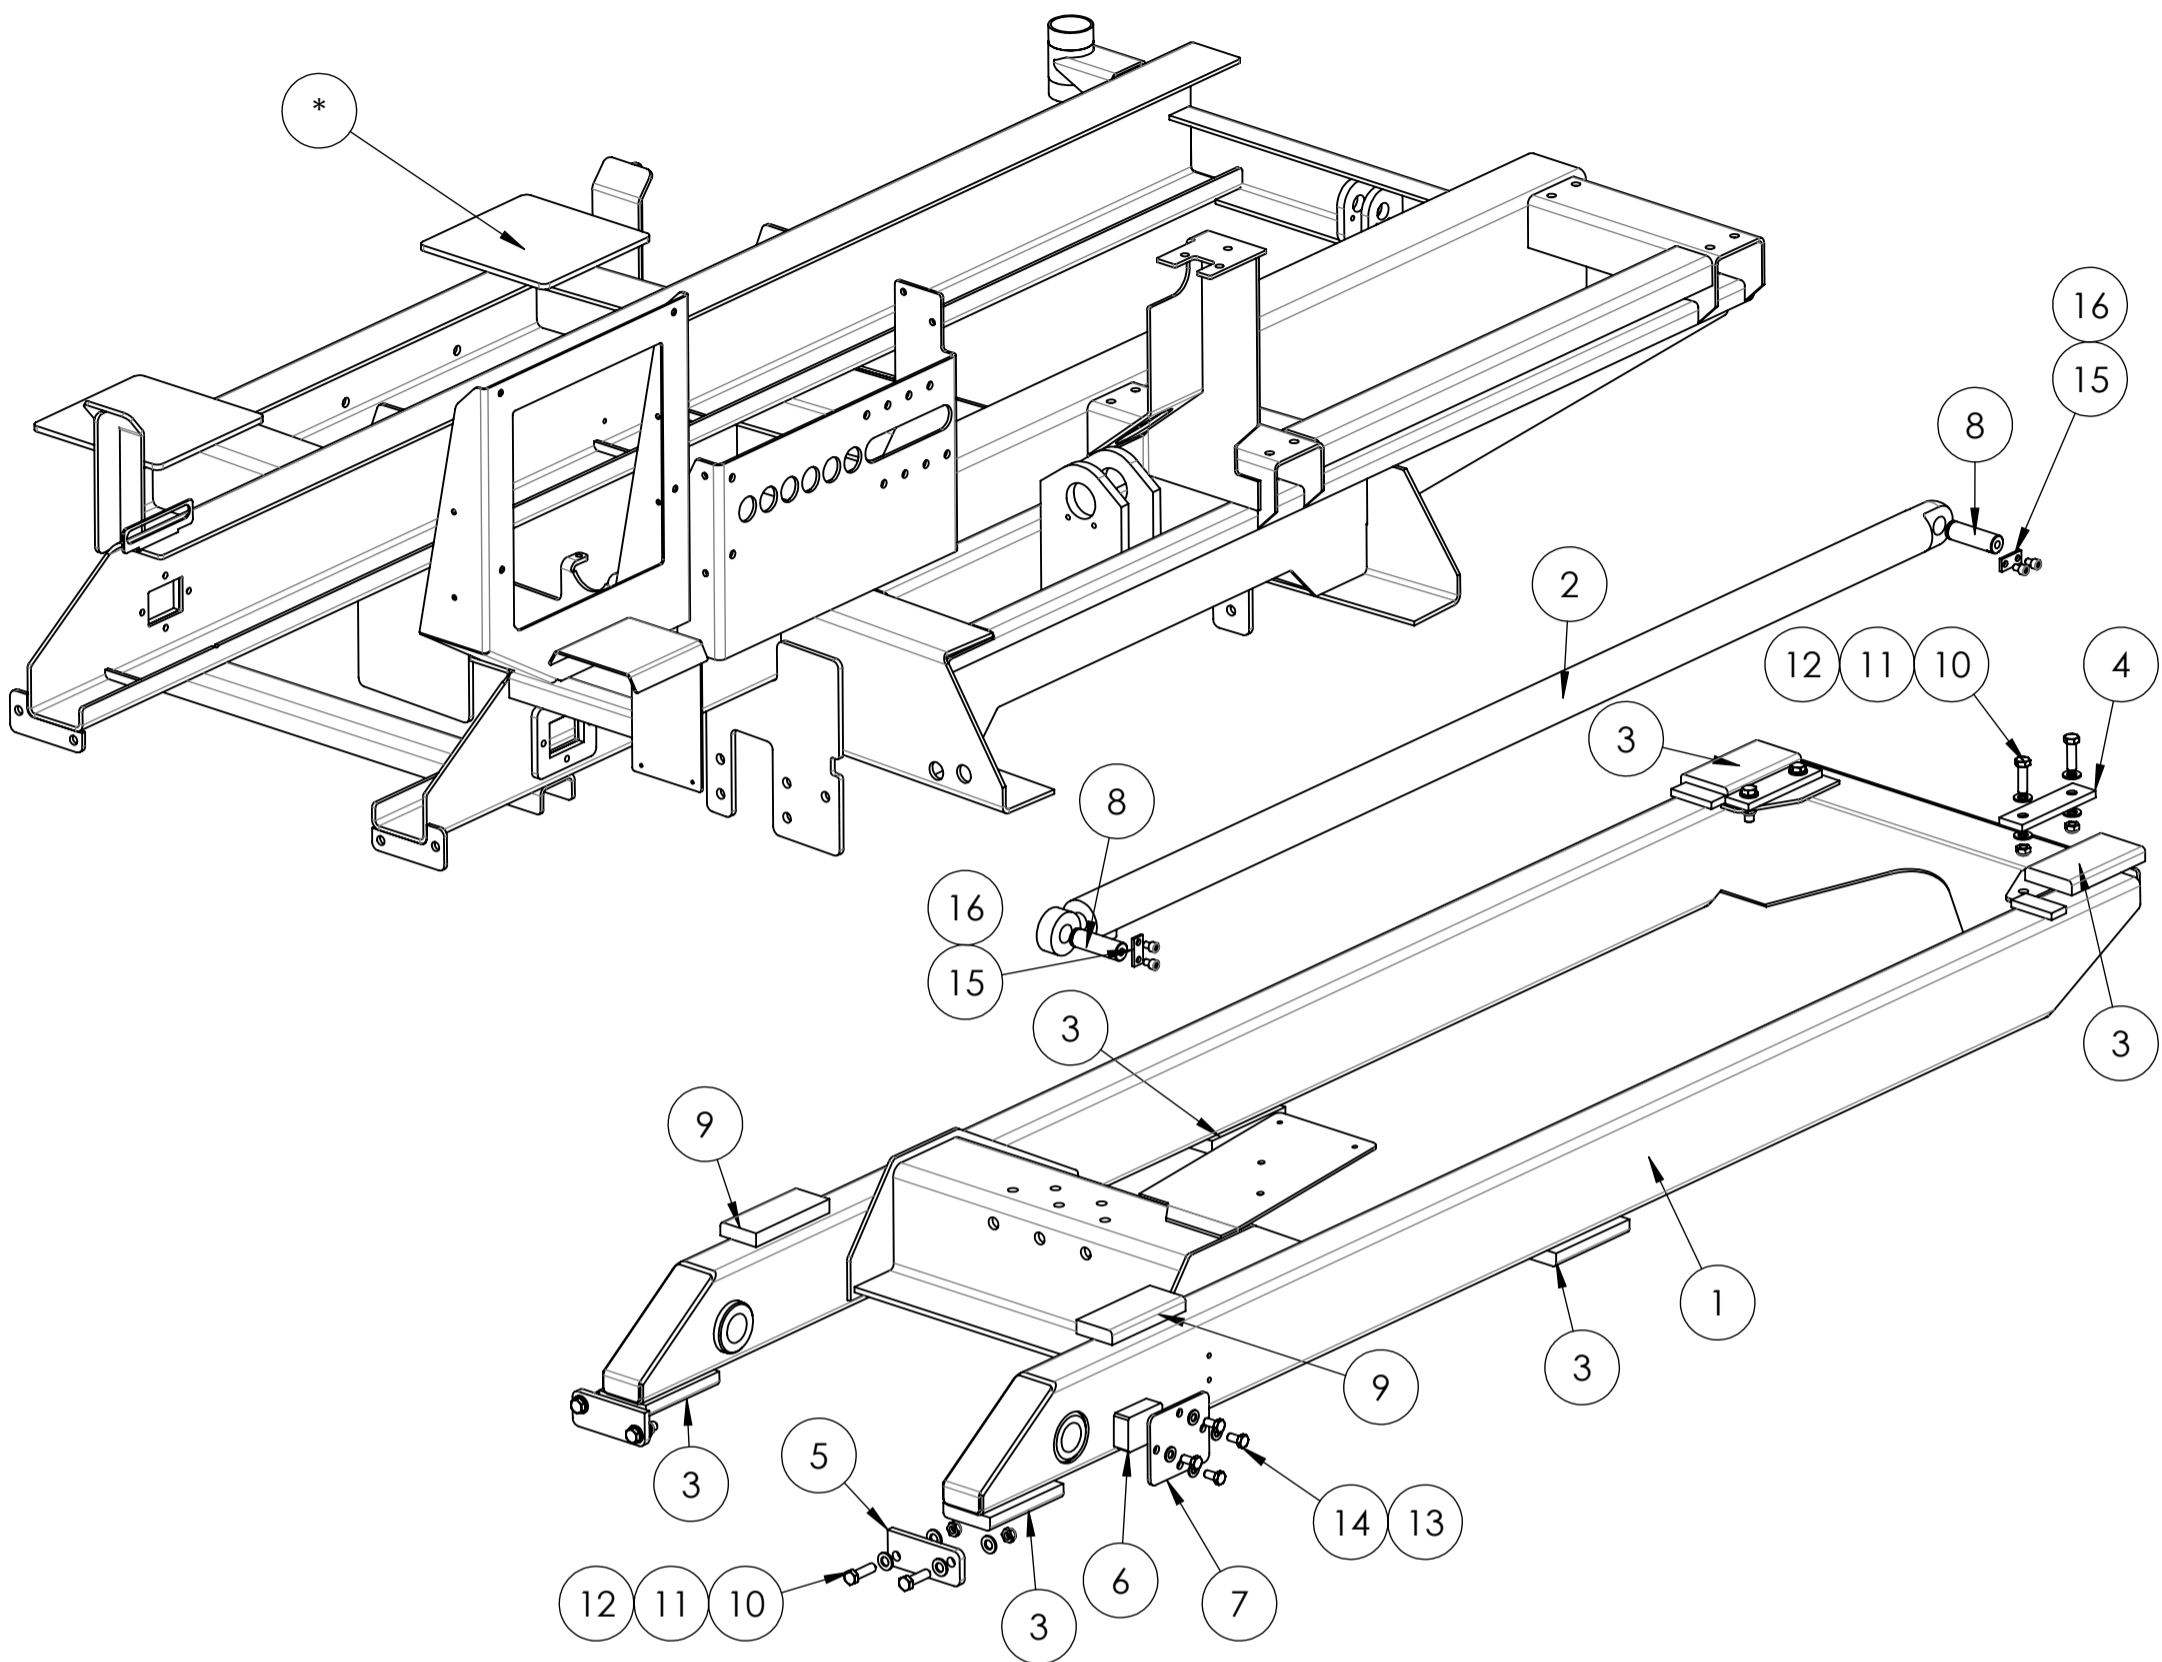


16	Skruv	Screw	1512953	
15	Låsplatta	Locking plate	504334	2
14	Skruv	Screw	1507496	
13	Bricka	Washer	1504900	
12	Låsmutter	Locking nut	1505257	
11	Bricka	Washer	1504901	
10	Skruv	Screw	1505315	2
9	Glidklots	Sliding block	1519611	
8	Bult	Bolt	504339	
7	Lock	Cover	1515155	
6	Glidklots	Sliding block	1515156	
5	Stopp	End plate	1515153	
4	Stopp	End plate	1515152	
3	Glidklots	Sliding block	1515149	
2	Hydraulcylinder 50x25-1600 SL	Hydraulic cylinder	1515134	2
1	Utskjut SLarm	Extension arm	1519562	3
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Sidlastare teleskopisk arm Telescopic arm Side loader

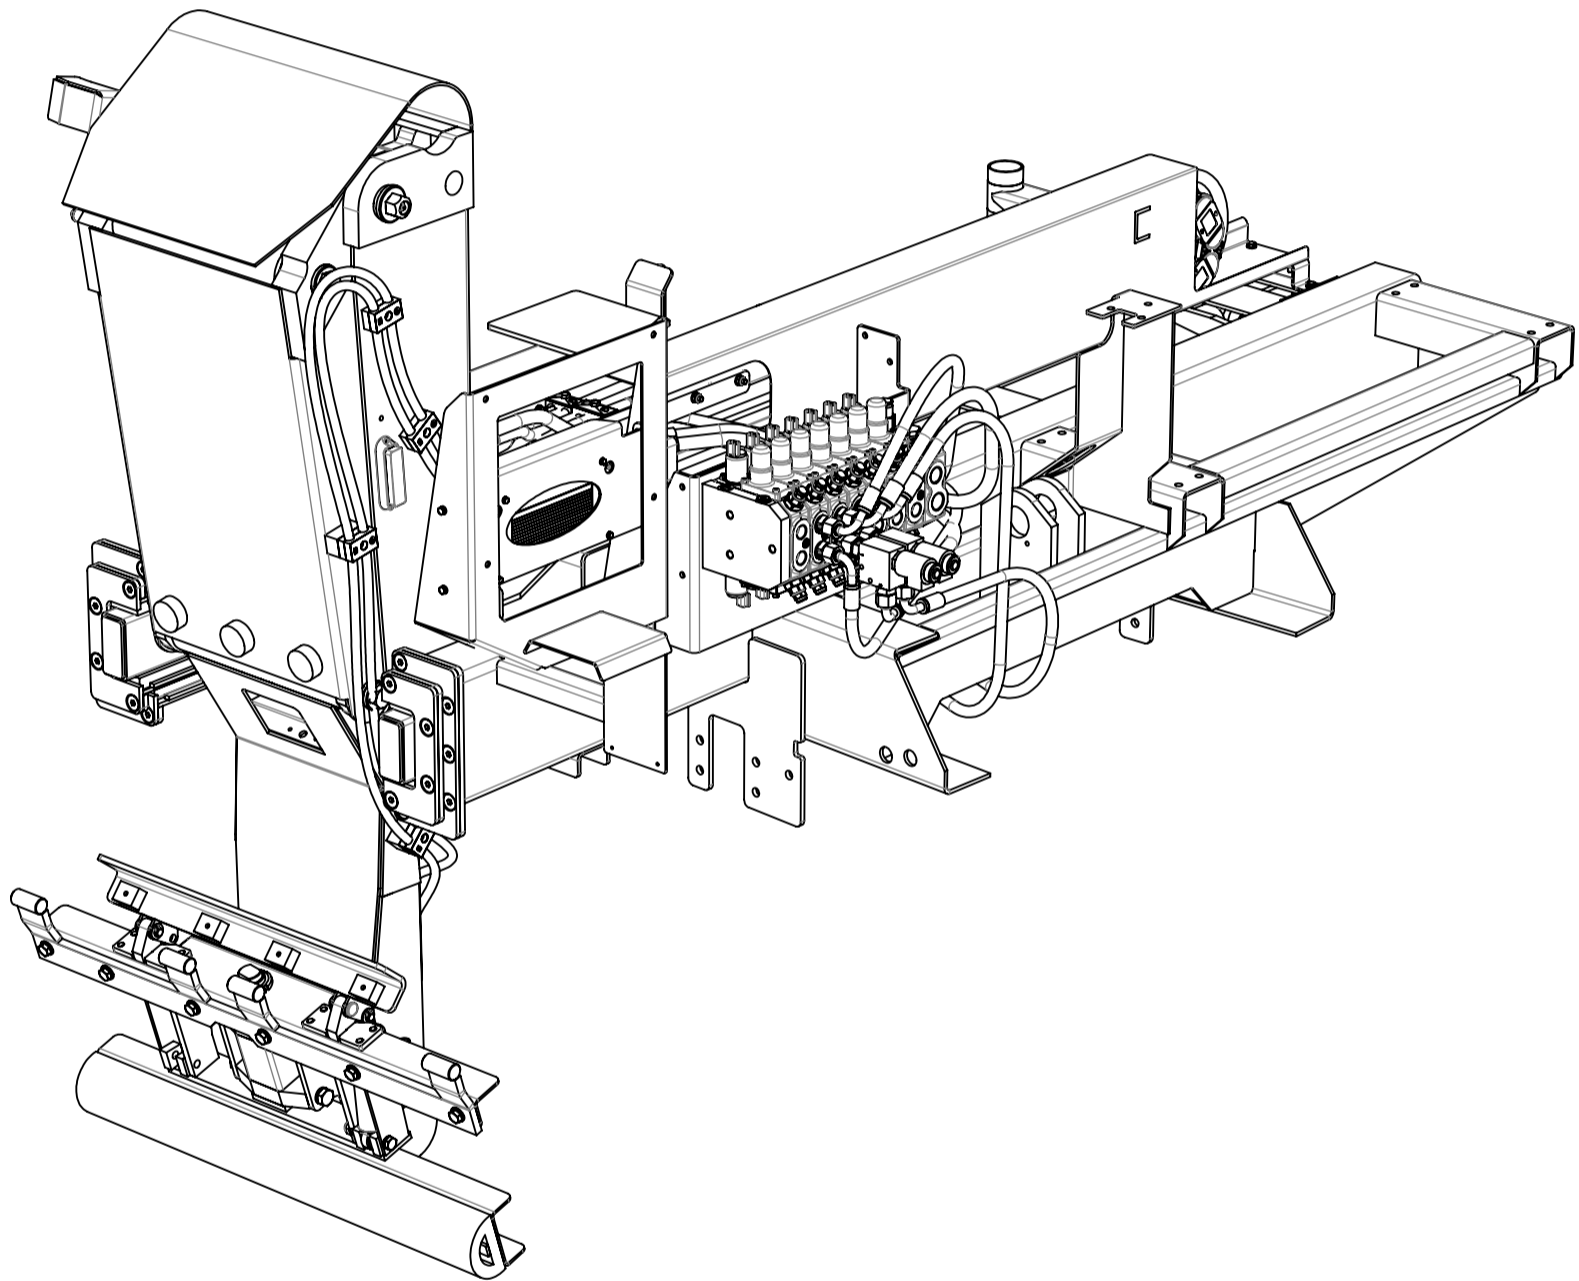 


 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

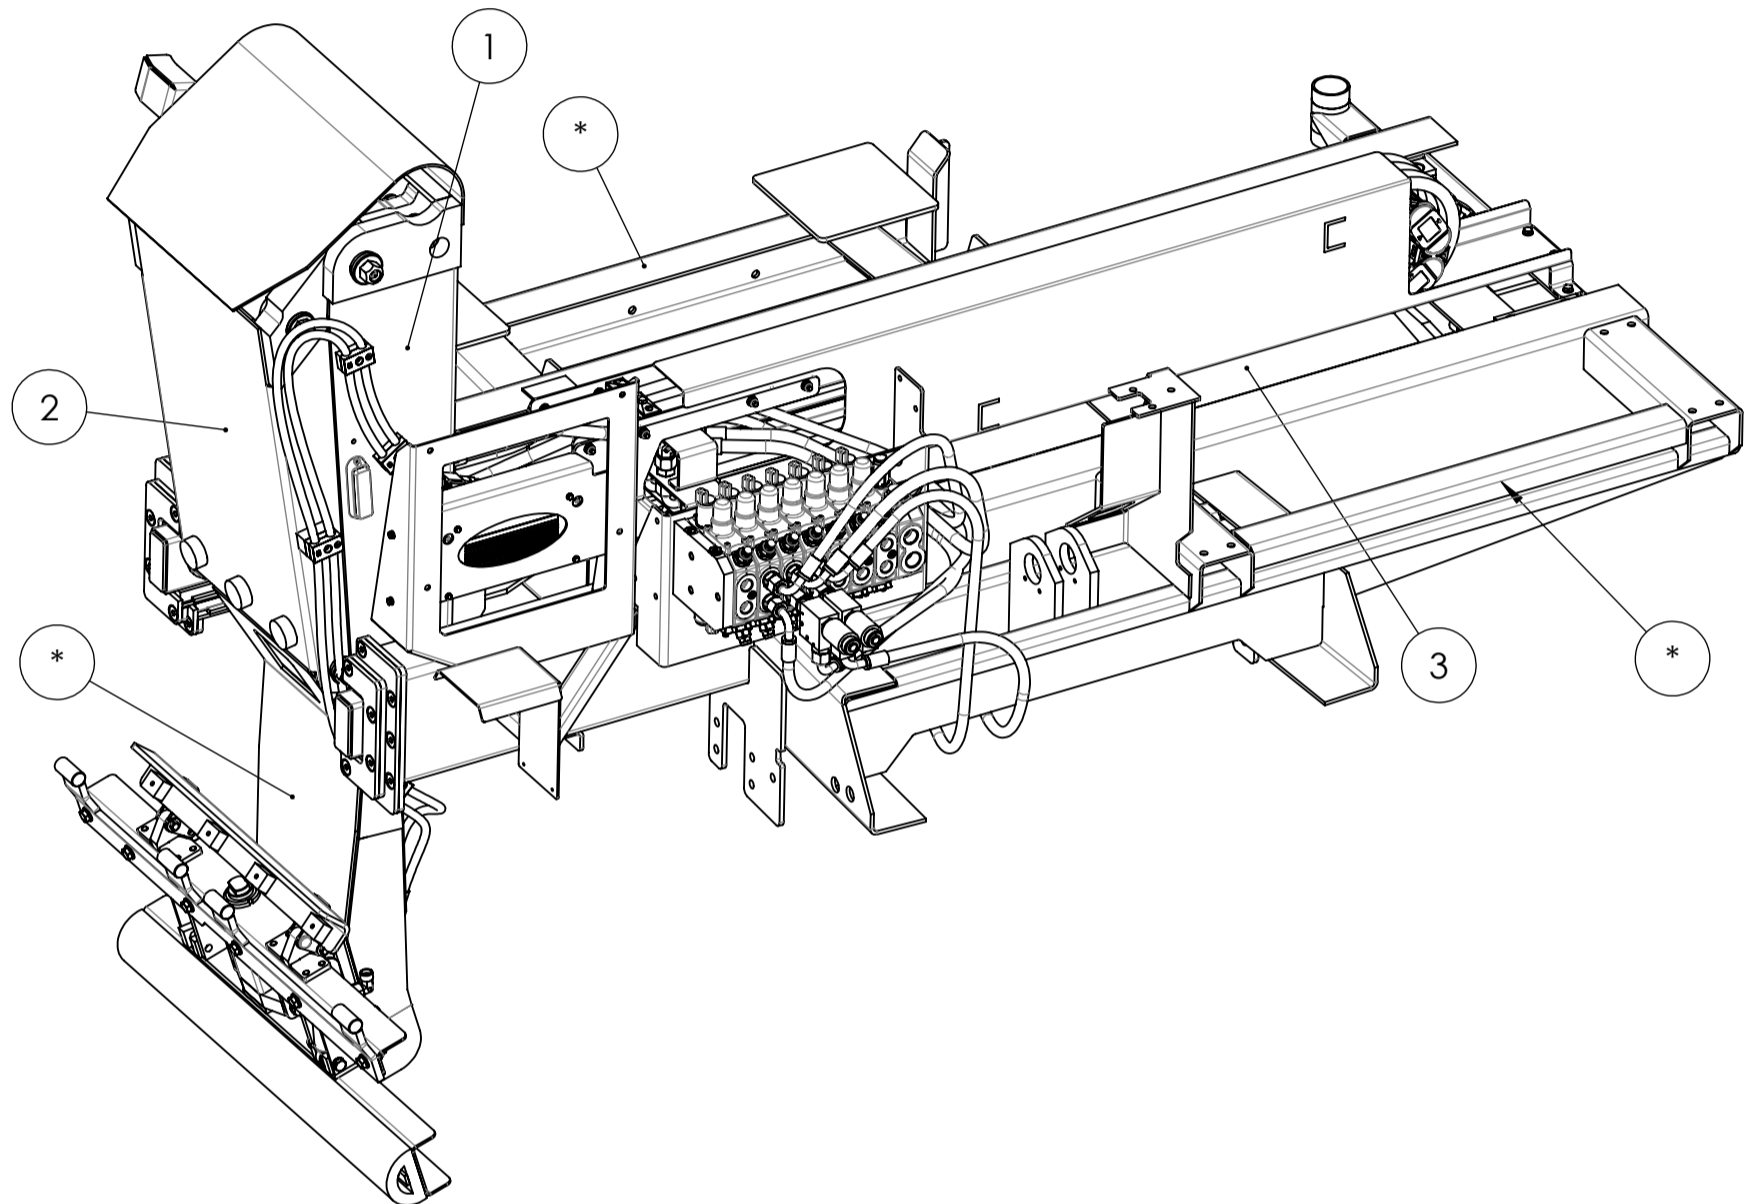


3	Hydraulcylinder	Hydraulic cylinder	1519550	
2	Mellanarm SL enkel	Middle arm SL	1523924	1
1	Inre Arm SL	Inner arm SL	1523923	2
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

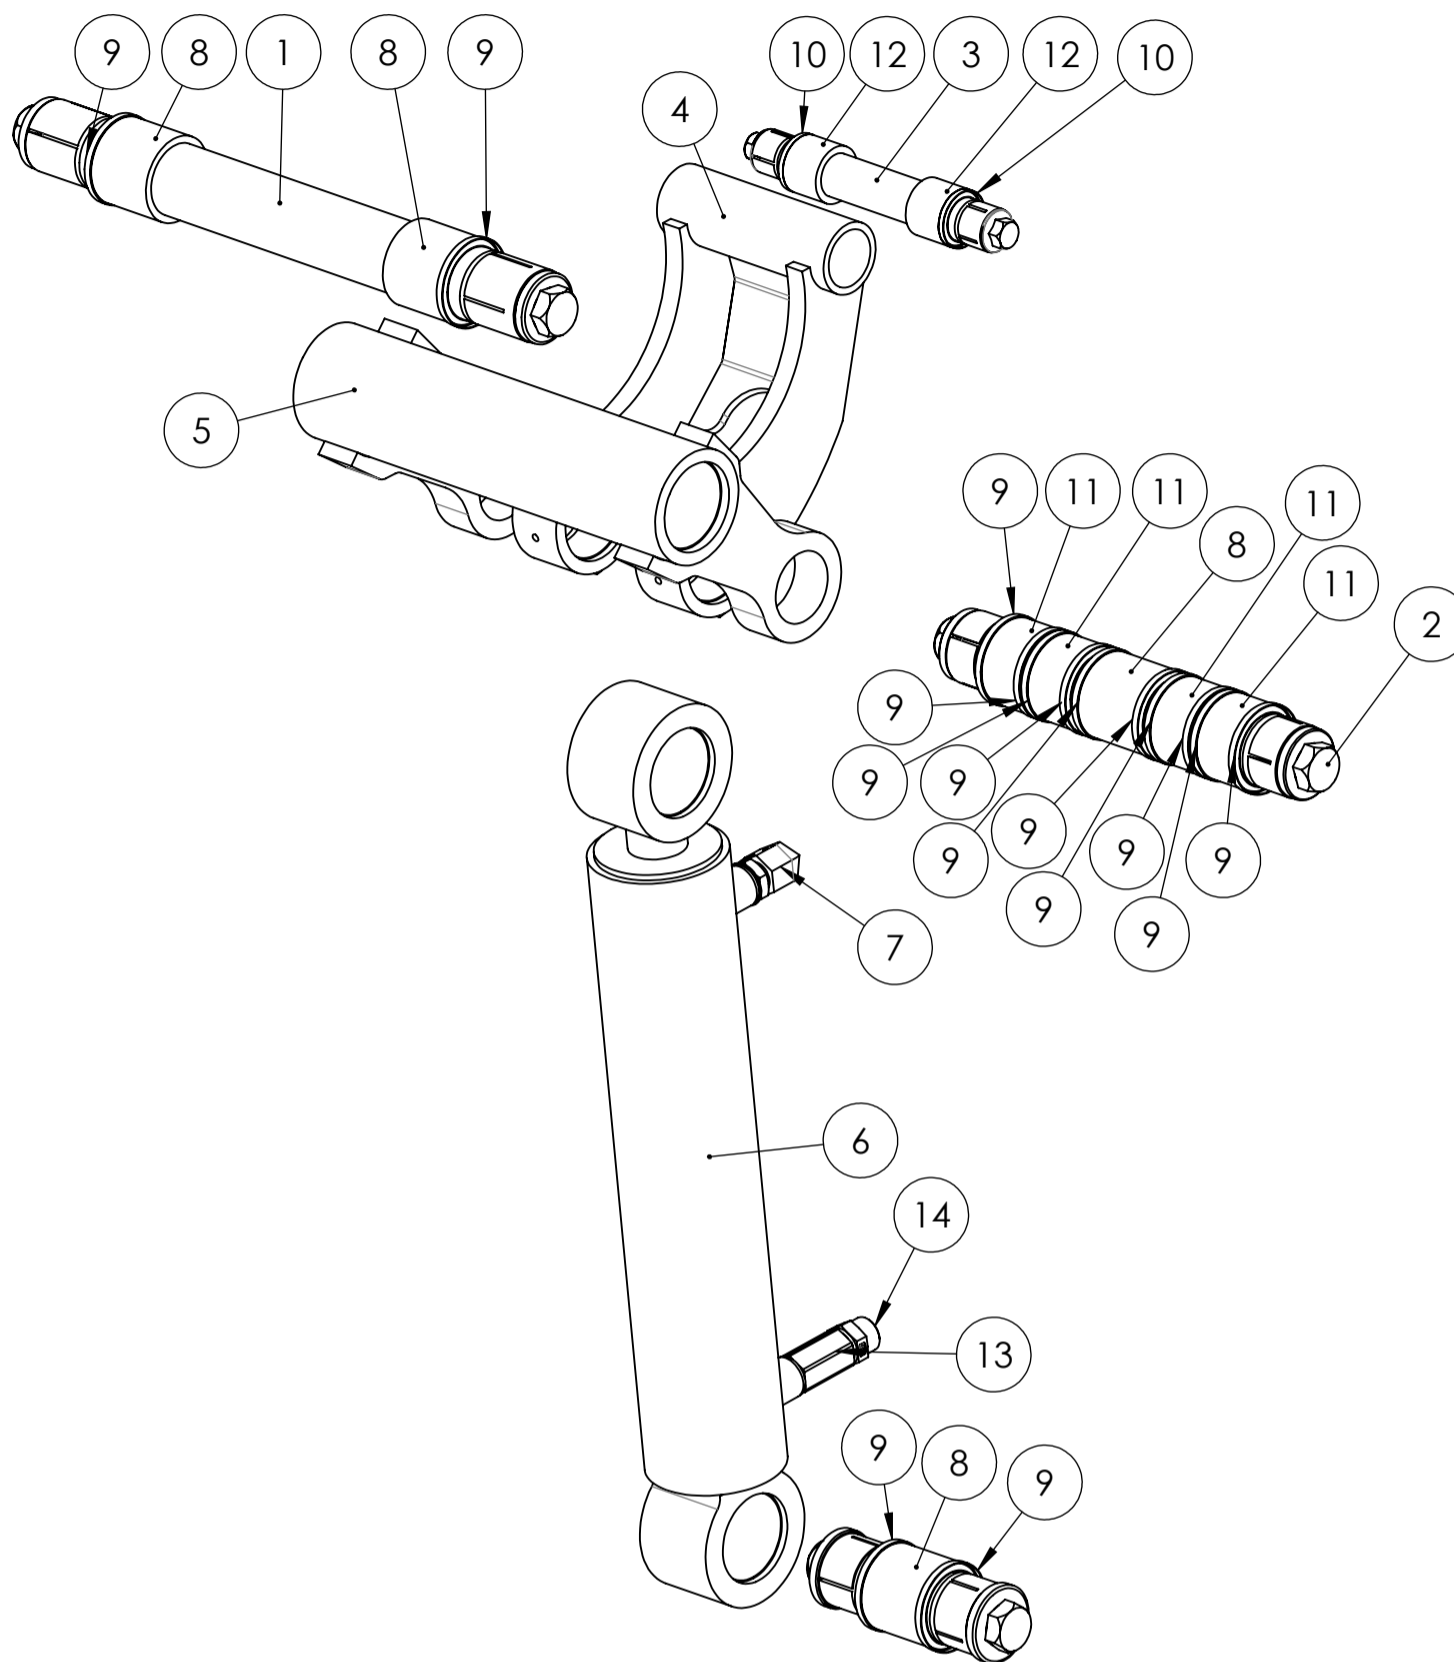


14	Adapter	Adapter	1506192	
13	Slangbrottsventil	Hose break valve	1514541	2
12	Bussning	Bushing	1518675	
11	Bussning	Bushing	1519572	
10	Radialtätning	Radial seal	1515635	
9	Radialtätning	Radial seal	1515638	
8	Bussning	Bushing	1519571	
7	Adapter	Adapter	1506236	
6	Hydraulcylinder	Hydraulic cylinder	1523129	2
5	Länk	Link	1515585	
4	Länk	Link	1518333	
3	Expanderbult	Expansion bolt	1515452	1
2	Expanderbult	Expansion bolt	1515449	1
1	Expanderbult	Expansion bolt	1515447	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

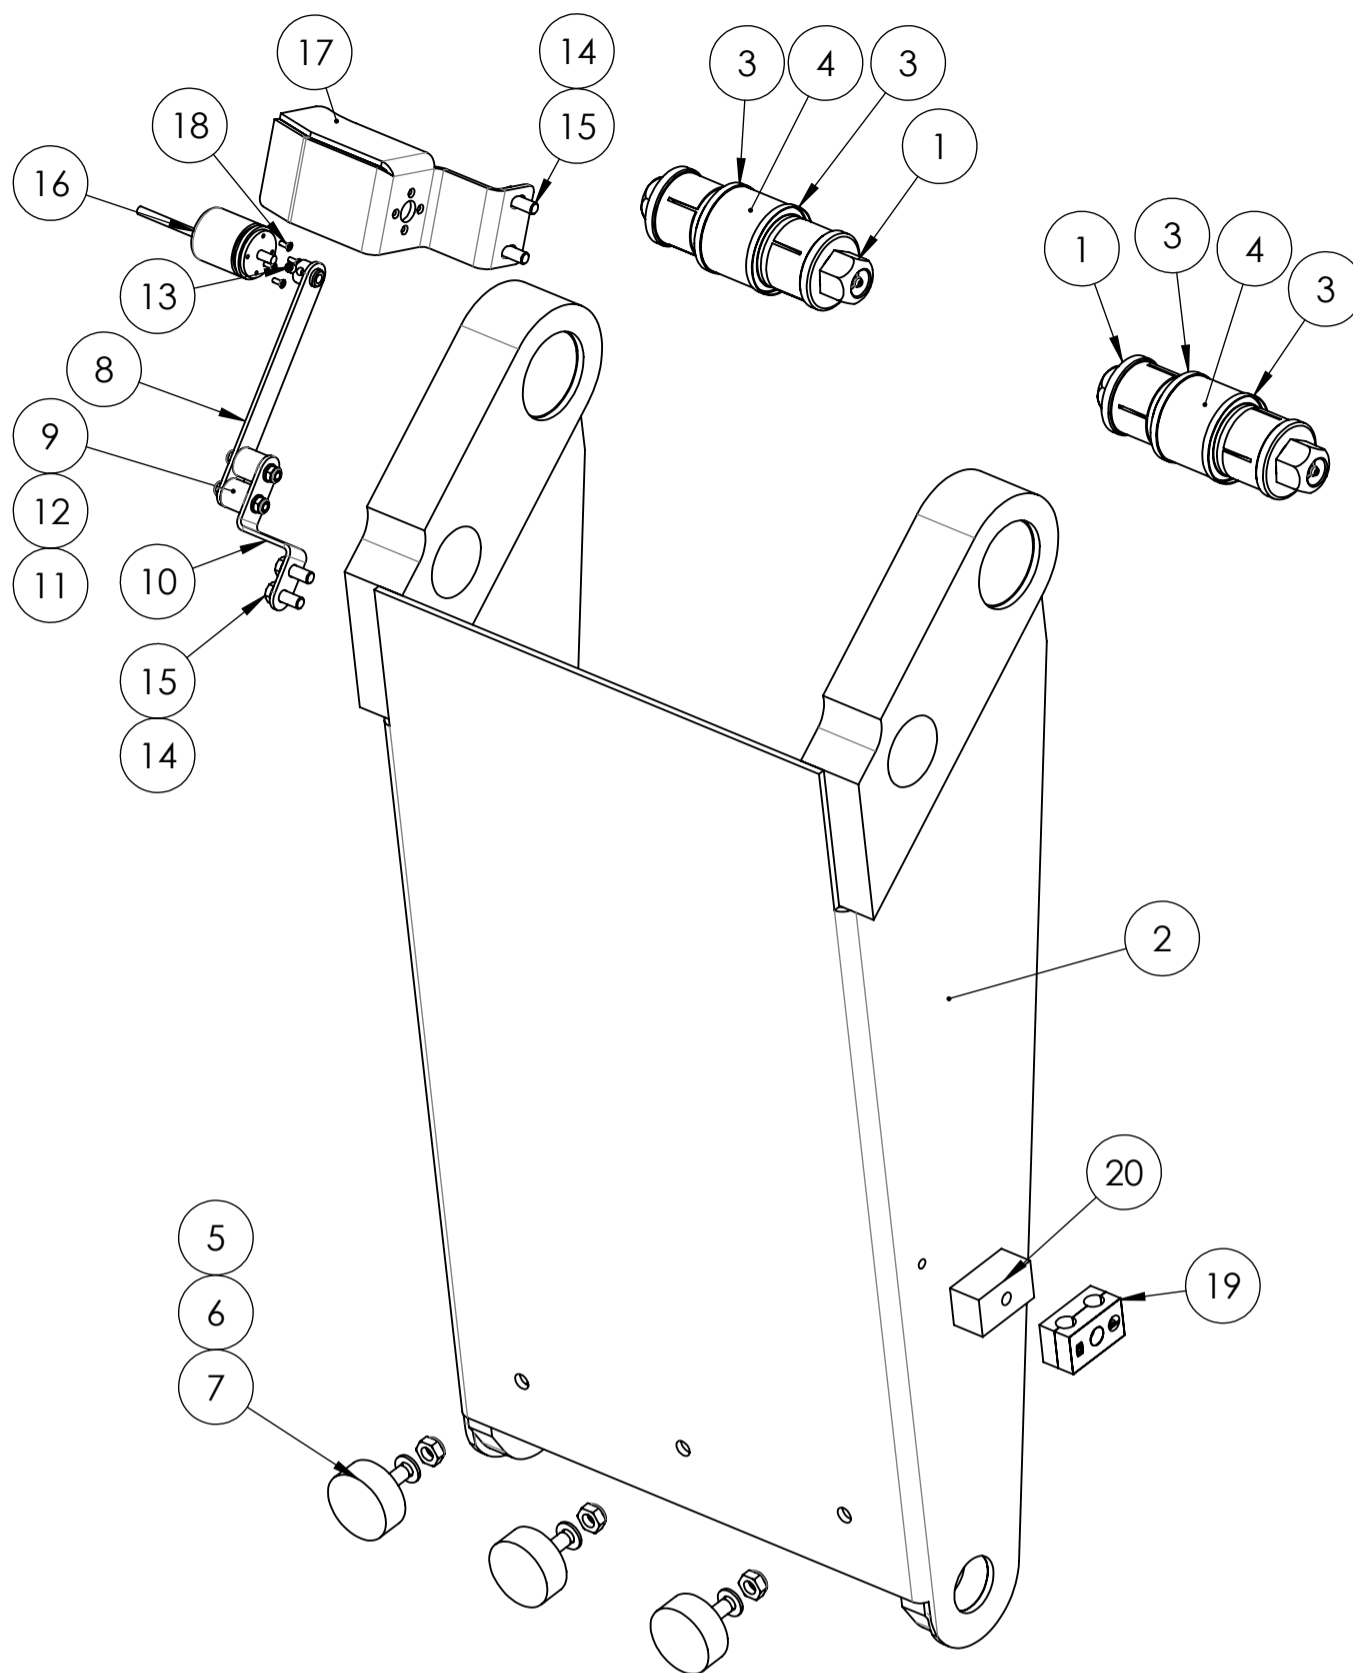


20	Distans	Spacer	1525265	1
19	Slangfäste	Hose bracket	1506029	
18	Skruv	Screw	1518847	2
17	Givarfäste	Sensor bracket	1525202	1
16	Vinkelgivare	Angle sensor	1522902	2
15	Skruv	Screw	1505263	
14	Bricka	Washer	1504899	
13	Skruv	Screw	1512861	
12	Låsmutter	Locking nut	1505256	
11	Bricka	Washer	1504898	
10	Arm 2 till vinkelgivare	Arm 2 angle sensor	1525197	1
9	Vibrationsdämpare	Bumper	1525194	1
8	Arm 1 till vinkelgivare	Arm 1 angle sensor	1525196	1
7	Anslagsdämpare	Bumper	1517349	
6	Låsmutter	Locking nut	1505257	
5	Bricka	Washer	1504900	
4	Bussning	Bushing	1523903	1
3	Radialtätning	Radial seal	1515638	
2	Mellanarm SL enkel	Midel arm SL	1523924	1
1	Expanderbult	Expansion bolt	1523902	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

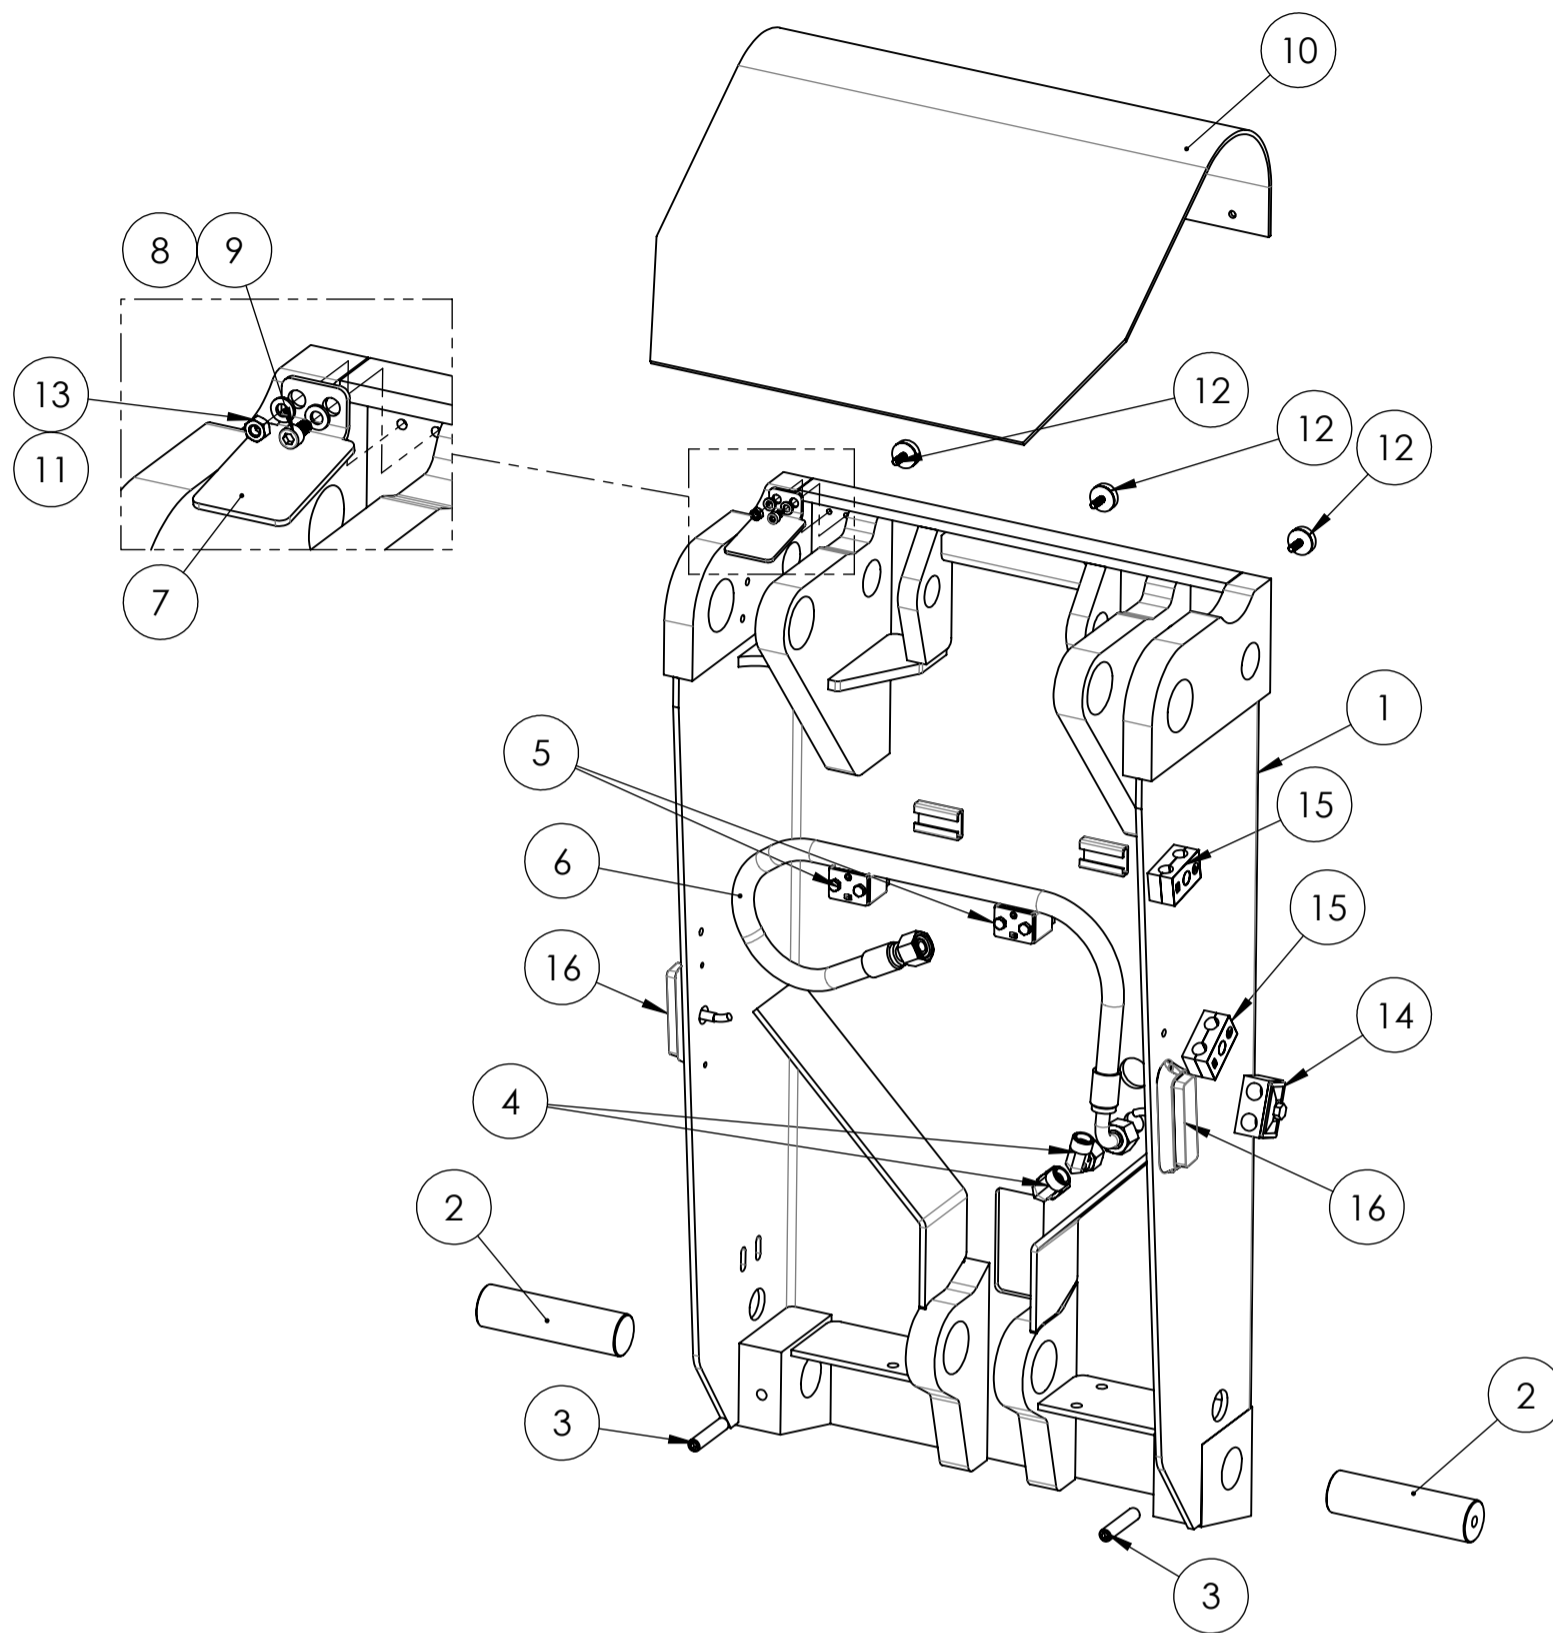

16	Blixtljus	Flashlight	1525416	2
15	Slangfäste	Hose bracket	1506029	
14	Slangfäste	Hose bracket	1509709	
13	Mutter	Nut	1504834	
12	Gummidämpare	Bumper	1525264	1
11	Bricka	Washer	1504898	
10	Plastskydd	Plastic cover	1525257	1
9	Skruv	Screw	1508603	
8	Bricka	Washer	1504898	
7	Plåt	Plate	1523942	1
6	Hydraulslang	Hose	1518511	3
5	Adapter	Adapter	1504975	
4	Adapter	Adapter	1505760	
3	Skruv	Screw	1509326	
2	Bult	Bolt	1516048	
1	Inre Arm SL	Arm inner SL	1523923	2
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 
Note! The images are for reference only. Components marked with \* contact spare part branch.

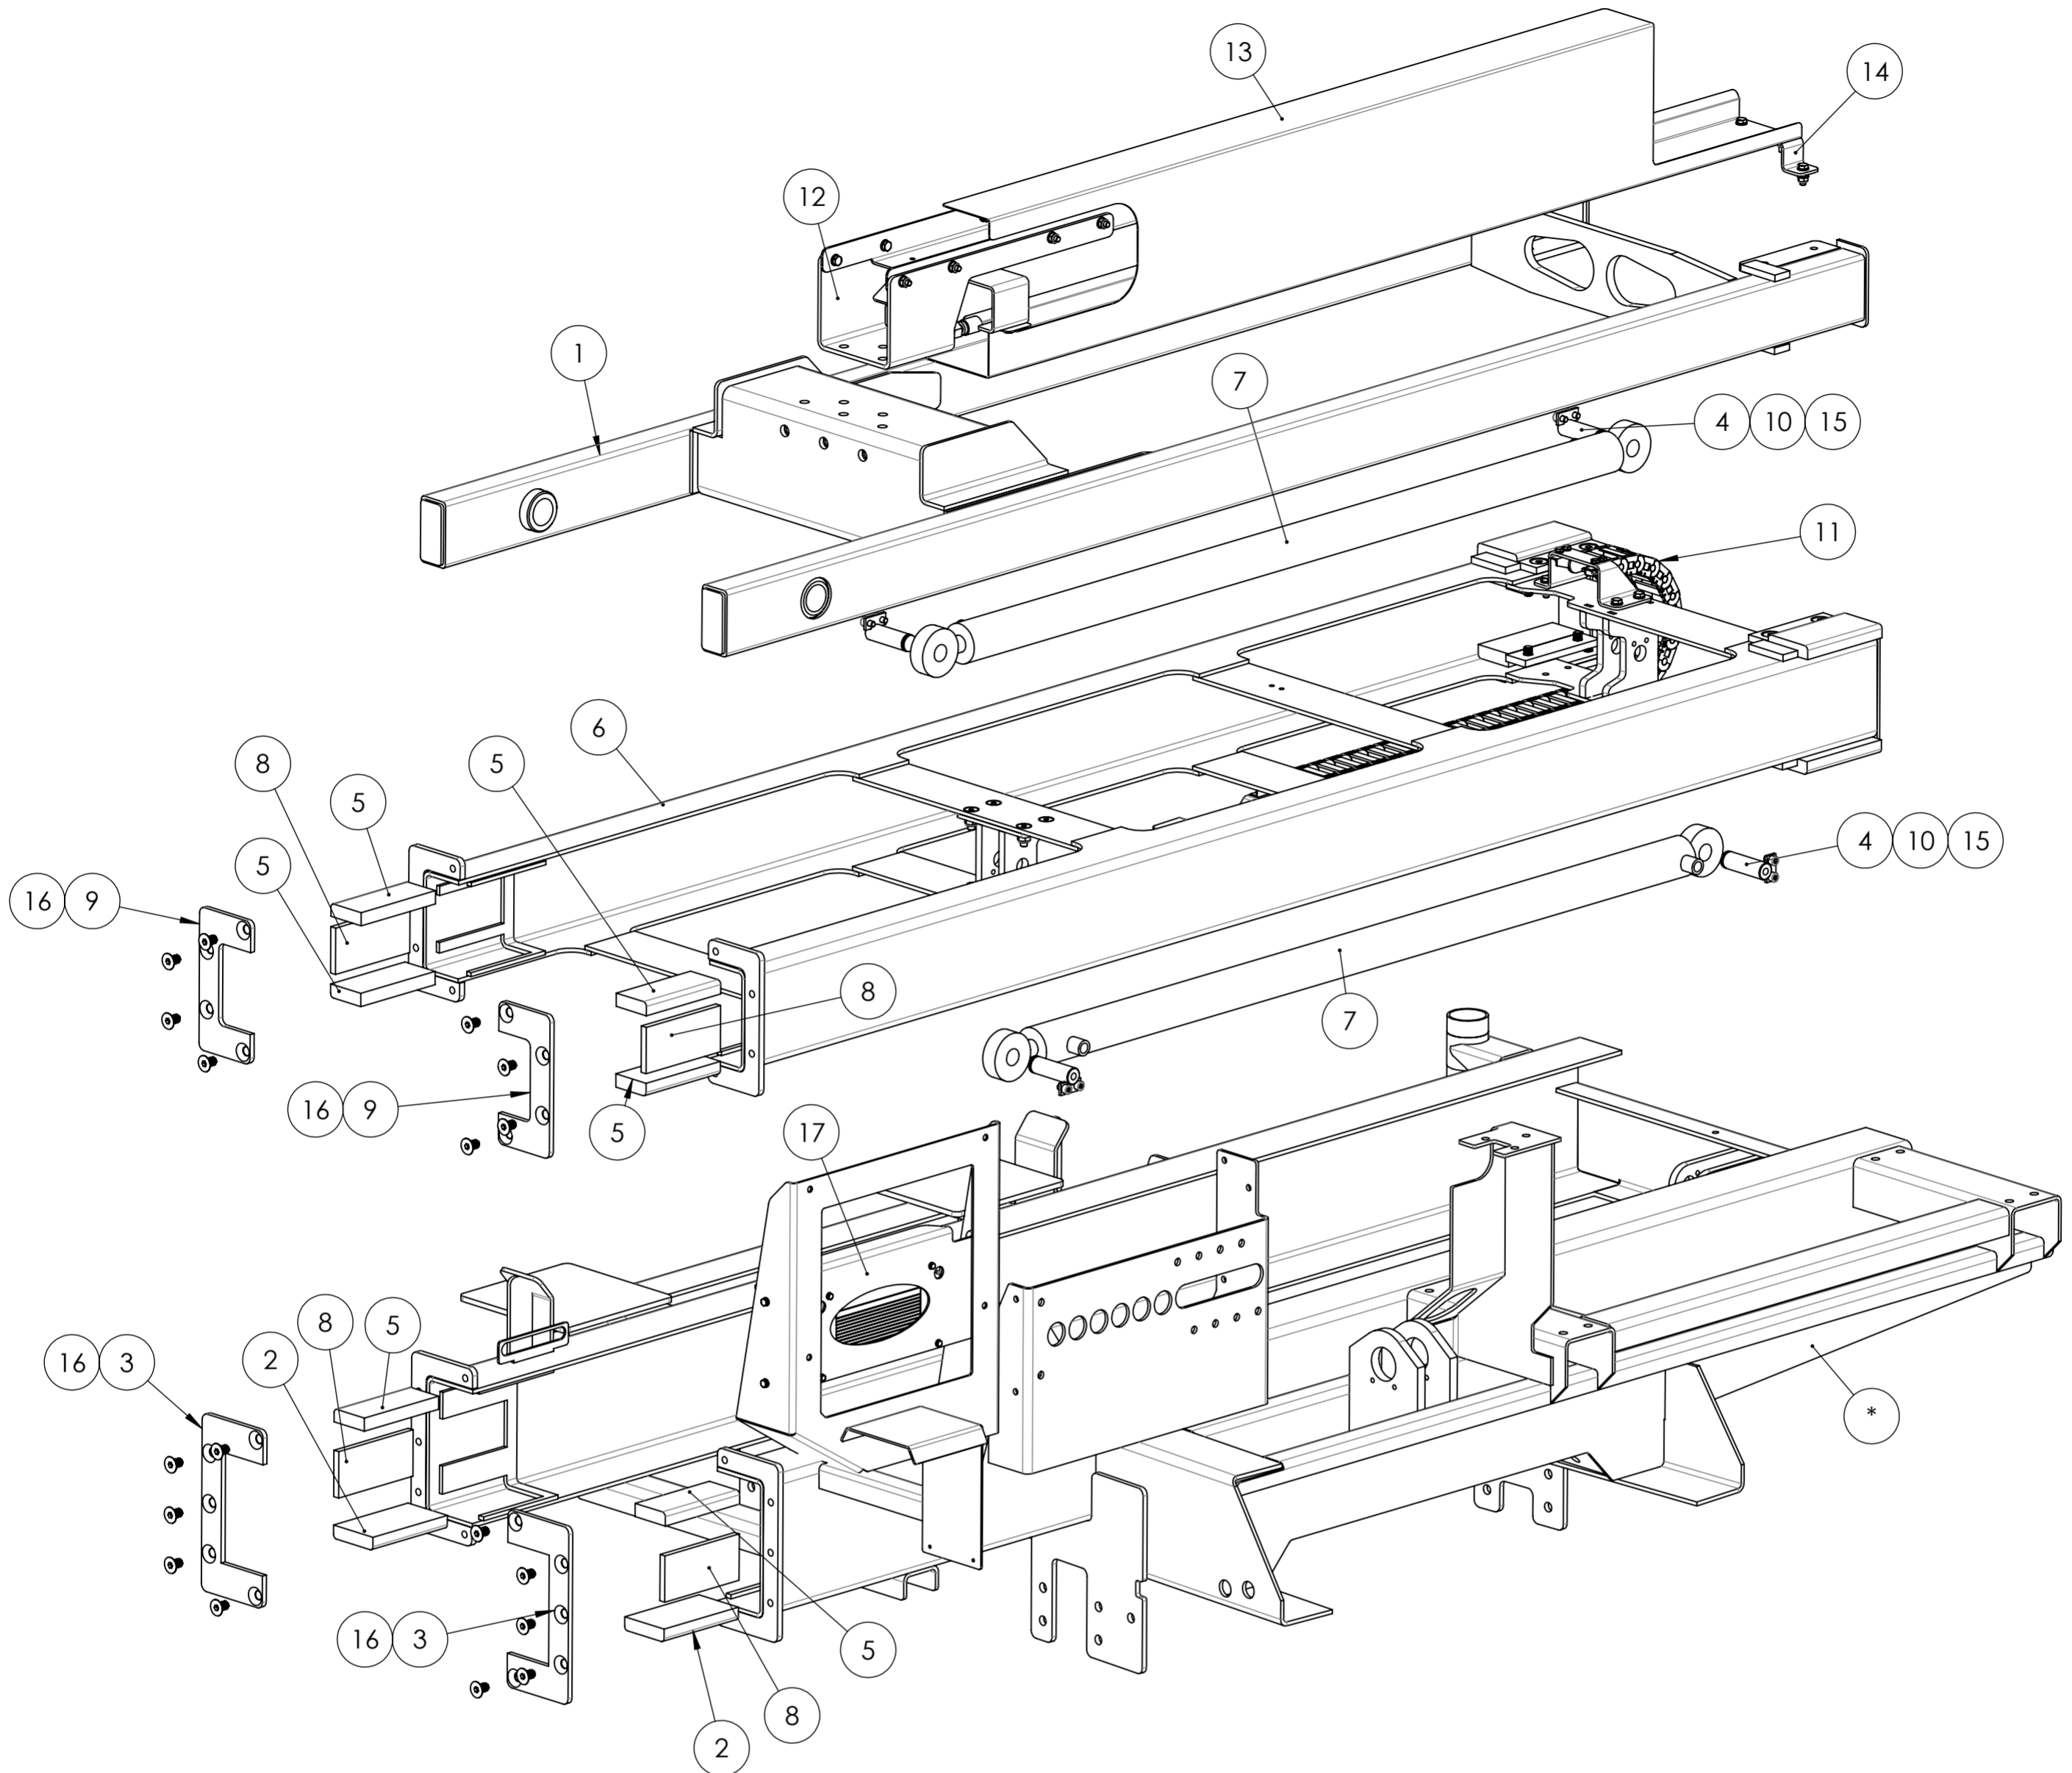


17	Fästplåt för IFM modul, SL	Mounting plate IFM module	1526206	1
16	Skruv	Screw	1519630	
15	Skruv	Screw	1512953	
14	Fäste	Bracket	1519725	
13	Kabelränna	E-chain cover	1519718	
12	Kabelkedjefäste	E-chain bracket	1523632	2
11	E-kedja	E-chain	1519692	
10	Låsplatta	Locking plate	504334	2
9	Stopp-plåt	End plate	1519583	
8	Glidklots	Sliding block	1519628	
7	Hydraulcylinder	Hydraulic cylinder	1519550	
6	Utskjut inre SL teleskop	Telescopic arm inner SL	1519597	
5	Glidklots	Sliding block	1519611	
4	Bult	Bolt	504339	
3	Stopp-plåt	End plate	1519629	
2	Glidklots	Sliding block	1515149	
1	Utskjut SL teleskoparm	Telescopic arm SL	1519595	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Vagga STD sidlastare - Cradle STD Side Loader

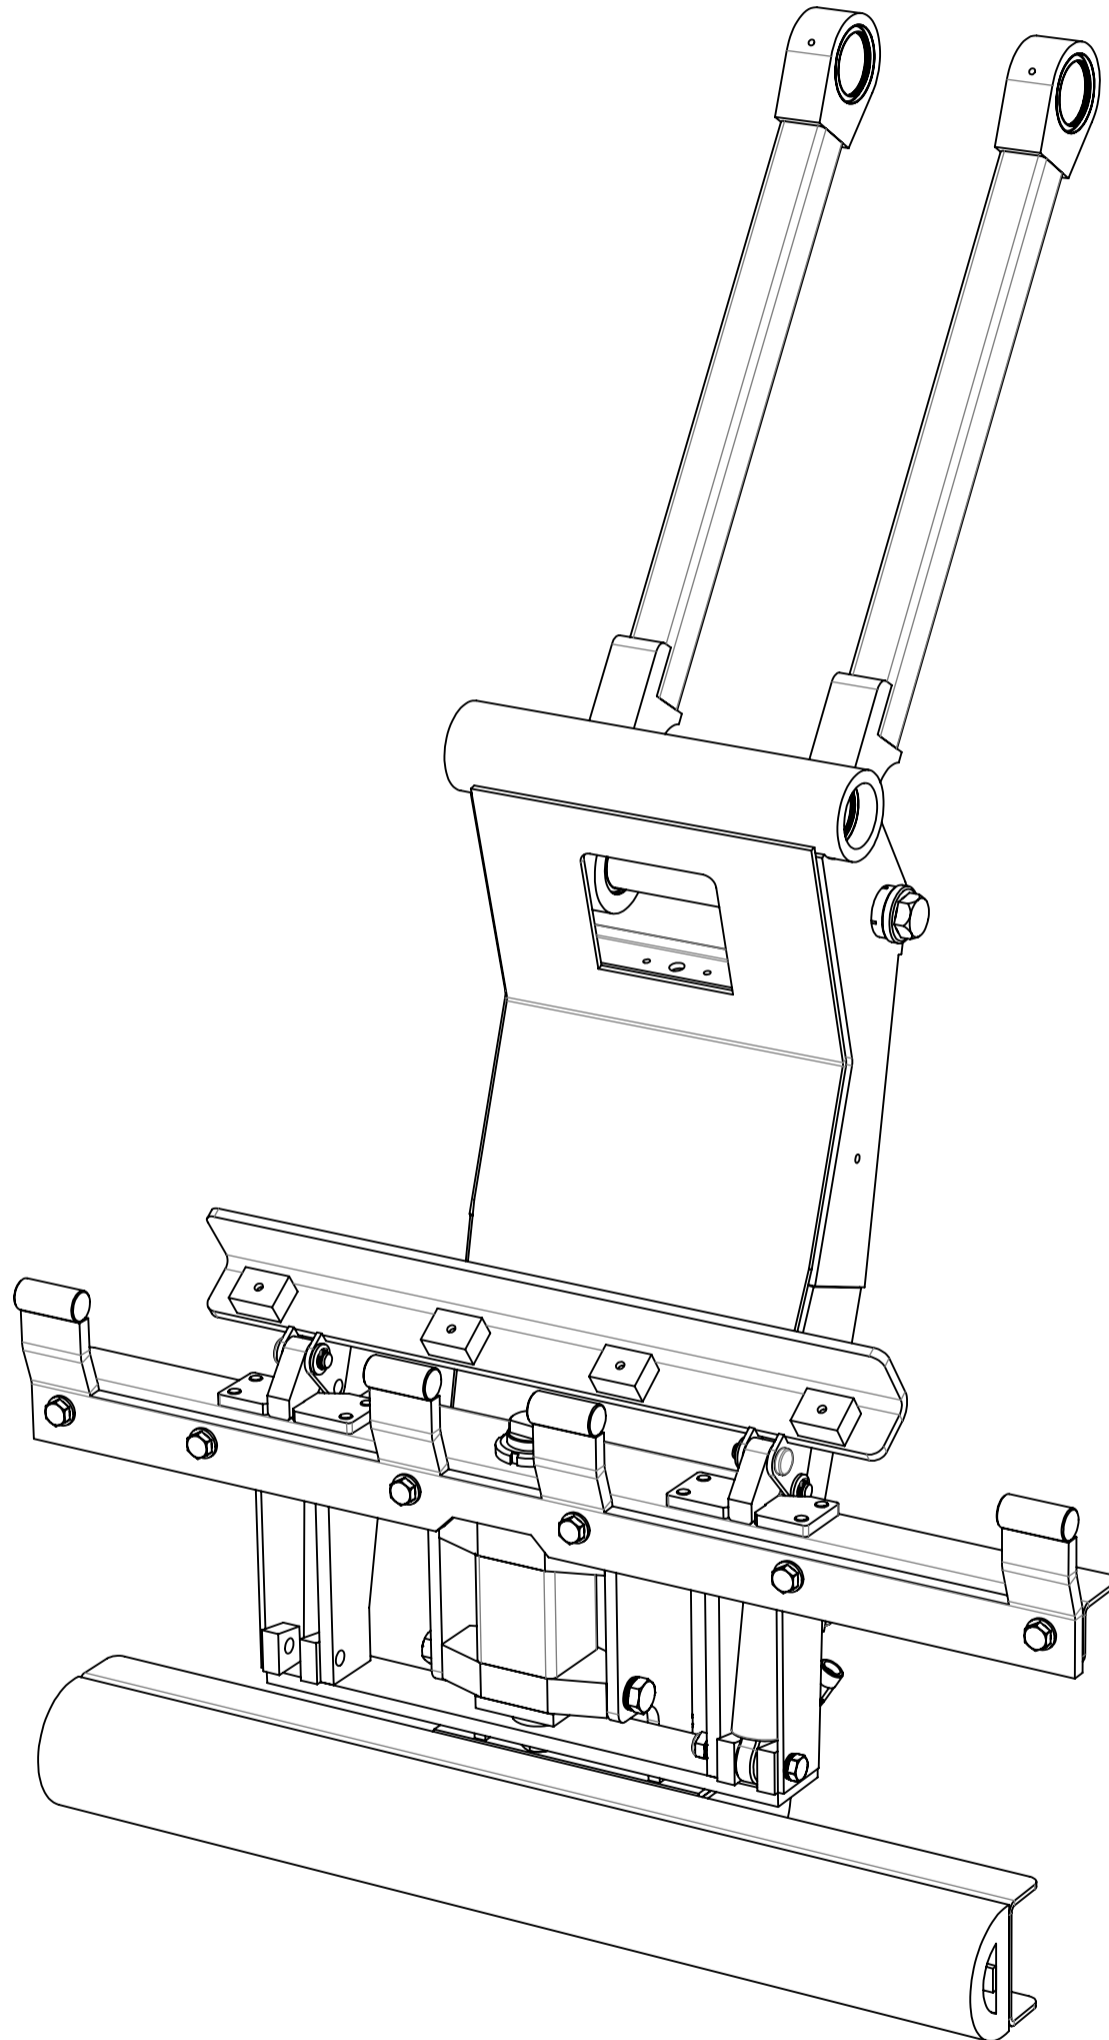 

 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

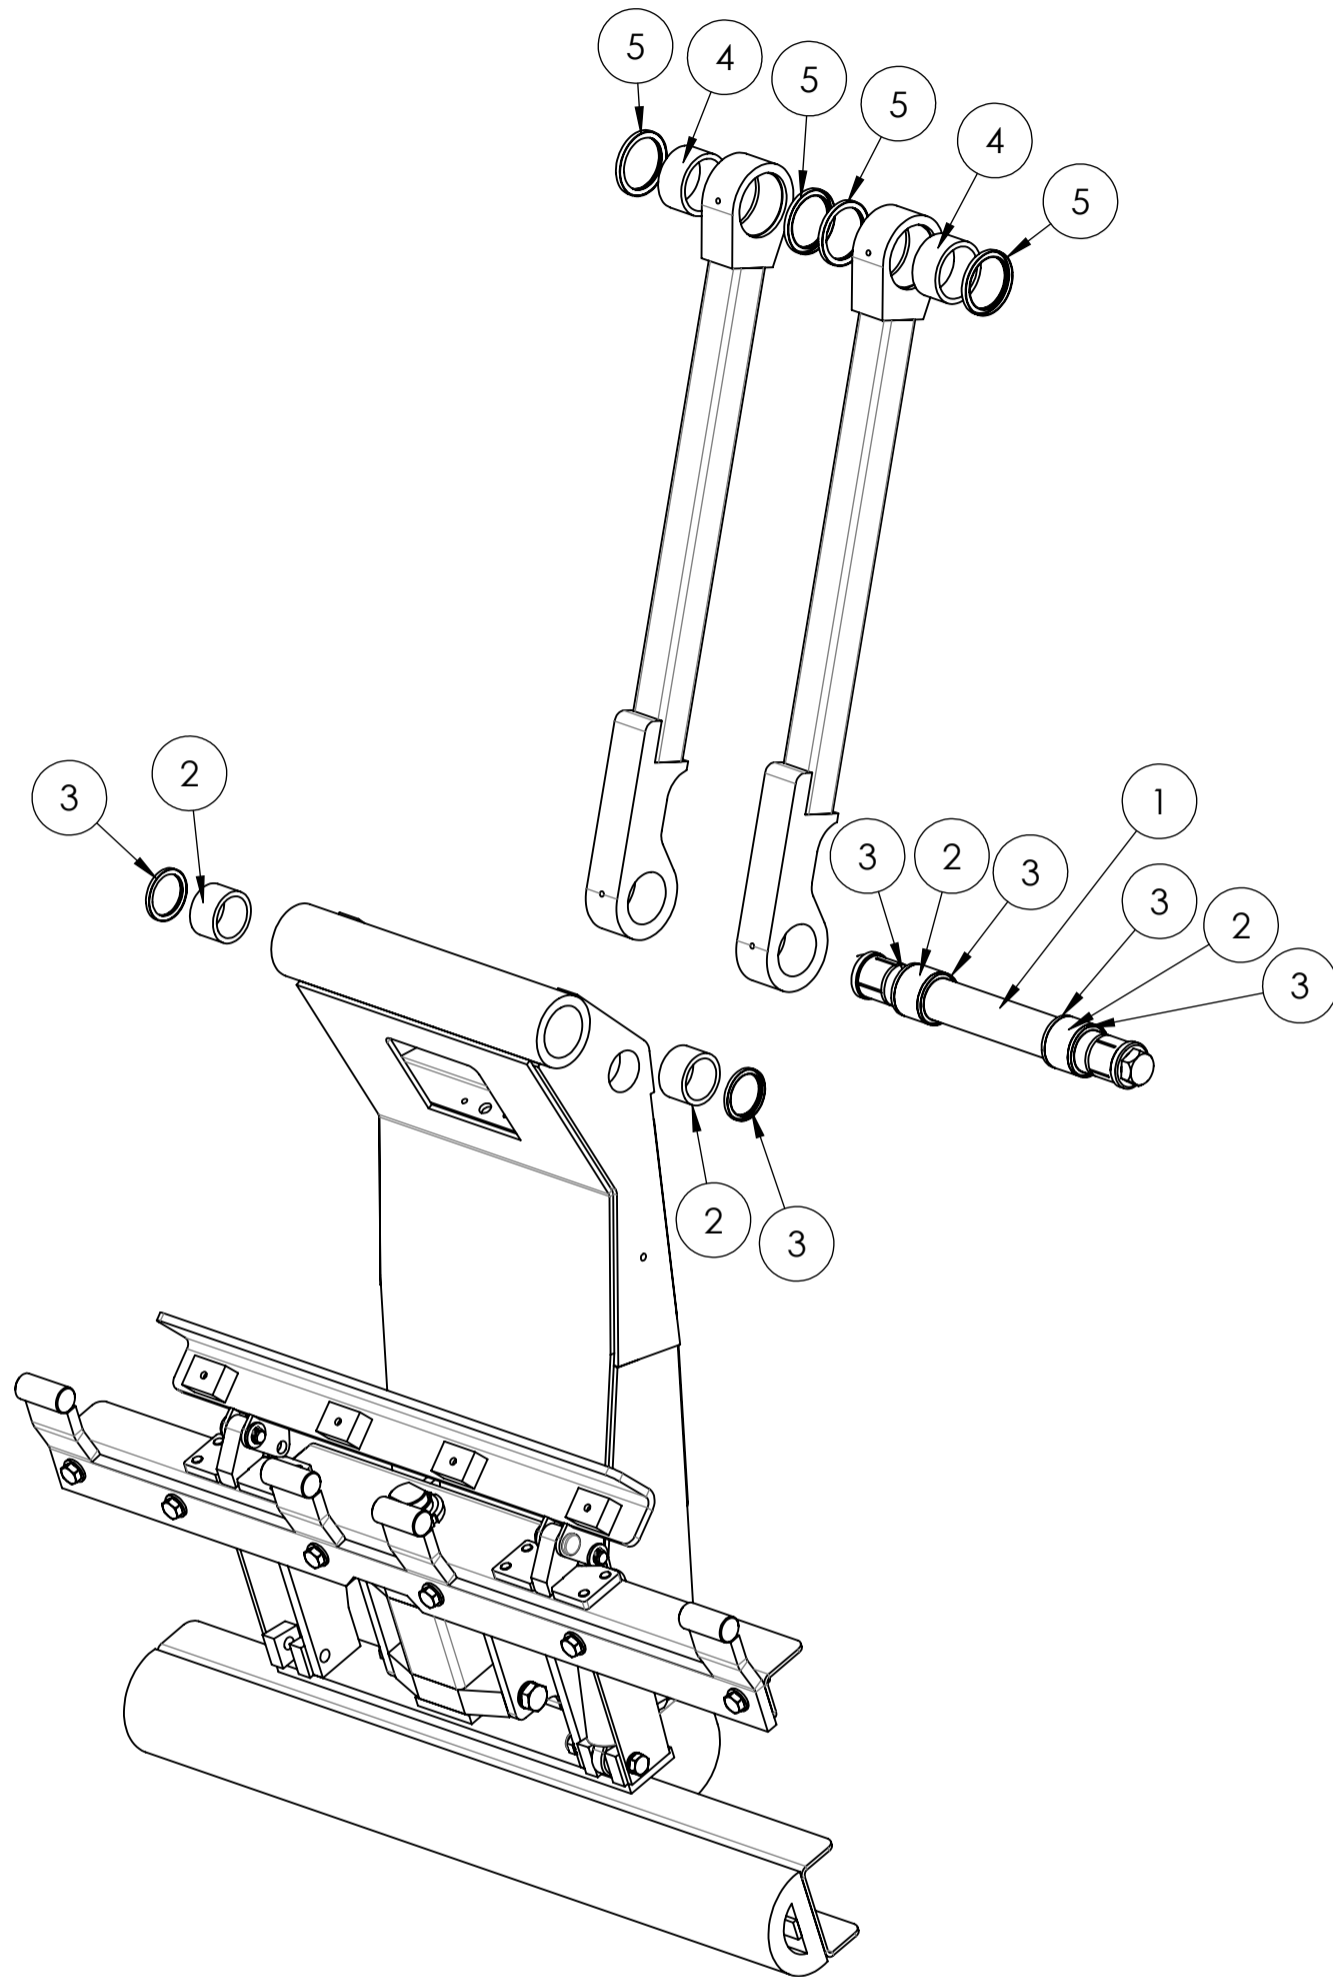


5	Radialtätning	Radial Seal	1515638	
4	Johnson Bussning	Johnson Bushing	1519572	
3	Radialtätning	Radial Seal	1515636	
2	Johnson Bussning	Johnson Bushing	1518826	
1	Expanderbult	Expansion bolt	1515435	1
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.


## Övre bussningar och bult-Upper bushings and bolt

 1523883 Vagga SL STD-Cradle SL STD  
2013-11-29  
Rev. 1 Date: 2014-03-28

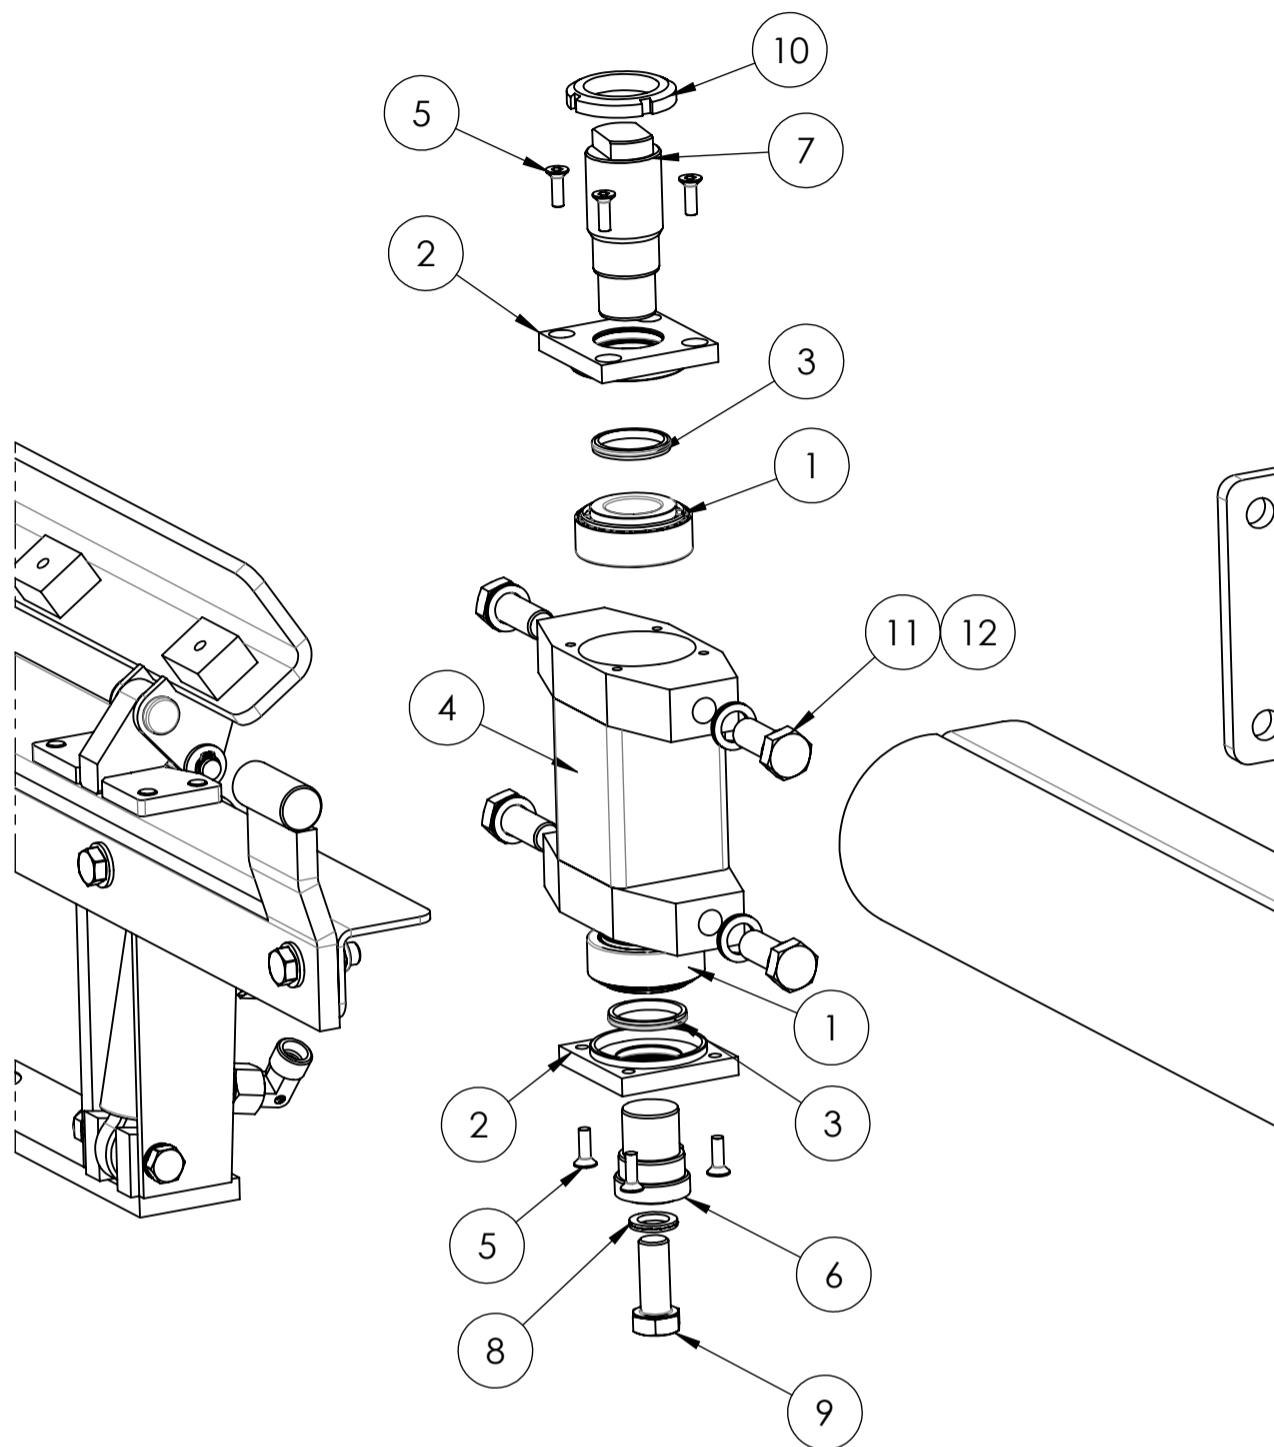


12	Nordlock 16	Nordlock 16	1506742	
11	Skruv	Screw	1506711	
10	KM mutter	KM Nut	504576	
9	Skruv	Screw	1506711	
8	Nordlock 16	Nordlock 16	1506742	
7	Axel	Axle	1515580	2
6	Axeltapp	Shaft	1515627	
5	Skruv	Screw	1507457	
4	Lagerhus	Bearing Housing	1518303	
3	Tätning	Seal	1513822	
2	Lock	Cover	1515626	
1	Koniskt Rullager	Bearing	1515695	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

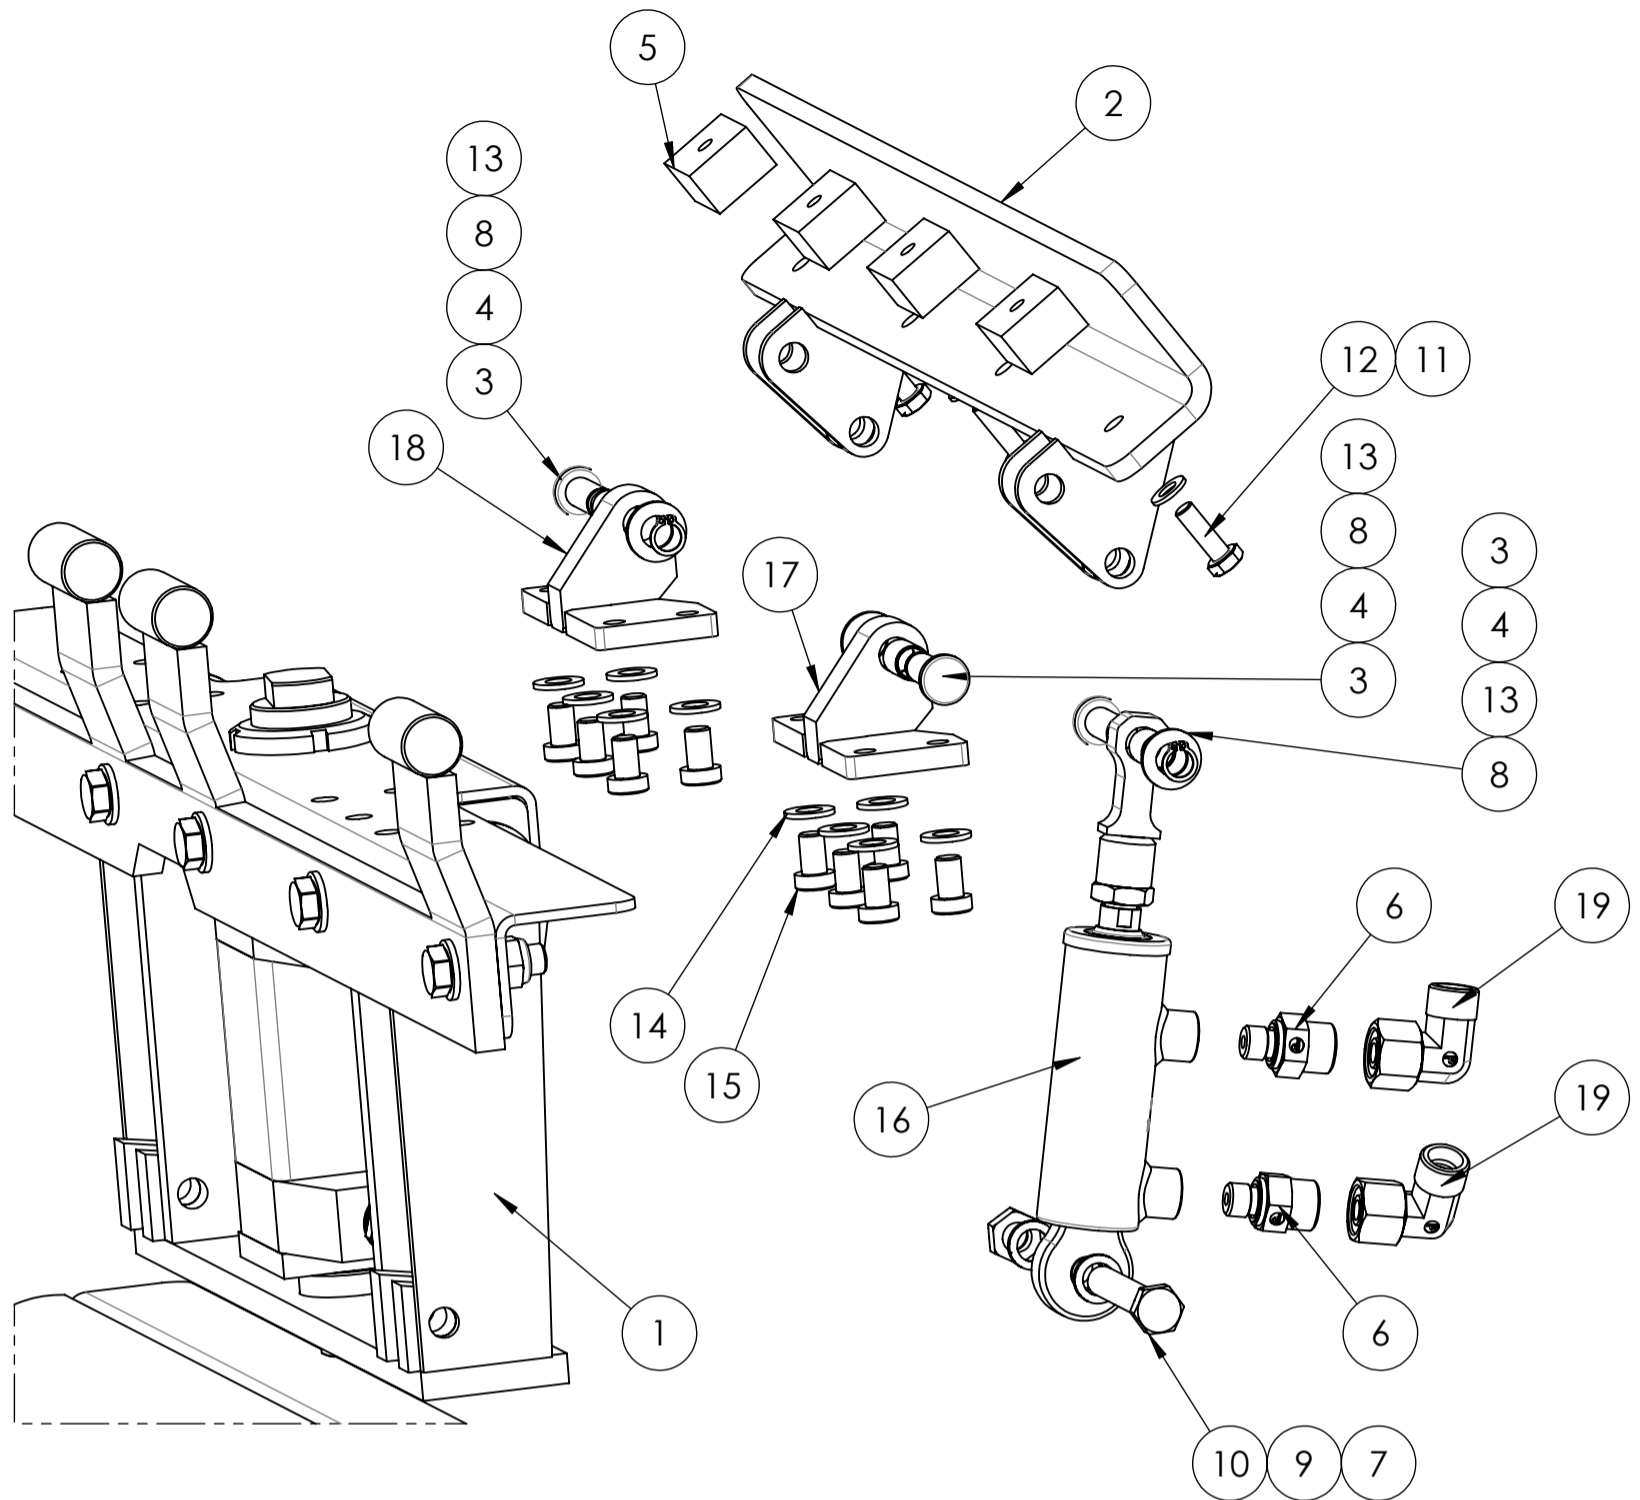

19	Adapter	Adapter	1505760	
18	Kamfäste SL höger	Comb bracket right	1525602	1
17	Kamfäste SL vänster	Comb bracket left	1525605	1
16	Hydraulcylinder	Hydraulic cylinder	1524788	1
15	Skruv	Screw	1525599	1
14	Bricka	Washer	1504900	
13	Segersäkring	Ring, snap	1506684	
12	Skruv	Screw	1504922	
11	Bricka	Washer	1504899	
10	Skruv	Screw	1508794	
9	Nordlock 12	Nordlock 12	1510522	
8	Bricka	Washer	1504901	
7	Låsmutter	Locknut	1505258	
6	Adapter	Adapter	1506074	
5	Plåt	Block	1517076	
4	Bussning	Bushing	1515720	
3	Bult	Bolt	1505773	
2	Kärllåsklaff	Bin lock Flap	1515648	2
1	Ram T-vagga SL	Frame T-Cradle SL	1518981	2
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 
Note! The images are for reference only. Components marked with \* contact spare part branch.

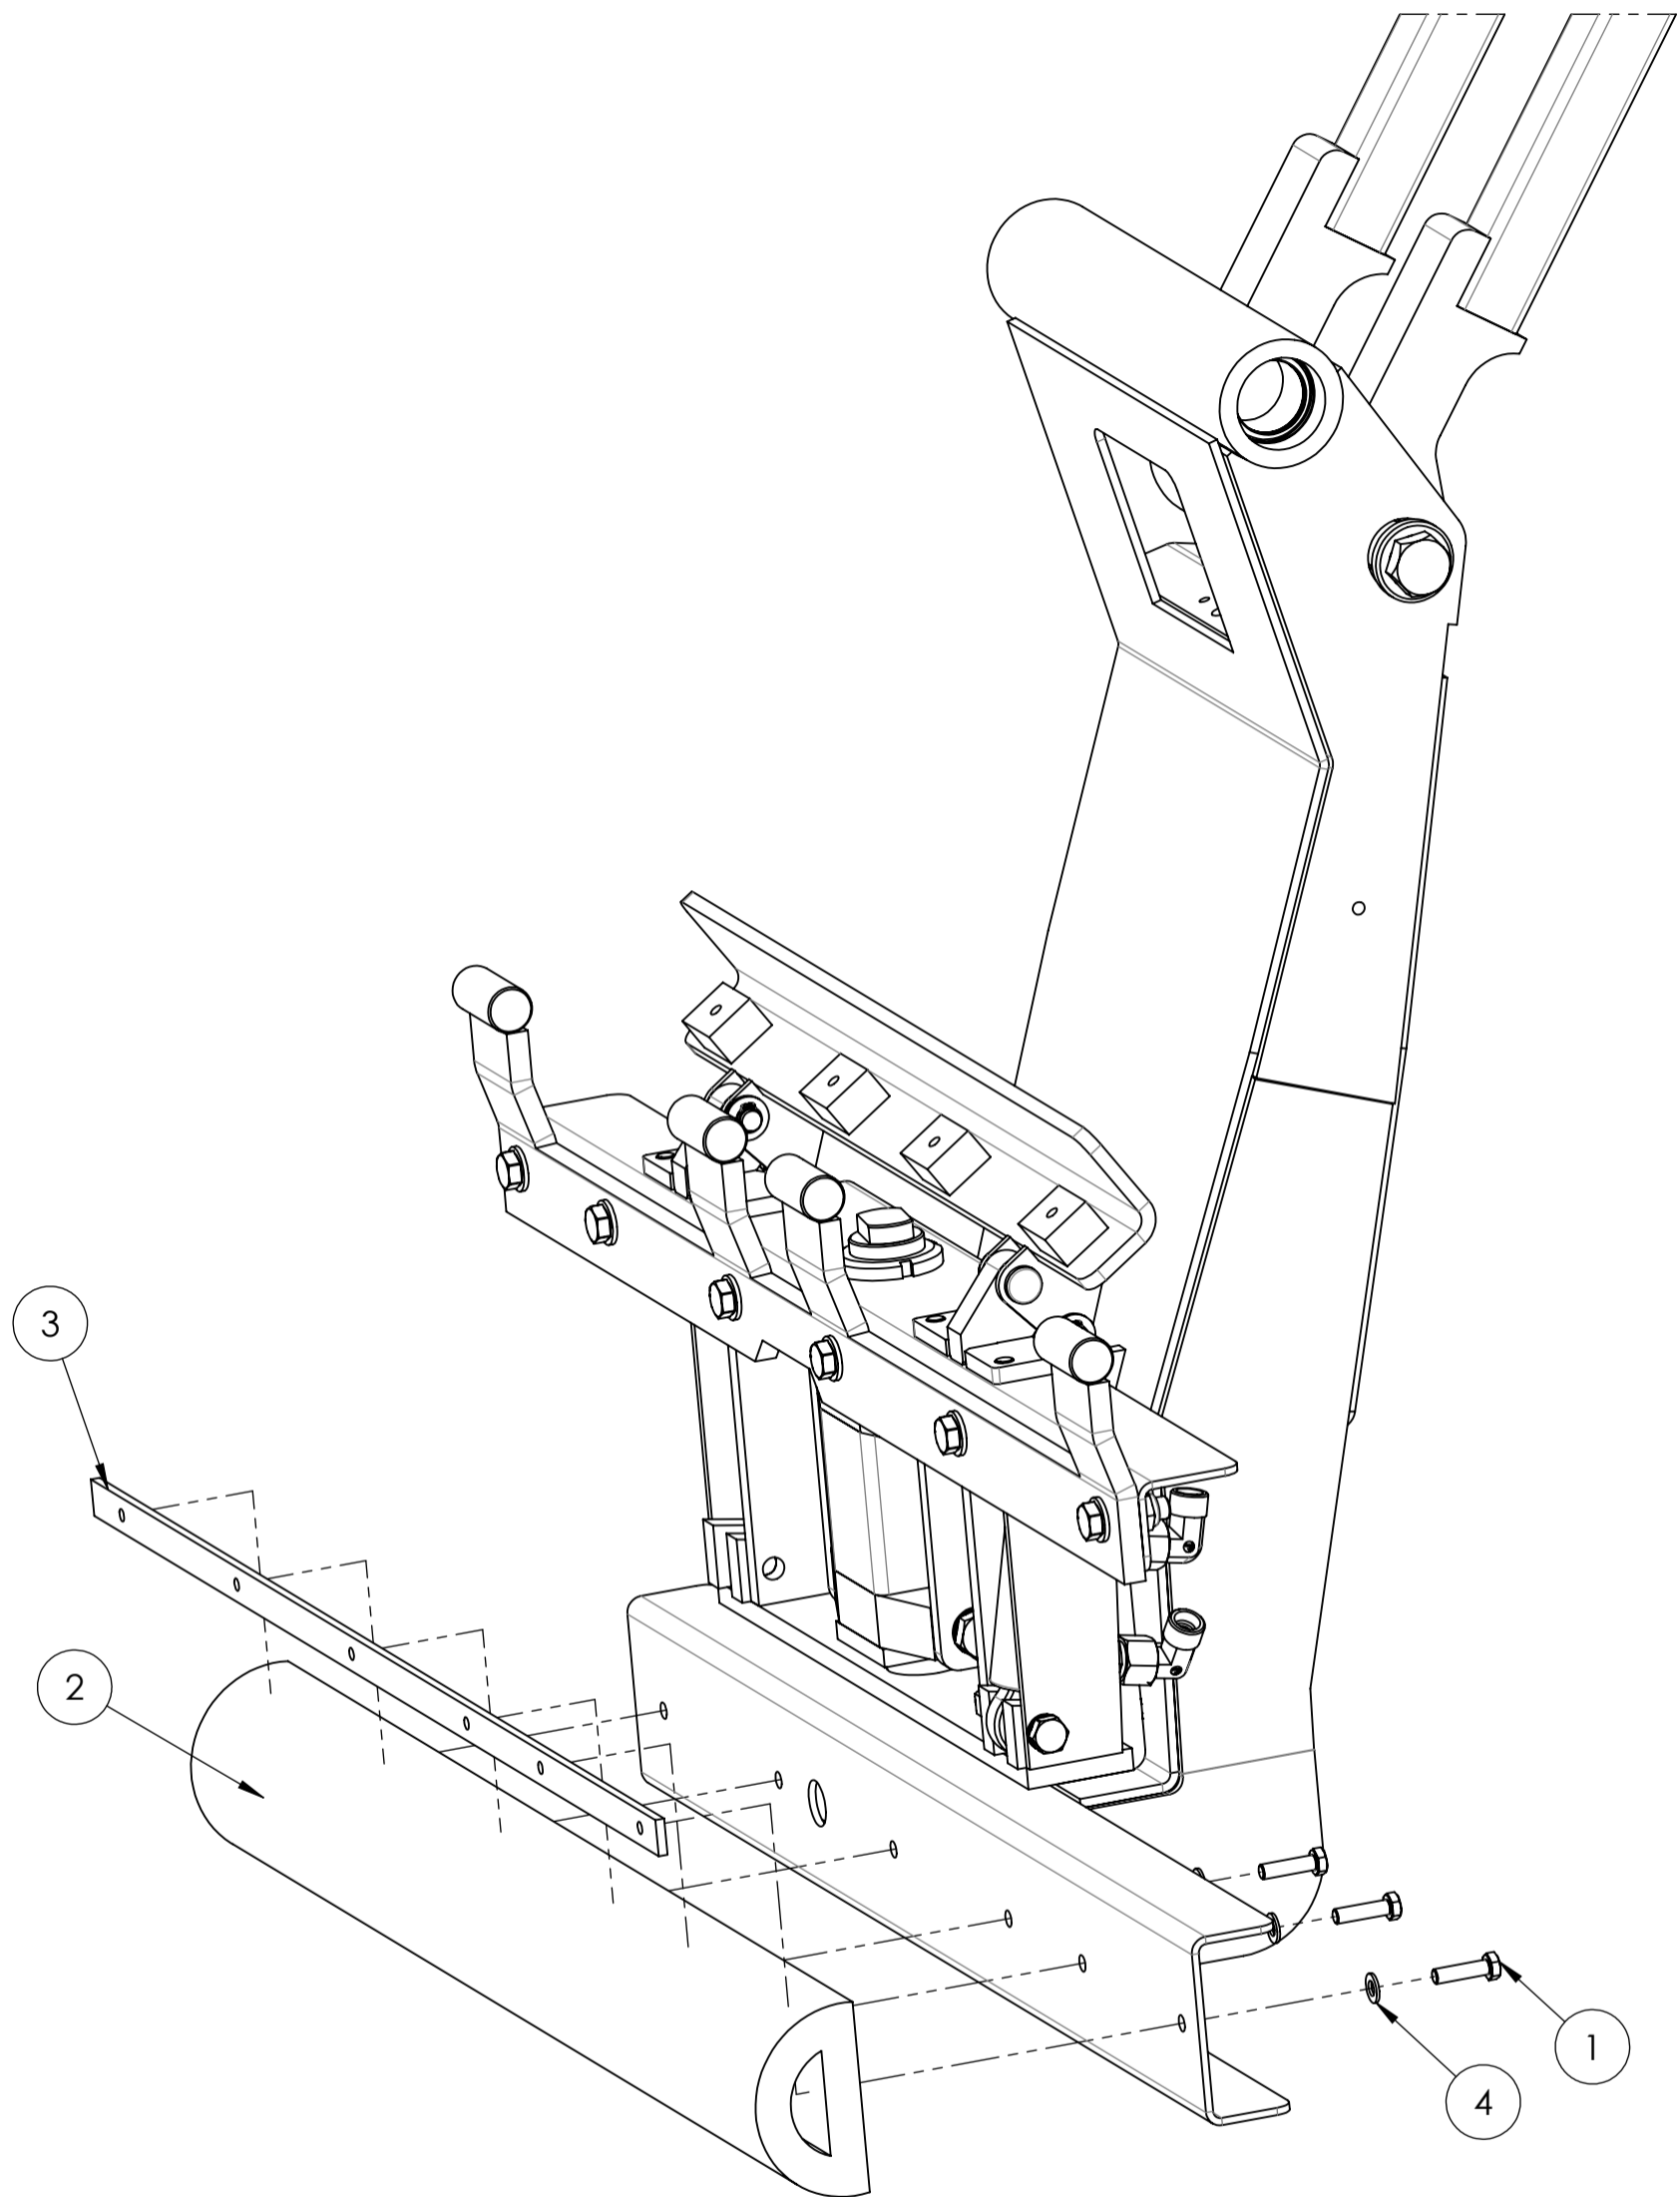


4	Bricka	Washer	1504899	
3	Gummihållare	Rubber fender holder	1512986	
2	Gummifender	Rubber fender	1512985	
1	Skruv	Screw	1505262	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Vagga SL högt läge-Cradle SL high point

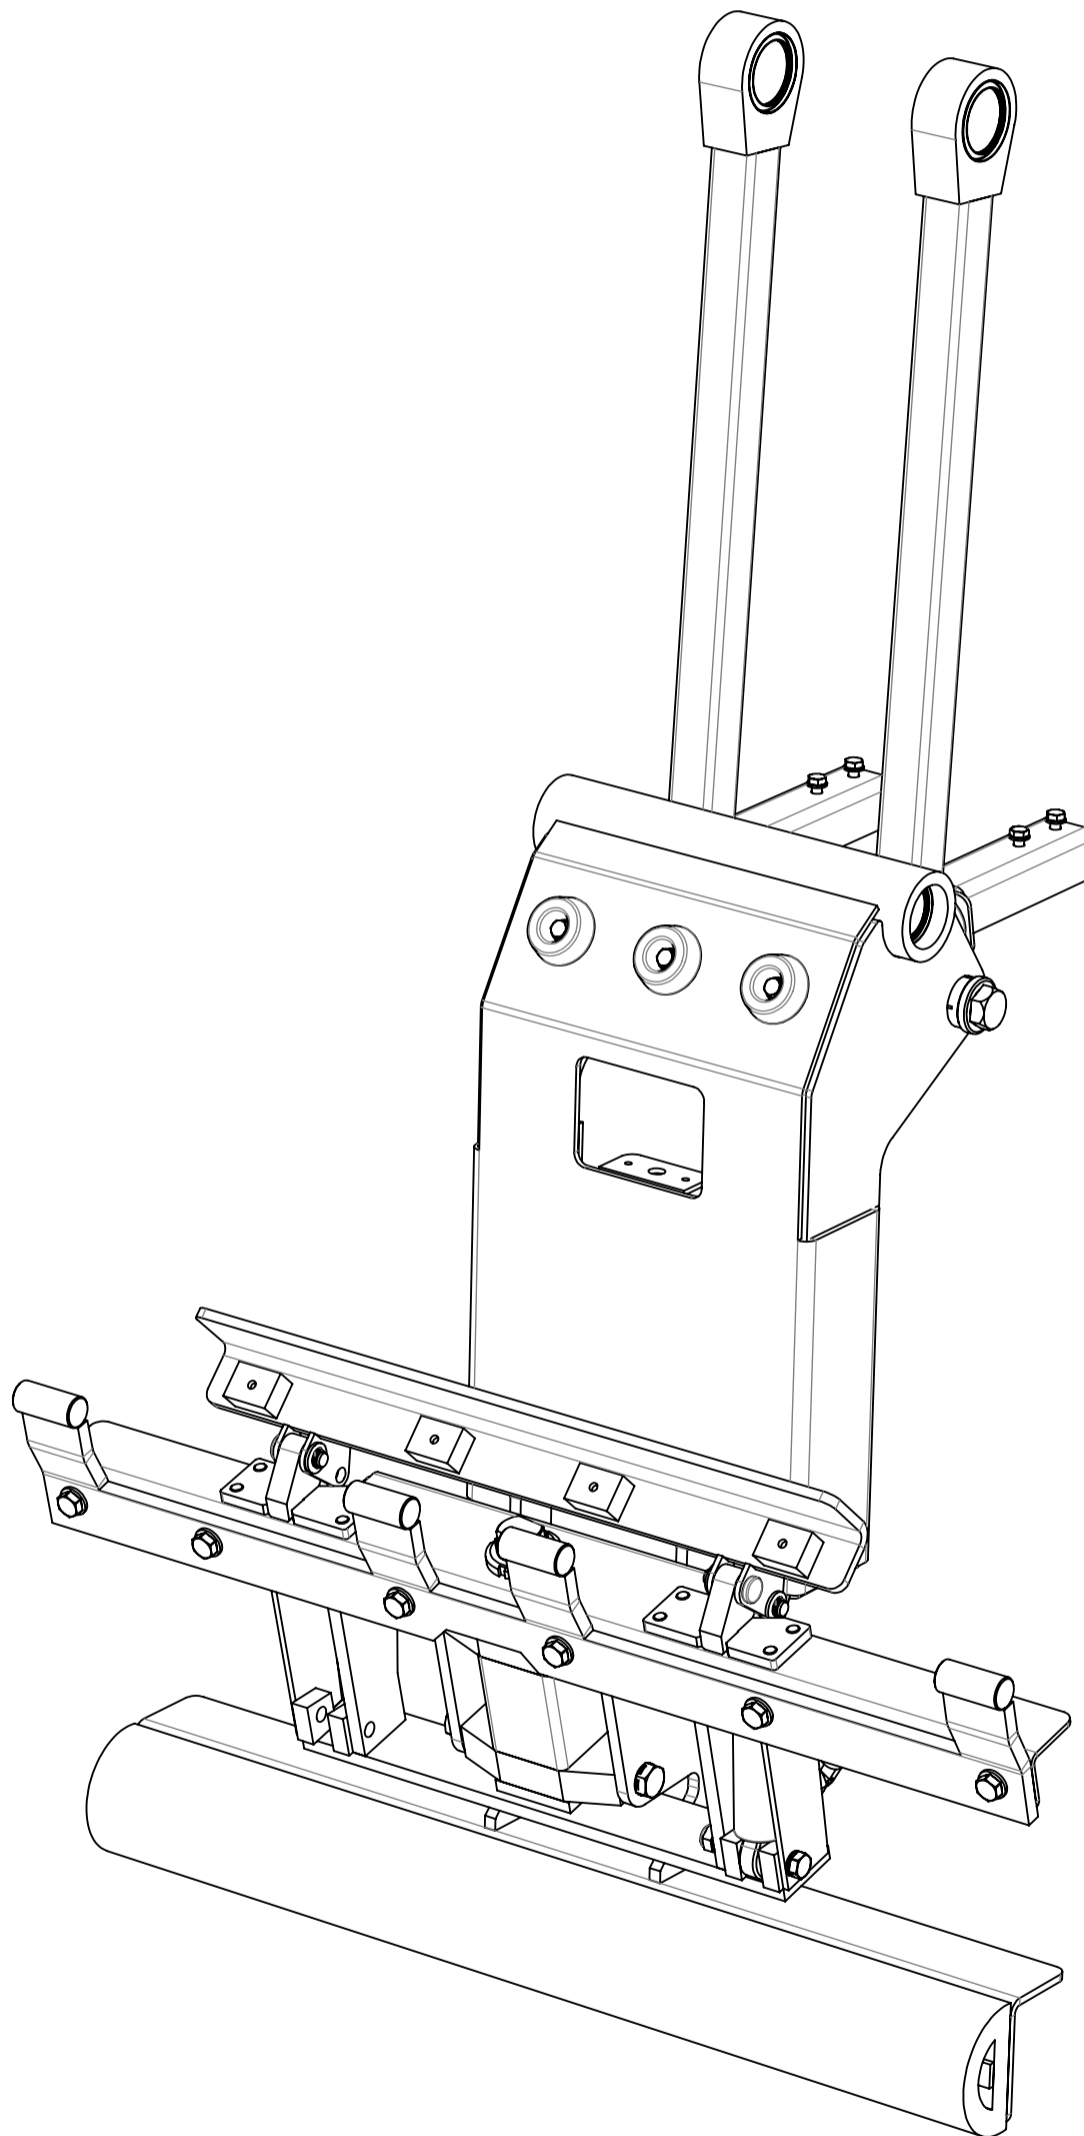 

 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

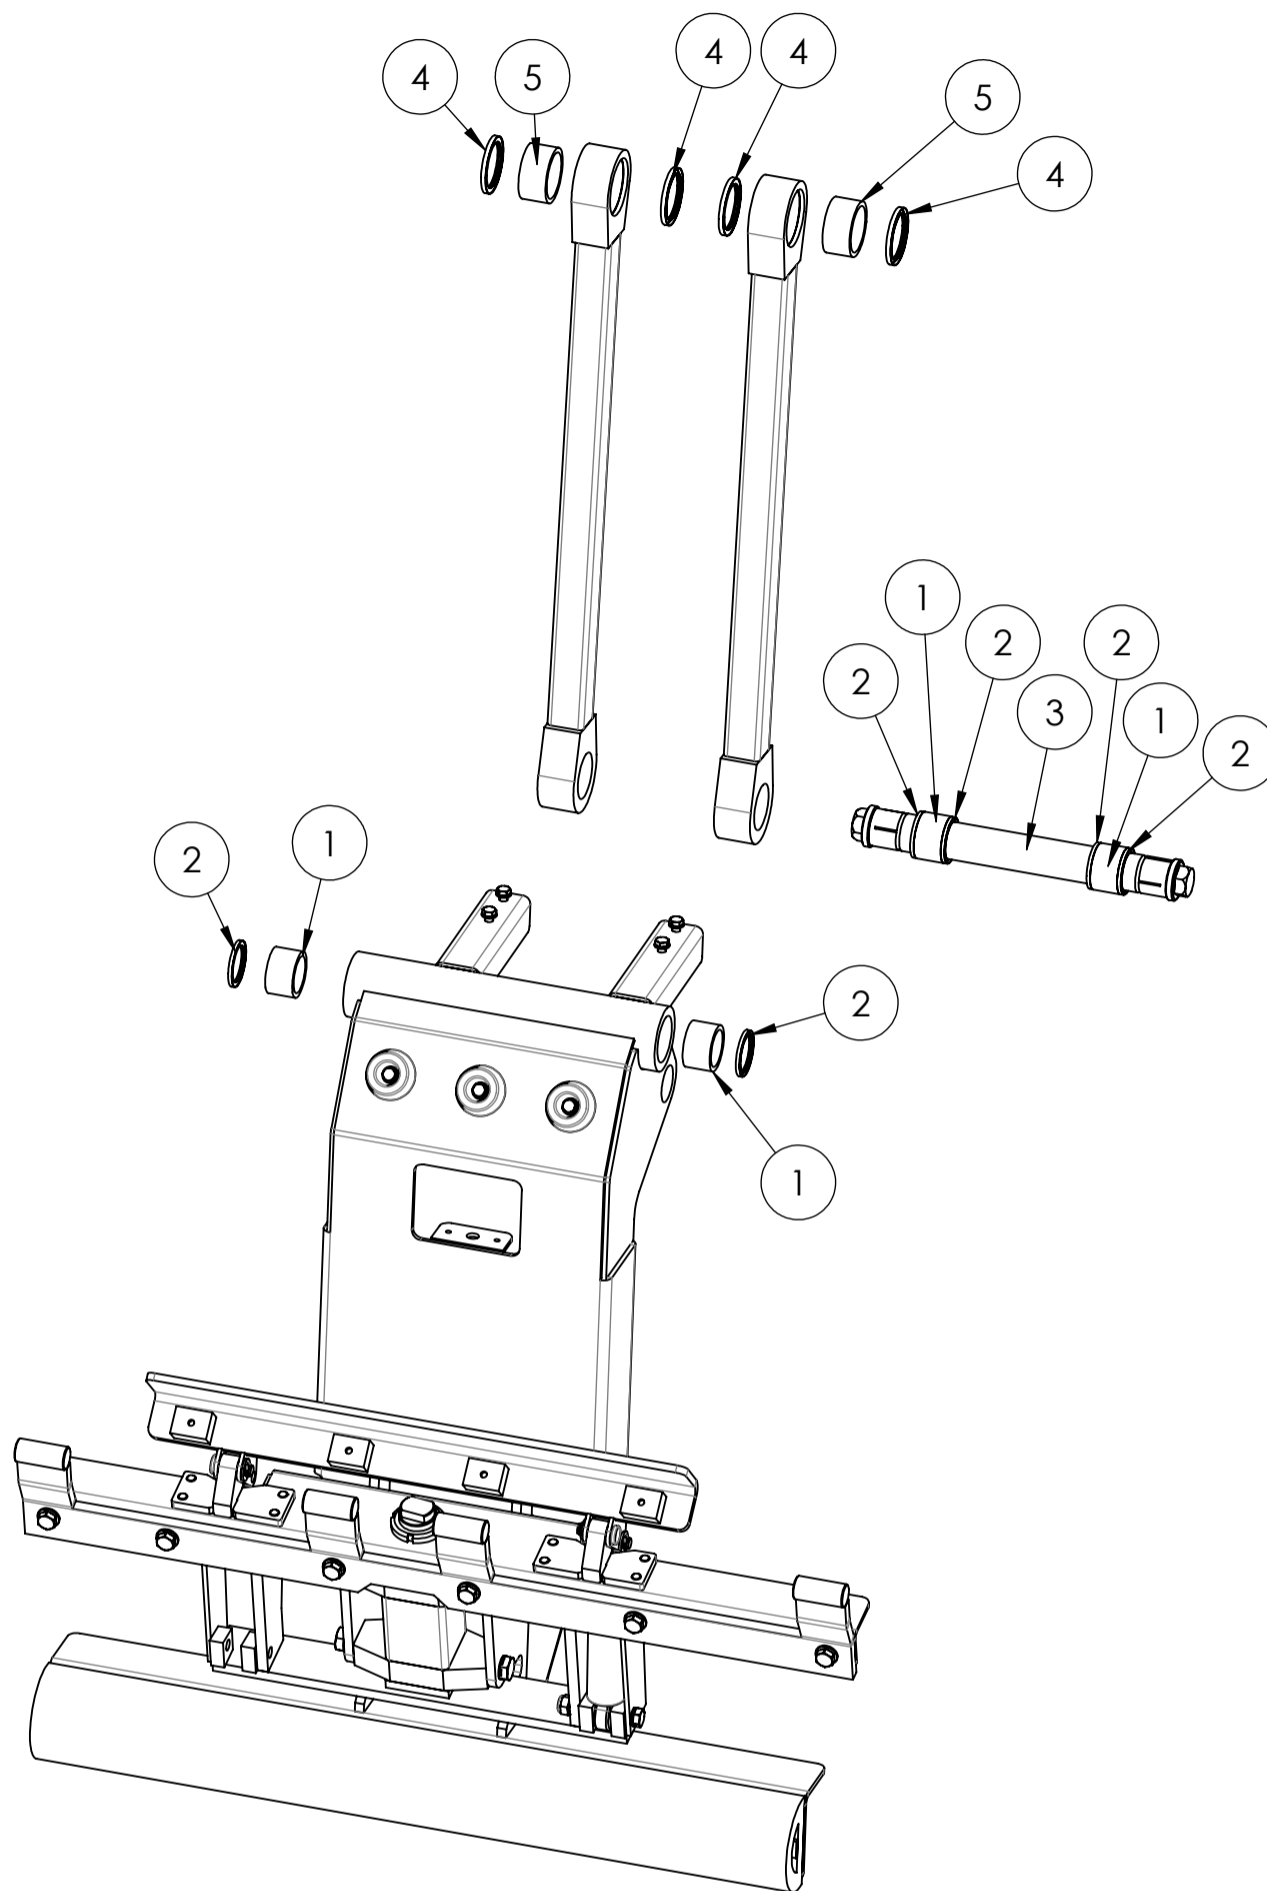


Note! The images are for reference only. Components marked with \* contact spare part branch.

5	Bussning	Bushing	1519572	
4	Radialtätning	Radial seal	1515638	
3	Expanderbult	Expansion bolt	1515435	1
2	Radialtätning	Radial seal	1515636	
1	Bussning	Bushing	1518826	
ITEM NO.	Benämning	Title	Part no	YAP.Rev


## Övre bussningar och bult-Upper bushings and bolt

 1523922	Vagga SL högt läge-Cradle SL high point
2014-01-30	
Rev. 1	Date: 2014-03-28

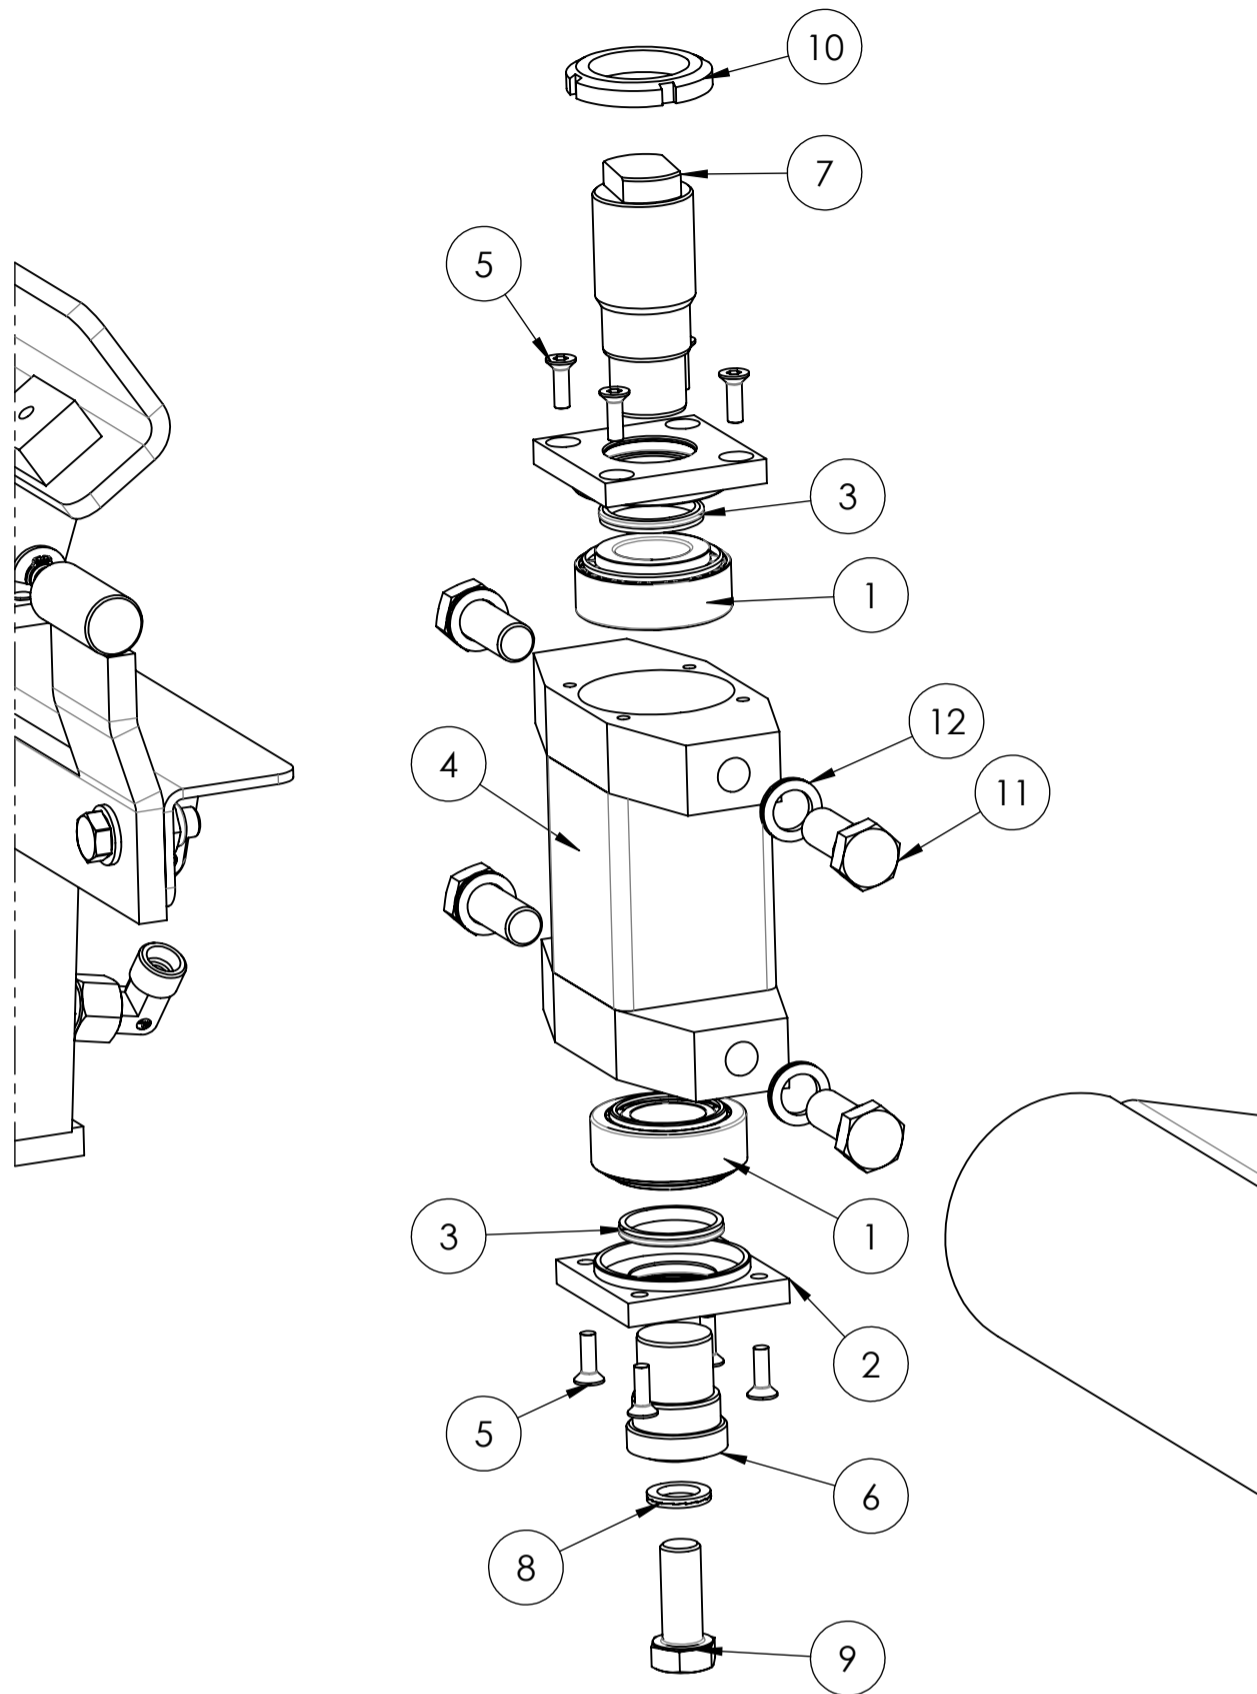

12	Nordlock 16	Nordlock 16	1506742	
11	Skruv	Screw	1506711	
10	KM mutter	KM nut	504576	
9	Skruv	Screw	1506711	
8	Nordlock 16	Nordlock 16	1506742	
7	Axel	Axle	1515580	2
6	Axeltapp	Shaft	1515627	
5	Skruv	Screw	1507457	
4	Lagerhus	Bearing housing	1518303	
3	Tätning	Seal	1513822	
2	Lock	Cover	1515626	
1	Koniskt Rullager	Bearing	1515695	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

 Note! The images are for reference only. Components marked with \* contact spare part branch.

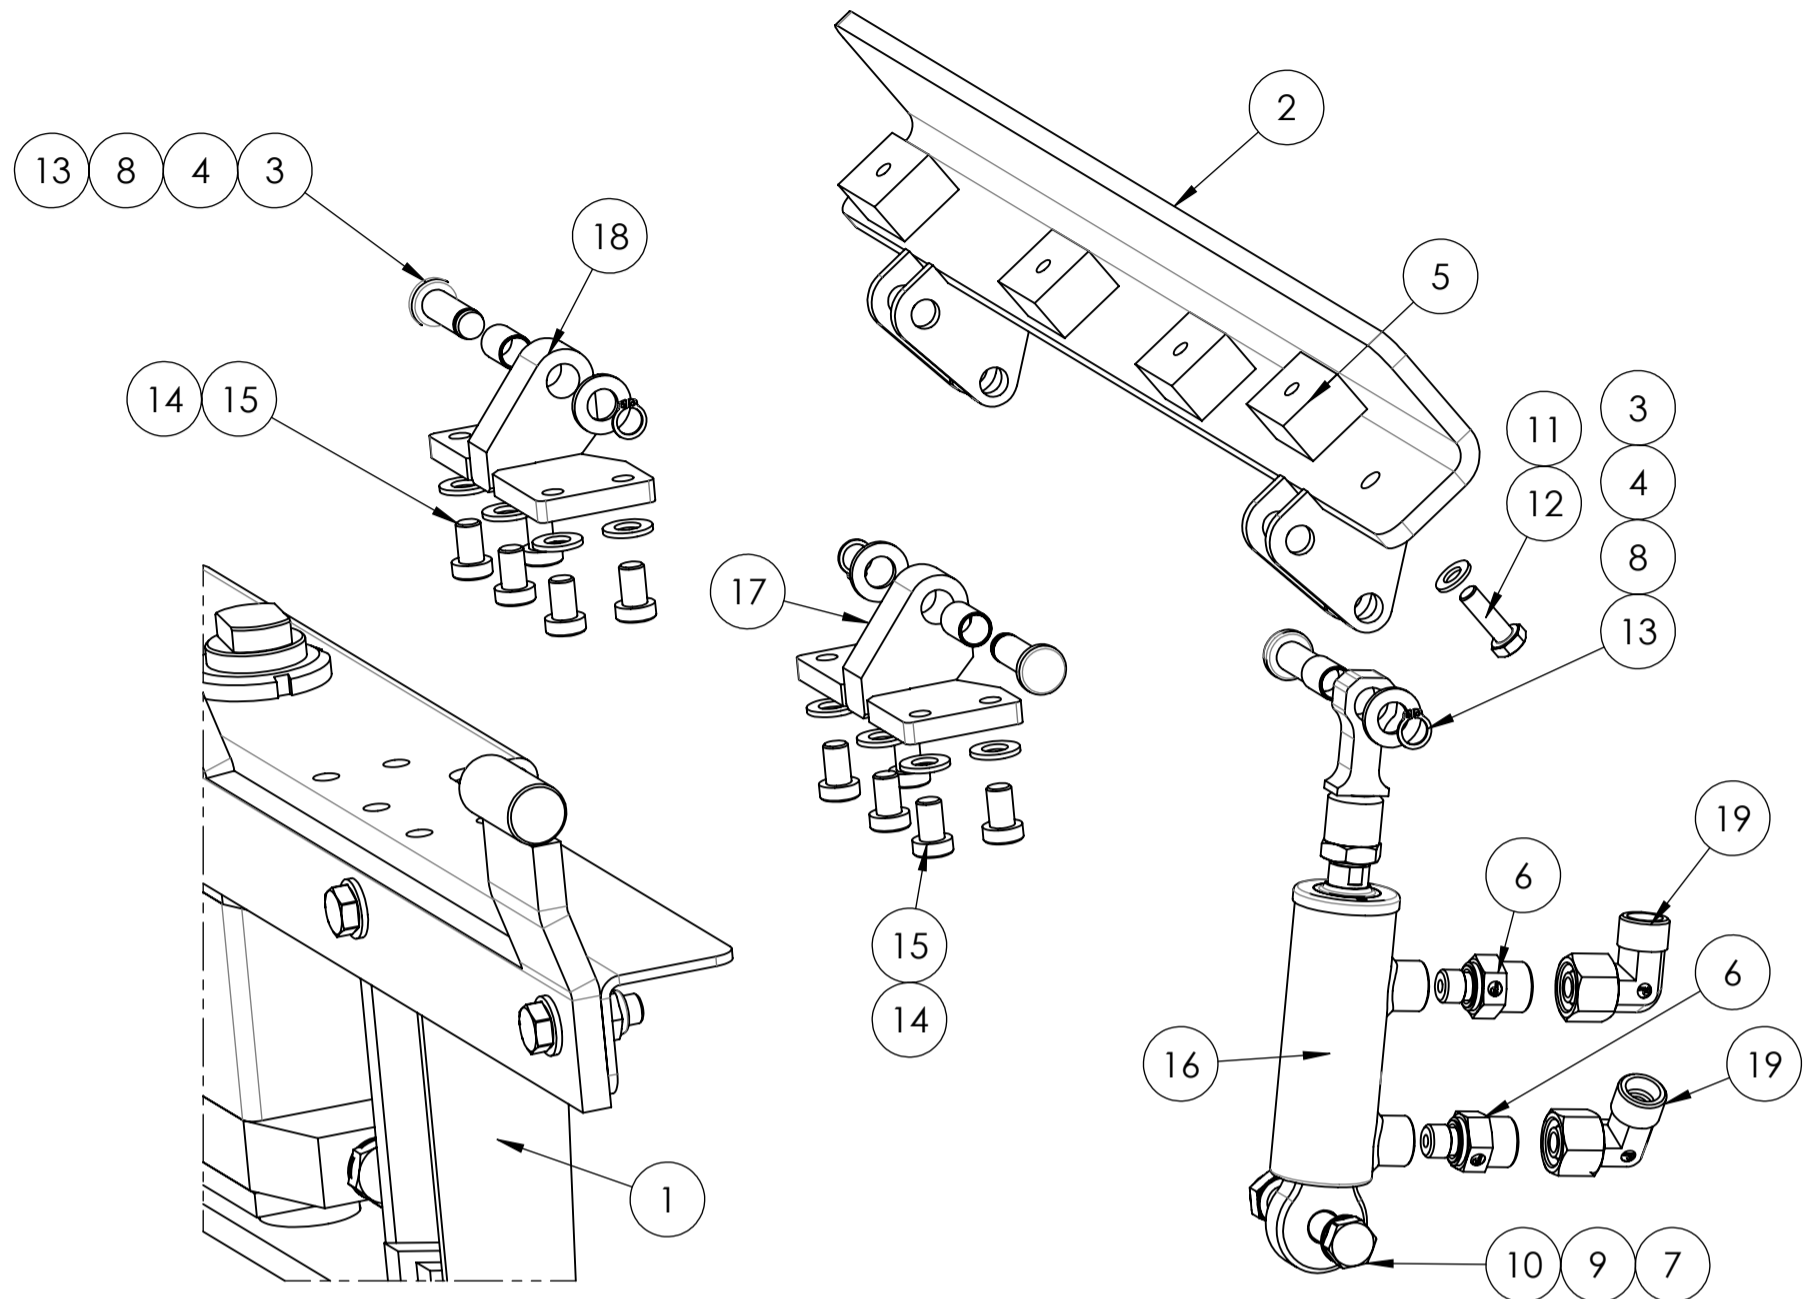


19	Adapter	Adapter	1505760	
18	Kamfäste SL höger	Comb bracket right	1525602	1
17	Kamfäste SL vänster	Comb bracket left	1525605	1
16	Hydraulcylinder	Hydraulic cylinder	1524788	1
15	Skruv	Screw	1525599	1
14	Bricka	Washer	1504900	
13	Segersäkring	Ring, snap	1506684	
12	Skruv	Screw	1504922	
11	Bricka BRB 8,4	Washer	1504899	
10	Skruv	Screw	1508794	
9	Nordlock 12	Nordlock 12	1510522	
8	Bricka	Washer	1504901	
7	Låsmutter	Locking nut	1505258	
6	Adapter	Adapter	1506074	
5	Plåt	Block	1517076	
4	Bussning	Båshing	1515720	
3	Bult	Bolt	1505773	
2	Kärllåsklaff	Bin lock Flap	1515648	2
1	Ram T-vagga SL	Frame T-Cradle SL	1518981	2
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

Låsklaff med cylinder-Locking mechanism with cylinder

 
1523922 Vagga SL högt läge-Cradle SL high point  
2014-01-30  
Rev. 1 Date: 2014-03-28

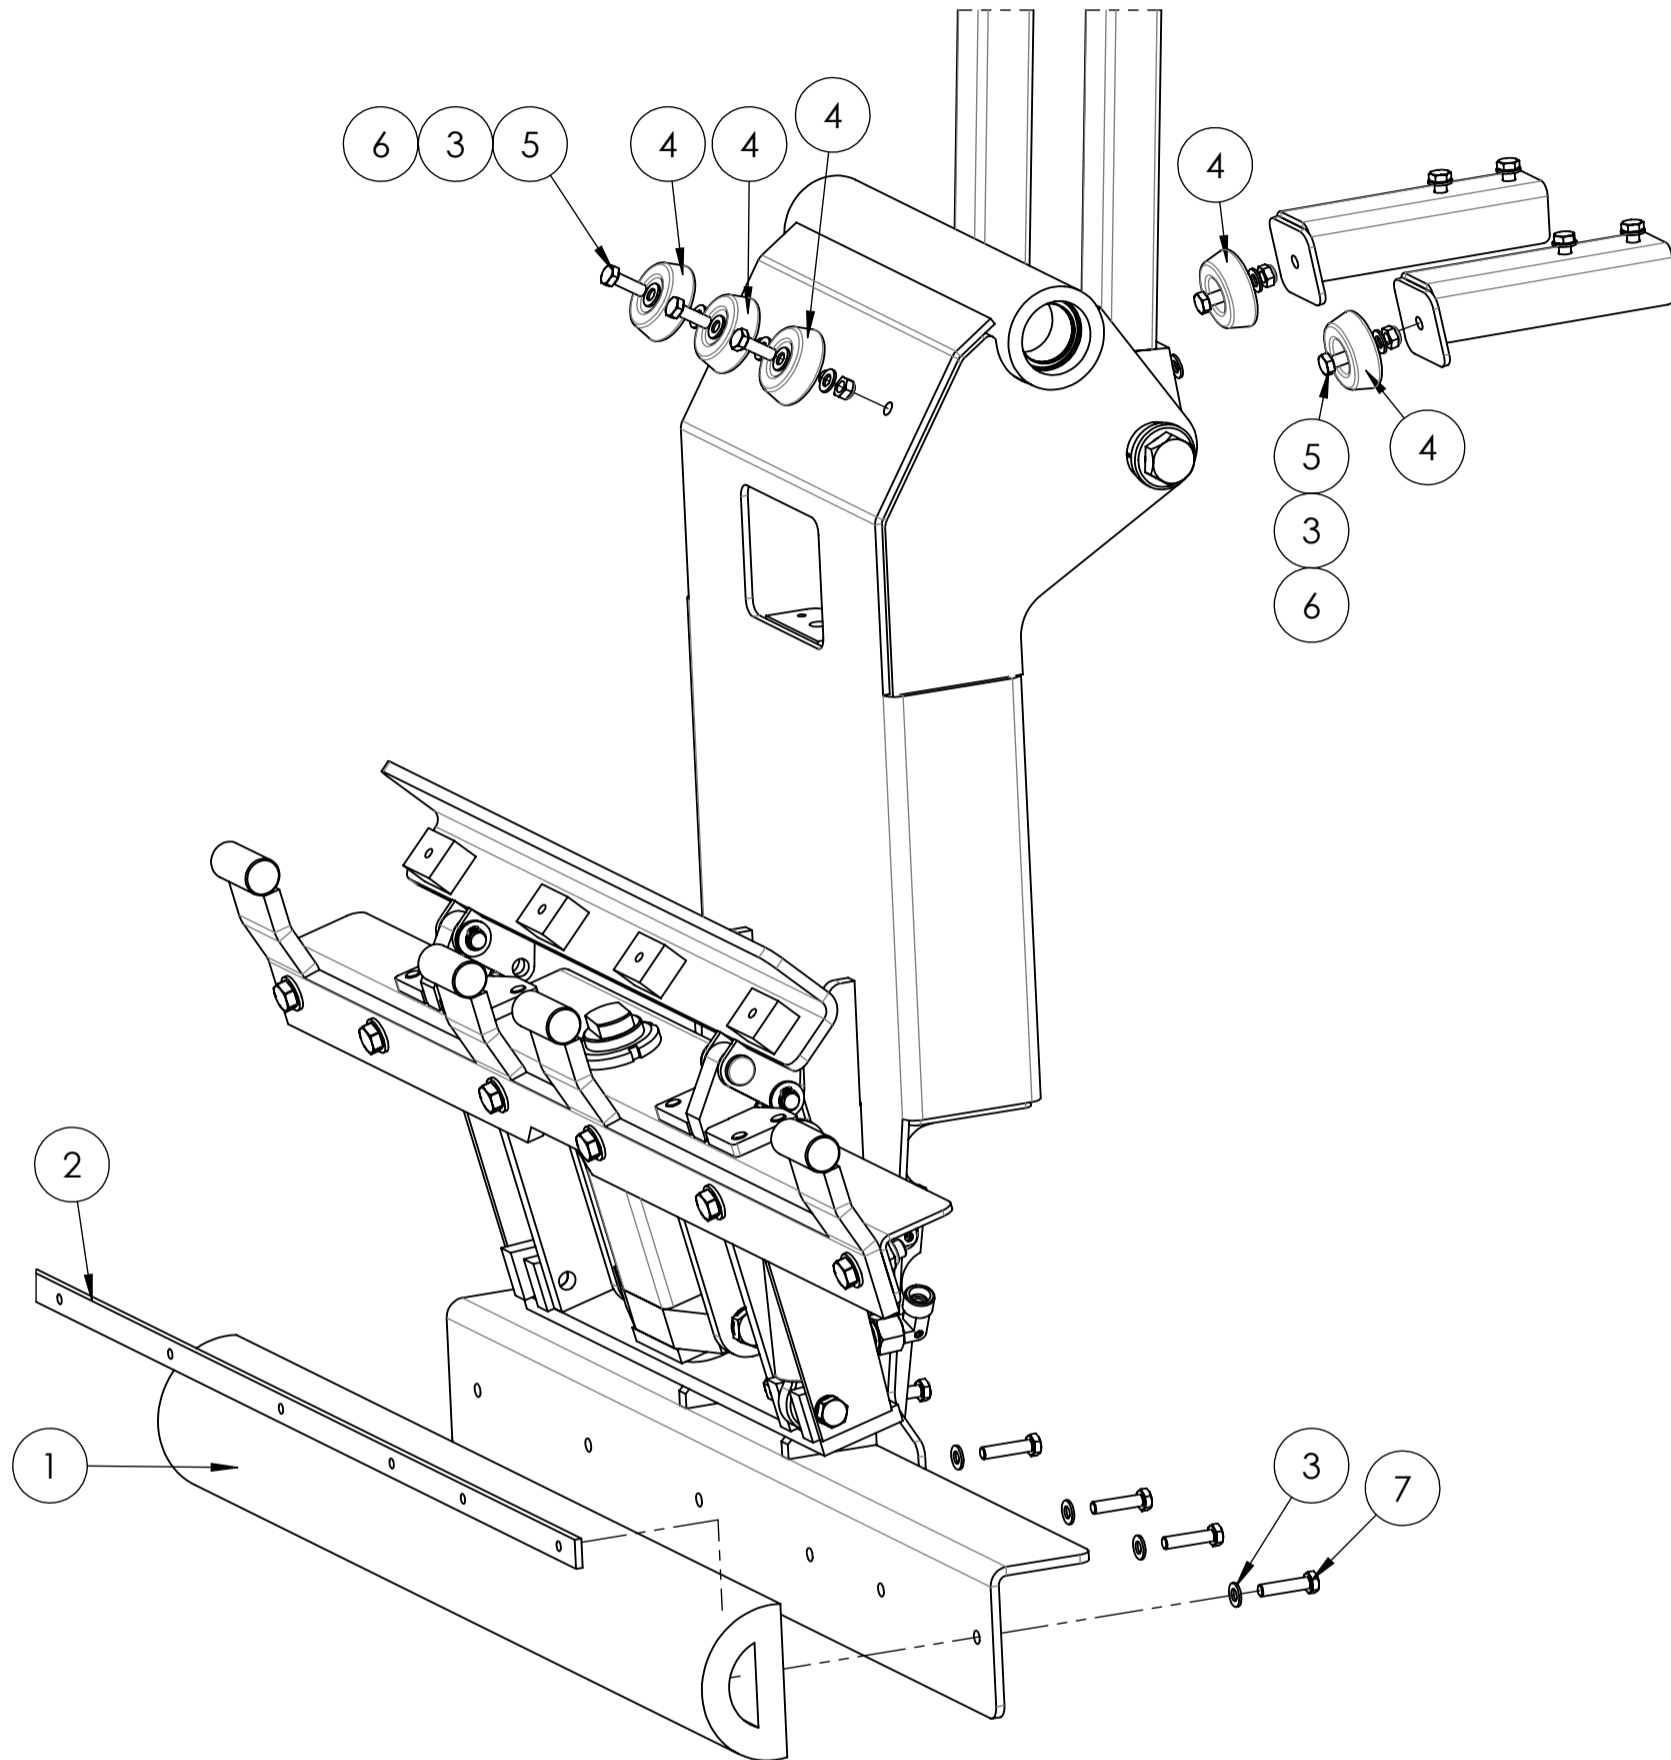


7	Skruv	Screw	1505686	
6	Låsmutter	Locking nut	1505255	
5	Skruv	Screw	1504922	
4	Gummidämpare	Rubber damper	1507924	
3	Bricka	Washer	1504899	
2	Gummihållare	Rubber fender holder	1512986	
1	Gummifender	Rubber fender	1512985	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Hydraultank och filter SL, SL Twin Hydraulic tank and filter SL, SL Twin

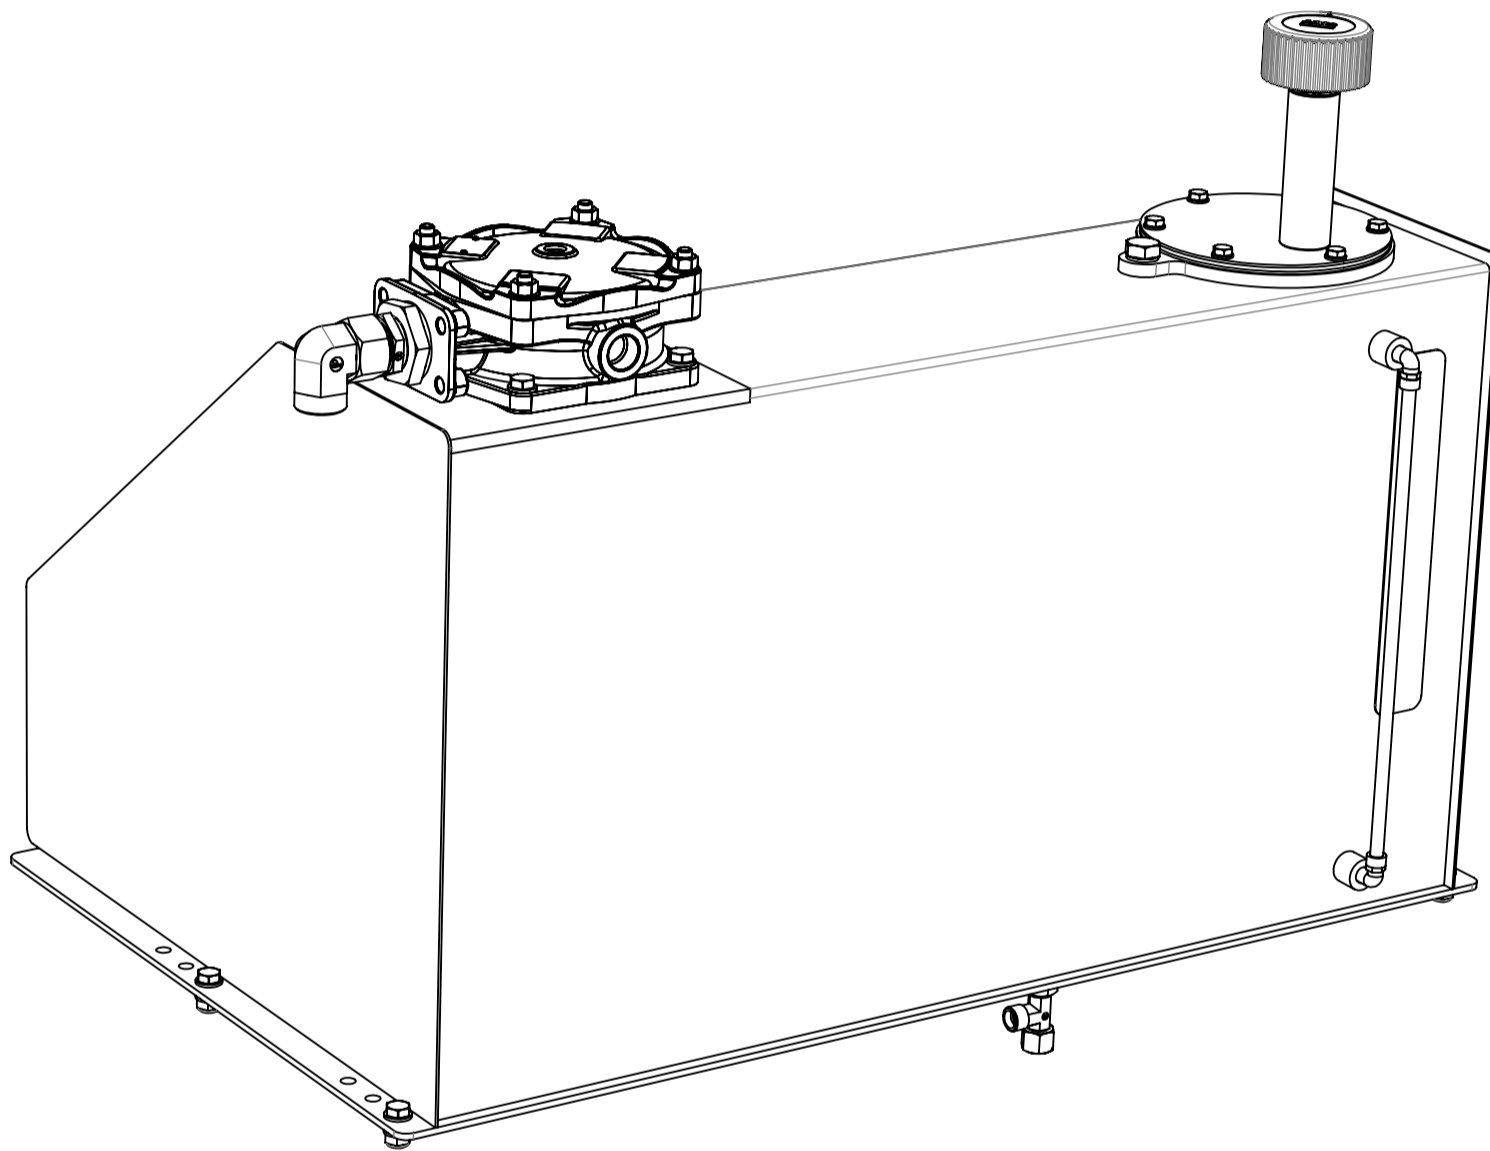 

 
Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

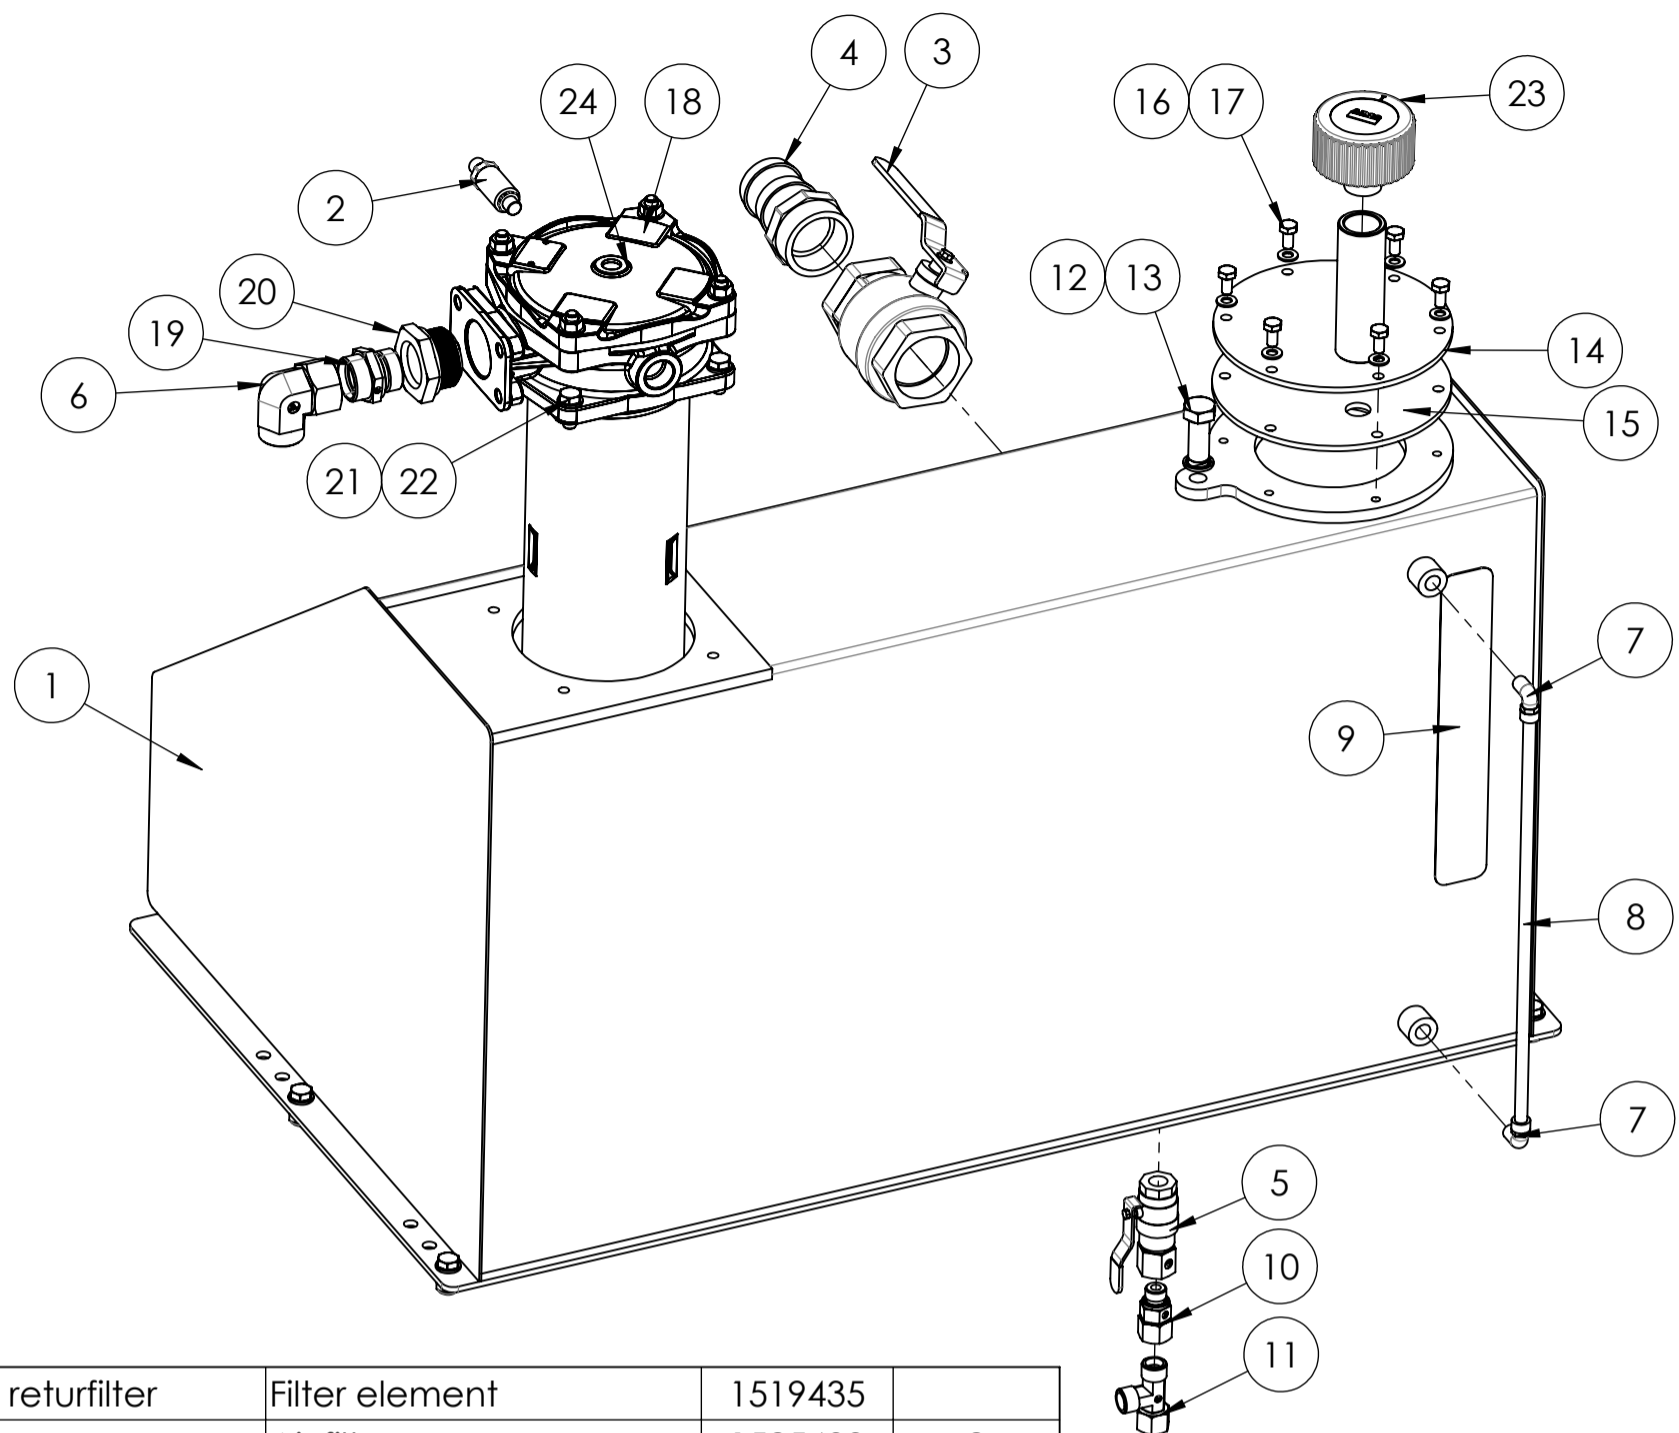


24	Filterinsats returfilter	Filter element	1519435	
23	Lufffilter	Air filter	1525403	2
22	Skruv	Screw	1506628	
21	Bricka	Washer	1504900	
20	Adapter	Adapter	1516695	
19	Adapter	Adapter	1513228	
18	Returfilter	Filter, return	1516693	
17	Skruv	Screw	1506640	
16	Bricka	Washer	1504899	
15	Packning	Gasket	1525690	2
14	Andningslock	Breather	1525689	1
13	Skruv	Screw	1515377	
12	Tredobricka	Tredo washer	1515376	
11	Adapter	Adapter	1505758	
10	Adapter	Adapter	1507478	
9	Tanknivådekal MD	Decal oil level	1506956	
8	Mätrör oljenivå	Oil level tube	1522825	1
7	Vinkel mätrör	Elbow	1505799	
6	Adapter	Adapter	1505769	
5	Kulventil	Valve	1505816	
4	Slangnippel	Hose nipple	1507103	
3	Kulventil	Valve	1505815	
2	Tryckgivare	Pressure sensor	1517308	
1	Hydraultank sidlastare	Hydraulic tank side loader	1516578	5
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.

## Skyddsstötta SL-Support leg SL

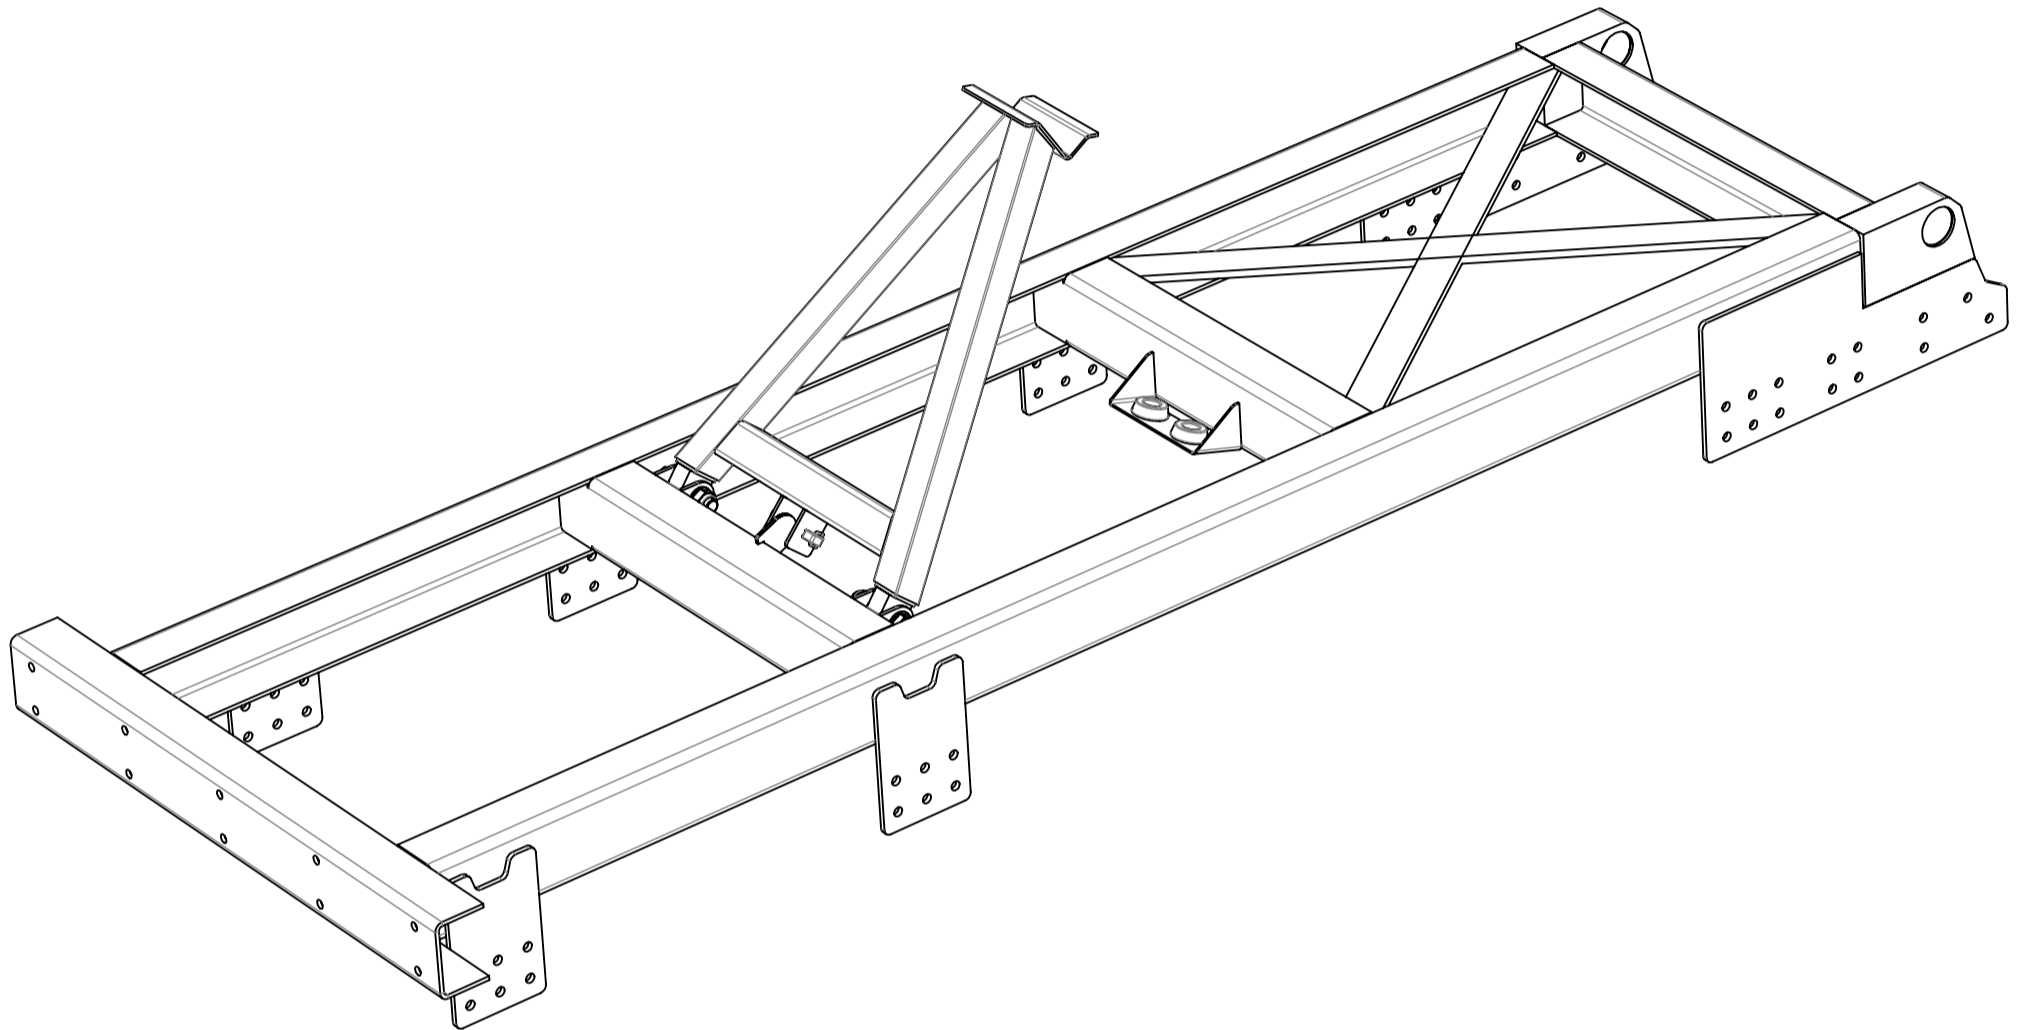 

 Note! The images are for reference only.  
Components marked with \* contact  
spare part branch.

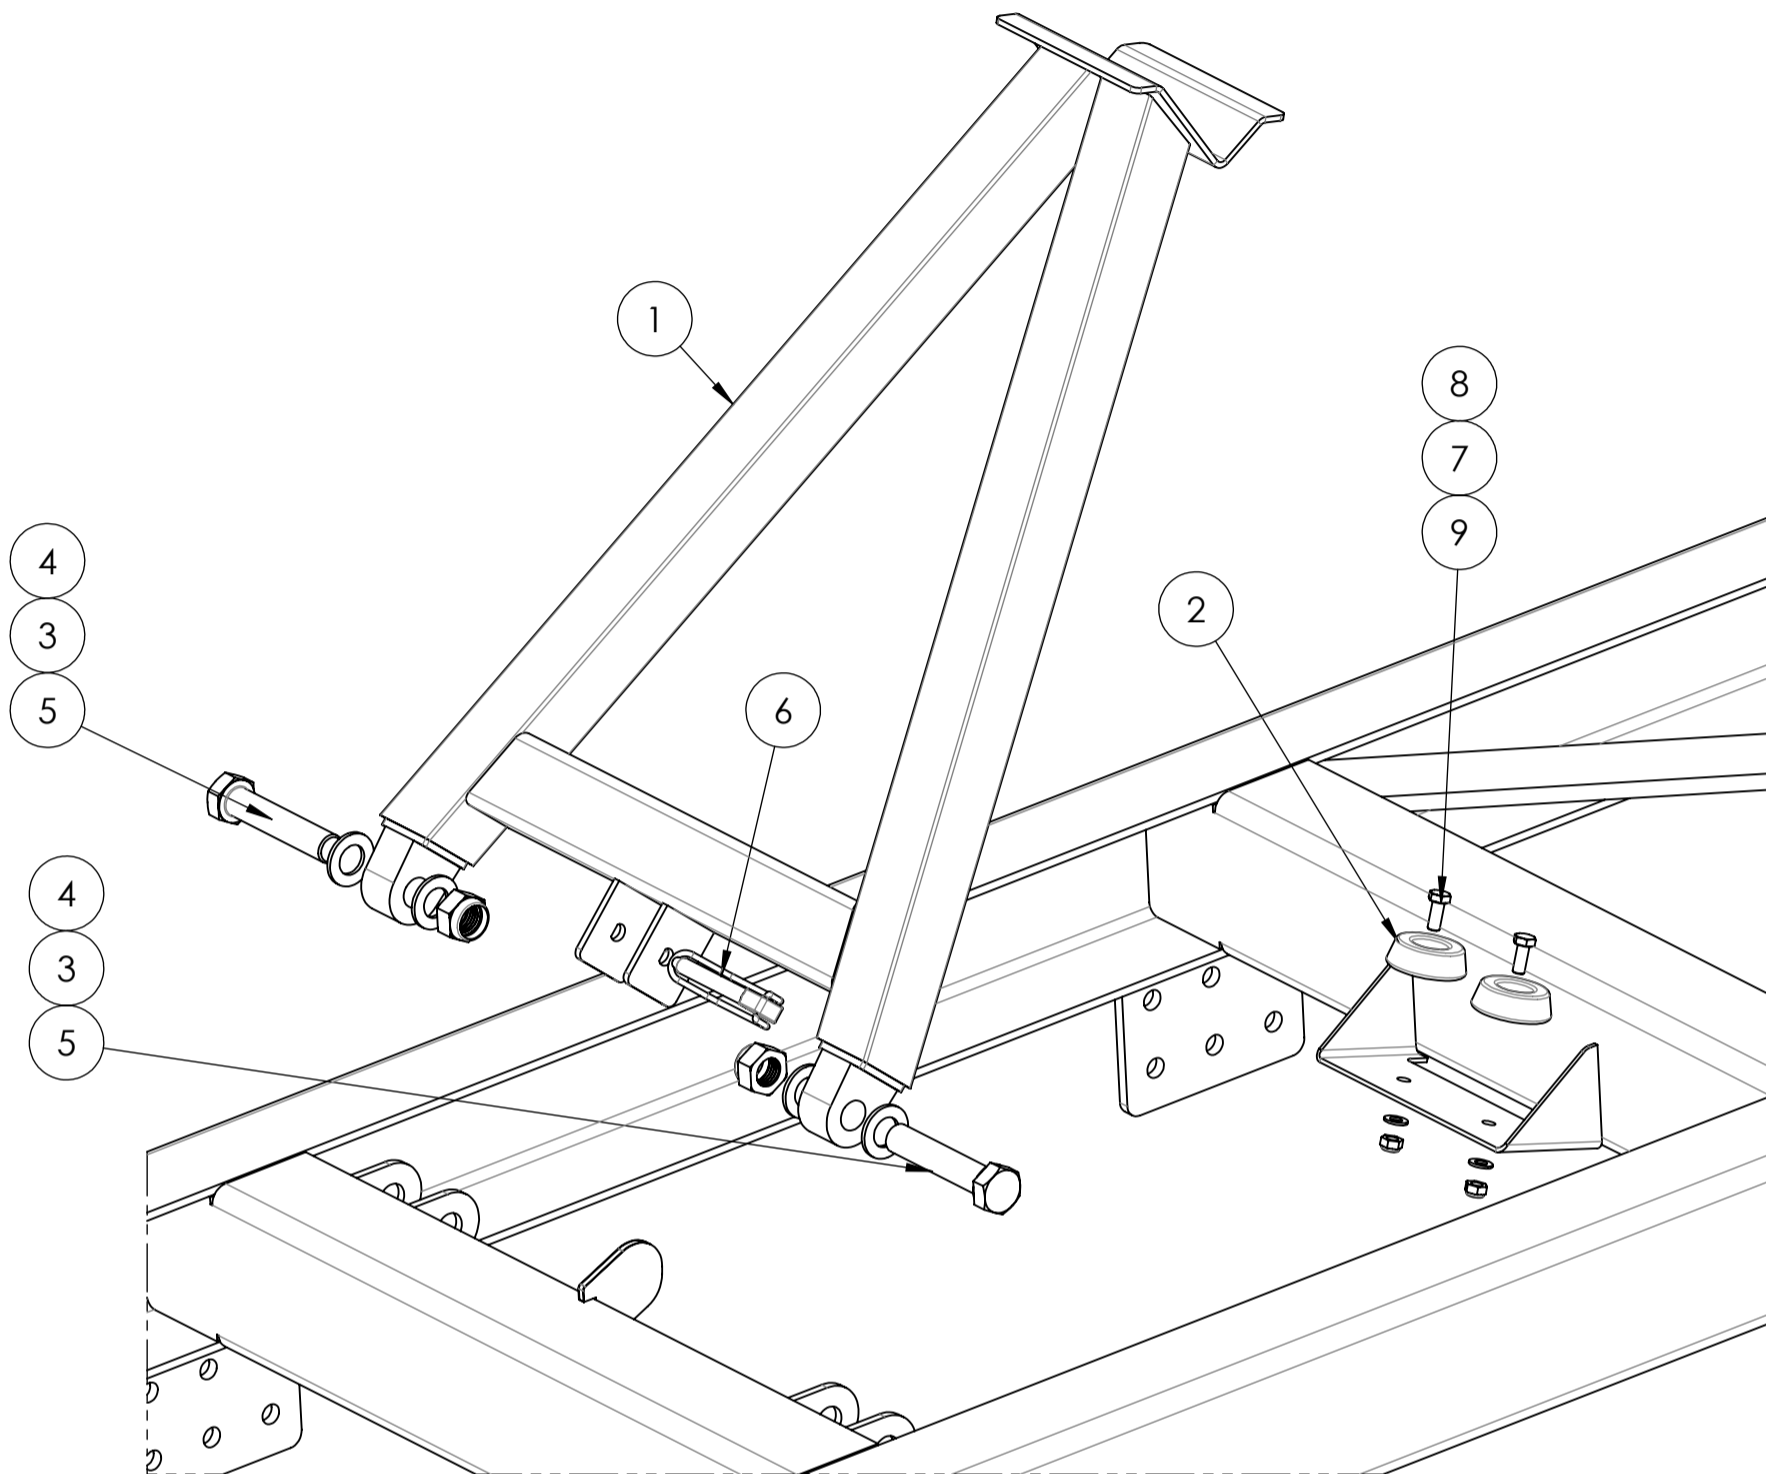

9	Skruv	Screw	1505263	
8	Låsmutter	Locking nut	1505255	
7	Bricka	Washer	1504899	
6	Låssprint	Locking pin	1507262	
5	Skruv	Screw	1516803	
4	Låsmutter	Locking nut	1508499	
3	Bricka	Washer	1508498	
2	Vibrationsdämpare	Bumper	1507924	
1	Skyddsstötta	Support leg	1516795	
ITEM NO.	Benämning	Title	Part no	YAP.Rev

Note! The images are for reference only. Components marked with \* contact spare part branch.